


# 1988-94 Toyota Bucket Seat Installation



## Step 1. Driver and Passenger Top/DT & PT:

The pieces of the seat cover are labeled inside. Use The "Seat Cover Piece Identification Chart" to identify the different pieces of the seat cover. Temporarily remove the headrests by gently lifting up and depress the push button release.

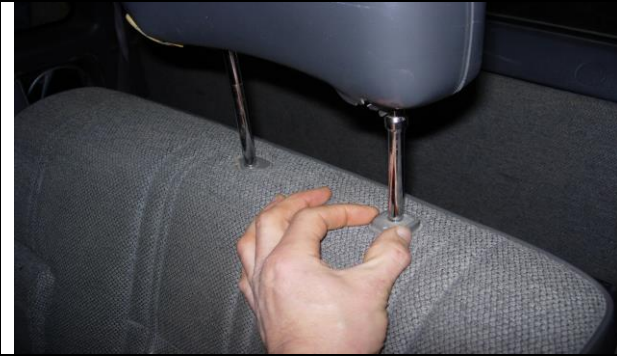

## Step 2. Driver and Passenger Top/DT&PT:

Slide the seat cover on with the extending hook (sticky) Velcro™ to the front. Tuck the fabric under the plastic for the headrests starting with the push button side. Line up the seams of the seat cover to the seams of your seat, they should closely match.



## Step 3. Driver and Passenger Top/DT&PT:

Tuck all of the extending hook Velcro™ into the seat and tip the backrest forward. Gently pull on the Velcro™ from behind the seat with one hand, using the other hand in a smoothing action from top to bottom.



## Step 4. Driver and Passenger Top/DT&PT:

Press the hook Velcro™ to the loop (fuzzy) Velcro™ sewn inside the back edge. Start on the inside edge of the seat working your way out. This may take more than one try.



## Step 5. Driver & Passenger Bottom/DB&PB:

Place the seat cover on with the extending hook Velcro™ to the front, and tuck the back edge of the seat cover in. Route the long hook Velcro's under the seat and temporarily connect them to the rear loop Velcro.



## Step 6. Driver Passenger Bottom/DB&PB

Work the fabric inside the seat cover out (from forefinger to thumb).



**Step 7. Driver Passenger Bottom/DB&PB**

Push the seat away from the plastic on the sides of the seat bottoms and slide the hook Velcro™ in as shown. Feel for them under the seat and route it to the back.



**Step 8. Driver Passenger Bottom/DB&PB:**

Connect the outside and inside edge hook Velcro™ as shown at an angle, carefully feeling for it under the seat and mate it to the loop Velcro™ on back.



**Step 9. Driver Passenger Bottom/DB&PB:**

Snap the two hooks under the back of each seat to one of the wires that support the seat foam and connect it to the rear loop Velcro™. This will keep the seat cover from shifting around. Trim the excess Velcro.



**Step 10. Headrests/H:**

Slide the cover on with the extending hook Velcro™ to the front, connect them to the loop Velcro™ in back.