

1992-1996 Ford 50-50 Top/Bench Bottom Installation



Step 1. Driver and Passenger Top/DT&PT:

Temporarily remove the headrests. Do this by lifting them up all the way. Next, push the fabric down exposing the "C" clips on the plastic. The notches on the headrest post are in back. Gently lift up and push on the back side of the exposed end of the "C" clip until it releases, continue holding the headrest up, release the other side. Don't try to remove the clips if possible.



Step 2. Driver and Passenger Top/DT&PT:

Loosen the Phillip's screws above and below the backrest release handles. Don't remove the screws, just allow the plastic to be loose and move a little. All the parts of the seat cover are labeled inside. Use the seat cover piece identification chart to ID parts.



Step 3. Driver and Passenger Top/DT&PT:

Slide the seat cover on with the long hook (sticky) fasteners to the front and the cut-out for the release handles to the outside.



Step 4. Driver and Passenger Top/DT&PT:

Tuck the fabric behind the plastic for the release lever and then tighten the screws.



Step 5. Driver and Passenger Top/DT&PT:

Tuck the fabric under the plastic for the headrests. Line up the side seams of the seat cover with the seams of your seat.



Step 6. Driver and Passenger Top/DT&PT:

Lastly, tuck the front extending hook fasteners into the seat, tip the backrest forward and mate the fasteners in back.



Step 7. Bottom/B:

Place the seat cover on with the long hook straps to the front. Slide the seatbelts through the provided openings. Tuck the back edge of the seat cover in.



Step 8. Bottom/B:

Fold the backrests forward one side at a time. Pull the seat cover over the back corner and line up the opening with the metal catch for the backrest release.



Step 9. Bottom: /B

Route the long hook straps under the front of the seat and mate them to the loop fastener sewn on the back edge. Manipulate the fabric from the seam inside the seat cover to remove wrinkles. Use one hand in a smoothing action from front to back while attaching the fasteners to tighten the seat cover and remove wrinkles.



Step 10. Bottom: /B

Notice the three 1" wide hook straps along each side. Route the front side hook strap over the top of the seat slide and mate it to the loop fastener in back at an angle (see Step 12).

Use one hand in a smoothing action along the side from front to back while attaching the side fasteners to remove wrinkles.



Step 11. Bottom: /B

Route the middle 1" wide hook strap over the seat slide and mate it perpendicular to the loop fastener (see Step 12).



Step 12. Bottom/B:

View from behind the driver's side. Route the farthest back 1" wide hook strap around the back corner of the seat, around the seat spring supporting the foam, and mate it to the loop fastener.



Step 13. Bottom/B:
Attach the silver hook attached to the rope in the hole in the metal bottom of the seat. It is about 2" straight under the seat from where the rope is sewn on. Pull on the rope to tighten, and tie it back to where the rope is sewn on.



Step 14. Bottom/B:
Fasten four of these no-slip straps under the back edge of the seat. The straps will help hold your seat cover in position.



Step 15. Bottom/B:
Clip one strap to the metal bar behind each seatbelt opening as shown.



Step 16. Bottom: /B
Mate the straps back to the loop fastener and trim all excess lengths of fasteners.



Step 17. Headrests/H:
Slide the headrest covers on with the extending hook fasteners to the front. Mate them to the loop fastener inside the back edge.



Congratulations you're done! They take a little effort to get them on but they will be well worth it.
In addition to looking like they are painted on, they will last several years, no matter how hard you use them.