


1995-2000 Yukon 60-40 w/ Non-opening Armrest Install

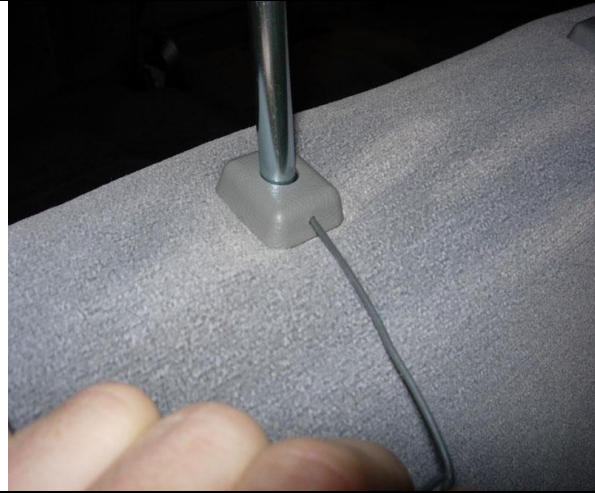

Step 1. Driver and Passenger Tops/DT & PT:

All the parts of the seat cover are labeled inside.

Use the "Seat Cover Identification Chart" to identify the parts of the seat cover.

Temporarily remove the headrests by lifting them up all the way. Hold gentle upward pressure with one hand between the metal posts and insert a heavy paper clip into the holes in the two plastic pieces as shown until the headrest releases. This step will need to be done twice for each post, or until the headrest releases.



Step 2. Driver and Passenger Tops/DT & PT:

Slide the seat cover on with the extending hook Velcro™ to the front.

Line up the seams to the seat cover to the seams of the seat, they should closely match. Also manipulate the material inside the seat covers along the seams for the best fit.



Step 3. Driver and Passenger Tops/DT & PT:

Tuck the fabric under the plastic for the headrests.

Then tip the backrest forward, slide the seat ahead, and tuck the hook Velcro™ into the seat.



Step 4. Driver and Passenger Tops/DT & PT:

Use one hand in a smoothing action from top to bottom in front while gently pulling on the hook Velcro™ from behind, pin the Velcro™ to the seat with the front hand (shown), then press the loop (fuzzy) Velcro™ sewn inside the back edge to it.



Step 5. Driver and Passenger Bottoms/DB & PB:

Loosen the screws from the plastic seat control panels and remove the recline and access levers using a Phillips screwdriver.

Driver seat only: Move the seat all the way forward and slide the seatbelts (where the two seat bottoms meet in the middle) out of their cloth restraint on the seat one at a time. Slide the seat covers on with the long hook Velcro™ to the front, feed the seatbelts through the provided restraint on the inside edge of the seat cover, and through the middle of the cover



Step 6. Driver and Passenger Bottoms/DB & PB:

Tuck the seat cover behind the seat control panel, pull back on the outside edge of the seat cover, line up the hole for the recline lever, and then press the Velcro™ to the carpet on the back edge of the seat shown on the left side of the photo.

Driver's side electric controls only:

Route the long outside edge hook Velcro™ at an angle to the back, avoiding any seat mechanisms, mating it to the carpet on the back edge of the seat.



Step 7. Driver and Passenger Bottoms/DB & PB:

View from behind the driver's seat. Pull the inside edge of the seat cover around to the back and press the hook Velcro™ onto the carpet on the back of the seat



Step 8. Driver and Passenger Bottoms/DB & PB:

Route the long hook Velcro™ under the front of the seat and press them to the carpet on the back edge of the seat. For vehicles with electric controls: route the long outside edge Velcro™ at an angle to the back edge and press it to the carpet on the back edge of the seat.



Step 9. Driver and Passenger Bottoms/DB & PB:
Tuck in the rear most part of the seat cover, pull back hard and press it to the carpet on the back edge of the seat.



Step 10. Headrests/H:
Slide the cover on with the extending hook Velcro™ to the front.



Step 11. Headrests/H:
Tuck them under the back edge and connect them to the loop Velcro™ sewn inside the back edge.



Step 12. Armrest/A:
Slide the armrest cover on with the extending hook Velcro™ to the front. Fold the armrest down and connect the Velcro™ behind the armrest.