

1999-2004 F-150 Bench Installation



Step 1. Top/T:

All the parts of the seat covers are labeled inside. Use the seat cover piece identification chart to ID parts. Carefully open the seat cover and slide it on with the extending hook (sticky) Velcro™ to the front.



Step 2. Top/T:

Feed the seat release lever through the provided openings on each side. Line up the seams of the seat cover to the seams of the seat, they should match closely.



Step 3. Top/T:

Tuck the extending hook Velcro™ into the seat and fold the seat forward.



Step 4. Top/T:

Use one hand in a smoothing action down the front of the seat while pulling on the Velcro™ from behind. Use the front hand to pin the Velcro™ to the seat, then press the back of the seat cover to it, connecting the Velcro™. Work from one side to the other.



Step 5. Bottom/B:

Feed the seat belts through the provided openings. Again, line up the seams of the seat cover to the seams of the seat. They should match closely.



Step 6. Bottom/B:

Pull the left and right side around to the back and press them onto the carpet on the seat.



Step 7. Bottom/B:

Route the side hook Velcro™ over the seat slide.



Step 8. Bottom/B:

Connect them at an angle to the seat carpet.



Step 9. Bottom/B:

Route the long Velcro™ under the front of the seat and press them onto the seat carpet as shown.



Step 10. Bottom/B:

Lastly, pull back on the rear most part of the cover and press it onto the carpet on the back edge.