


2005-2006 Tundra Bucket Seat Installation

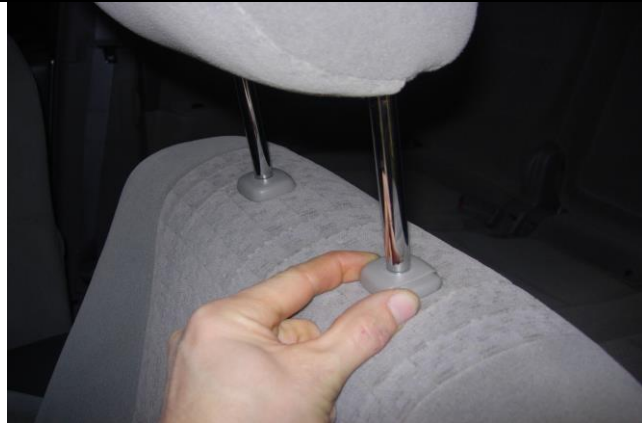

Step 1. Driver and Passenger Tops/DT&PT:
Temporarily remove the headrests by depressing the push button release and lifting up. All the parts of the seat cover are labeled inside the cover on the front right or bottom right corner. Use the Seat Cover Identification Chart to ID parts.



Step 2. Headrests/H:
Slide the headrest covers on with the extending hook (sticky) Velcro™ to the front. You will have to compress the headrest to get the cover on. The headrest will return to its original shape once pulled all the way down.



Step 3. Headrests/H:
Line up the seams of the seat cover to the seams of the headrest, they should match closely. Tuck the hook Velcro™ inside the back edge and connect them to the loop (fuzzy) Velcro™ sewn inside the back edge.



Step 4. Driver and Passenger Tops/DT&PT:
View from behind the driver's seat. Temporarily release the hard panel from the back of the seat. Do this by feeling under the seat for the two elastic straps. They are connected to the seat bottom with hog-rings. Remove the hog rings by grabbing them with a pliers and twisting. Or put a screwdriver thru the hole and twist the hog ring until it comes off.



Step 5. Driver and Passenger Bottoms/DB&PB:
Place the seat cover on with the long hook Velcro™ to the front. Line up the seams of the seat cover to the seams on your seat, they should closely match.



Step 6. Driver and Passenger Bottoms/DB&PB:
Tuck the back edge into the seat. Pull it back until the seams line up in front, but don't fasten it yet. Work the seams inside from the forefinger to the thumb.



Step 7. Driver and Passenger Bottoms/DB&PB:
View from under the front of the driver's seat. Route the long hook Velcro™ under the seat, over the electrical plugs and framework (above the forefinger).



Step 8. Driver and Passenger Bottoms/DB&PB: Pull tight and press the long hook Velcro™ to the carpet on the back of the seat where shown.



Step 9. Driver and Passenger Bottoms/DB&PB:
Route the long outside edge Velcro™ where shown below the recline lever at an angle.



Step 10. Driver and Passenger Bottoms/DB&PB:
Feel for the Velcro™ inside the plastic cowl and pull it through. Tuck the seat cover behind the plastic along the outside edge. Use your hand in a smoothing action from front to back while gently pulling on the Velcro™, pressing it to the seat carpet.



Step 11. Driver and Passenger Bottoms/DB&PB: Route the long inside edge Velcro™ (next to the center console) between the seat and the plastic cowling in front of the seatbelt. Connect it to the carpet on the back of the seat bottom, routing it above the seat slides.



Step 12. Driver and Passenger Bottoms/DB&PB: Lastly, pull the back edge of the seat cover back and press it to the carpet on the back edge of the seat.



Step 13. Driver and Passenger Tops/DT&PT: Carefully open the inside edge Velcro™ for the armrest and the bottom, then slide the seat cover on with the hook Velcro™ to the front. Pull it down into position, around the armrest. Tuck the fabric under the plastic for the headrests starting with the push button release. Manipulate the seams of the seat cover for the best fit.



Step 14. Driver and Passenger Tops/DT&PT: Recline the backrests, and working from the outside of the vehicle, connect the Velcro™ under the armrest. Use both hands in a smoothing action to gather the material under the armrest. The material should meet, showing no Velcro™ under the armrest.



Step 15. Driver and Passenger Tops/DT&PT:

As in earlier steps, line up the seams of the seat cover to the seams on the seat. Tuck the Velcro™ into the seat. Pull on the fabric not the Velcro™ from behind the seat while using your other hand in a smoothing action from top to bottom, tightening the seat cover.



Step 16. Driver and Passenger Tops/DT&PT:

Route the long hook Velcro™ under the seat to the metal bar supporting the seats foam 7-8" in from the back edge. This metal bar is the one that the hog rings were connected to. Route them over the bar, then back to the loop tab sewn inside the seat cover. Tighten the front of the seat cover by pulling the material down on each side of the Velcro™, hold it to the seat, pull the Velcro™ forward to pick up the slack, then pull it back and connect it to the loop Velcro™ as shown in the picture. Trim the excess.



Step 17. Driver and Passenger Tops/DT&PT:

Crimp the provided metal hooks to the elastic strap with a pliers. Hook them under the seat to the metal bar 7-8" in. Lastly, connect the plastic hooks (shown) to the metal bar under the seat, tighten the Velcro and press it together, trim the excess.



Step 18. Armrests/A:

Recline the backrests and slide the cover on with the extending hook Velcro™ to the front. Once it is pulled down into position tip the seat forward and connect the Velcro™ on the backside of the armrest.