

# 2005-2008 Tacoma Sport Bucket Installation



**Step 1. Driver and Passenger Bottom/DB&PB:**  
You will need to temporarily release the hard carpeted panel from the back of the seats. Tip the backrests ahead and slide the seats forward. Feel for the two elastic straps (shown) under the left and right side of the back edge. These models are fastened to the seat bottom about 6" in under the seat with a hog ring. Using pliers grab the hog ring and twist it to remove. All the parts of the seat cover are labeled inside. Use the seat cover piece identification chart to ID parts.



**Step 2. Driver and Passenger Bottom/DB&PB:**  
Place the seat cover on with the long hook (sticky) Velcro™ to the front. Use your fingers to manipulate the fabric inside the seat cover outward from forefinger to thumb. Pulling the seat cover back will help to position the front and remove wrinkles along the sides. Tuck in the back edge of the seat cover. Route the long hook Velcro™ under the front of the seat and connect them to the loop Velcro™ sewn on the back edge.



**Step 3. Driver and Passenger Bottom/DB&PB:**  
Tuck the fabric behind the plastic on the outside edge.



**Step 4. Driver and Passenger Bottom/DB&PB:**  
Slide 4-5" of the long outside edge hook Velcro™ where shown between the seat and the plastic.



**Step 5. Driver and Passenger Bottom/DB&PB:**  
Carefully feel under the seat for the Velcro™, it will be in a gap between the seat slide and the main frame of the seat. Route it at an angle and connect it to the loop Velcro™ sewn on the back edge. Route the inside edge Velcro™ the same way, between the plastic and the seat, through the gap above the seat slide, and then connect it to the loop Velcro™ on the back.



**Step 6. Driver and Passenger Bottom/DB&PB:**  
Clip the hooks of this hook Velcro™ under the back edge of the seat to the metal bar that the hog rings or plastic clips were fastened to. Press it to the loop Velcro™ on the back of the seat cover bottom. This will keep the seat cover from shifting around. Use two straps for each seat bottom.



**Step 7. Driver and Passenger Top/DT&PT:**  
Temporarily remove the headrests by depressing the push button release and gently lifting up in the middle.



**Step 8. Driver and Passenger Top/DT&PT:**  
Slide the seat covers on with the long hook (sticky) Velcro™ to the front.



**Step 9. Driver and Passenger Top/DT&PT:**  
Tuck the fabric under the plastic for the headrests. Form the top of the seat cover to the seat by manipulating the fabric and pulling down on the left and right sides. Put the backrest in a straight up position.



**Step 10. Driver and Passenger Top/DT&PT:**  
Tuck the long hook Velcro into the seat. Route them under the seat and over the bar that the elastic straps were fastened to. Pull the front edge of the seat cover down, pull the Velcro forward over the bar to tighten to the Velcro™, then bring it back and press it to the Loop Velcro™ sewn inside the front edge as shown. Re-tighten the seat cover up by pulling down on the front edge of the seat cover again from behind with one hand and use the other hand in a smoothing action down the front and sides from top to bottom taking up the slack, then re-connect the Velcro™.





**Step 11. Driver and Passenger Top/DT&PT:**  
Using pliers, clamp the provided metal hooks to the elastic straps with the hook up. Connect the hooks under the seat to the metal bar.



**Step 12. Driver and Passenger Top/DT&PT:**  
Pull the back of the seat cover down and press the hook Velcro™ to the carpet on the back edge of the backrest, starting on one side working to the other.



**Step 13. Headrests/H:**  
Slide the headrest covers with the extending hook Velcro™ to the front, connecting the Velcro™ in back as shown.



**Step 14. Lid/L:**  
Carefully detach the Velcro™ and place the lid cover on with the lid down. Open the lid and connect the Velcro™ on the underside as shown.