

2007-2014 Chevy/GMC Bucket Seat Installation



Step 1. Headrests/H:

Compress and slide the cover on with the headrests still on the seat, and with the extending hook Velcro™ to the front.

All the parts of the seat cover are labeled inside. Use the seat cover piece identification chart to ID parts.



Step 2. Driver and Passenger Tops/DT&PT:

Recline the backrests slightly and temporarily remove the headrests. Do this by wedging your left hand between the seat and the headrests holding gentle upward pressure and depress the push button release. Insert a heavy weight paper clip or small Allen wrench into the hole in other plastic piece with your right hand and lift up until the headrest releases.



Step 3. Headrests/H:

Connect the hook Velcro™ to the loop Velcro™ in back.



Step 4. Driver and Passenger Tops/DT&PT:

Slide the seat covers on with the long hook Velcro™ to the front. Notice how the seat compresses at its widest point.



Step 5. Driver and Passenger Tops/DT&PT:

The seat relaxes once the seat cover is pulled into position.



Step 6. Driver and Passenger Tops/DT&PT:

Tuck the fabric of the seat cover under the plastic for the headrests.



Step 7. Driver and Passenger Tops/DT&PT:
Work the material from the seam inside the cover from the main body of the seat cover (fingers) to the middle (thumb). Do this for the front and back of the seat cover top.



Step 8. Driver and Passenger Tops: /DT&PT
Tuck the hook Velcro™ into the seat and connect them to the loop Velcro™ sewn inside the back edge. Slide one hand down the front of the seat cover, pushing the hook Velcro™ to the back. Pull on fabric from behind the seat with one hand and use the other hand in a smoothing action from top to bottom.



Step 9. Driver and Passenger Bottoms/DB&PB:
Place the seat covers on with the long hook Velcro™ to the front. Electric control seat, lift seat up and move forward. Manual control seats, move seat forward.



Step 10. Driver and Passenger Bottoms/DB&PB:
Tuck the seat cover behind the plastic cowling.



Step 11. Driver and Passenger Bottoms/DB&PB:
Tuck the back edge of the seat cover into the seat. Pull it into position from behind the seat.



Step 12. Driver and Passenger Bottoms/DB&PB:
Tuck the seat cover in behind the plastic on the inside back edge.



Step 13. Driver and Passenger Bottoms/DB&PB:
 If you have electric seats be sure to lift the seat up as high as it will go. This will pull everything away from your seat and free up some space. Fold the front Velcro™ in half lengthwise with the sticky facing in, this will make them stiff as a ruler. Route them under the seat and connect them to the loop Velcro™ sewn on the back edge.



Step 14. Driver and Passenger Bottoms/DB&PB:
 Feed the long outside edge hook Velcro™ between the seat and the plastic. Carefully feel under the seat for the Velcro™ in a gap between the seat slide and the seat frame. The seat slides have grease on them so clean your hands after doing this part.



Step 15. Driver and Passenger Bottoms/DB&PB:
 Tuck the seat cover behind the plastic on the outside edge.



Step 16. Driver and Passenger Bottoms/DB&PB:
 Tuck the inside long hook Velcro™ down in between the seats. Feel for it under the seat, pull it tight, and mate it at roughly a 45 degree angle to the rear loop Velcro™. Mate the outside edge Velcro™ the same.



Step 17. Driver and Passenger Bottoms/DB&PB:
 Connect the plastic hooks under the back of the seat to the metal bar that supports the foam (about 2" in). Then, connect it to the rear loop Velcro™, trim the excess. This will keep the seat cover from moving.



Step 18. Lid/L:
 Place the cover on with the lid closed and line up the seams of the cover to the seams of the lid, they should closely match. Connect the Velcro™ under the lid.