## 2007-2013 Tundra Bucket Seat Installation



**Step 1. Driver & Passenger Top/DT&PT:** Temporarily remove the elastic straps from the underside of the seat.



**Step 3. Driver & Passenger Top/DT&PT:** Temporarily remove the headrests by gently lifting up while depressing the push button release as shown. Electric controlled seats: Lift seats up all the way and move forward.



**Step 2. Driver & Passenger Top/DT&PT:** The elastic straps are connected to the seat bottom by the white plastic hooks shown in the photo.



**Step 4. Driver & Passenger Bottoms/DB&PB:** All the parts of the seat cover are labeled inside. Use the seat cover piece identification chart to ID parts.

Place the seat cover on with the long hook (sticky) Velcro<sup>m</sup> to the front.

Driver with manual controls and lumbar only: open the outside edge Velcro<sup>™</sup> by the lumbar knob.




**Step 5. Driver & Passenger Bottoms/DB&PB:** For trucks with electric controls, lift seat up to the ceiling and slide the seats forward all the way. Tuck the fabric behind the plastic cowling in front.



**Step 6. Driver's Bottom with manual controls/DB:** Connect the Velcro<sup>™</sup> under the lumbar knob.



**Step 7. Driver & Passenger Bottoms/DB&PB:** Continue tucking the fabric behind the plastic cowling. Tuck the back edge of the seat cover into the seat, and pull back hard. Line up the seams of the seat cover should to the seams of your seat, they should closely match.

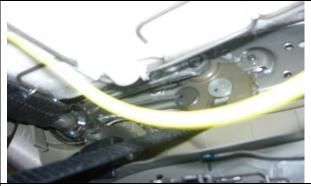

Step 9. Driver & Passenger Bottoms/DB&PB: Use caution while reaching under the seat to avoid being cut by sharp metal framework. Route the outside edge hook Velcro<sup>™</sup> through the gap where shown and connect it to the rear loop (fuzzy) Velcro<sup>™</sup> sewn to the back edge of the seat cover.



**Step 11. Driver & Passenger Bottoms/DB&PB:** View from behind the driver's underside, next to the center console. Route the inside edge hook Velcro<sup>™</sup> where shown through the gap, just above the metal frame, connecting it to the rear loop Velcro<sup>™</sup>. Route the long hook Velcro<sup>™</sup> under the front of the seat, to the loop Velcro<sup>™</sup> in back, being sure to route them avoiding any seat mechanisms under the seat.



**Step 8. Driver & Passenger Bottoms/DB&PB:** View from the outside edge of the driver seat looking down. Use your fingers to push the seat cushion away from the plastic cowling. Route the long outside edge hook Velcro<sup>™</sup> exactly where shown in front of the plastic nub shown inside the cowling.



**Step 10. Driver &Passenger Bottoms/DB&PB:** Route the long inside edge hook Velcro<sup>™</sup> where shown between the seat and the plastic cowling.



Step 12. Driver & Passenger Bottoms/DB&PB: Clip the (2) short hook Velcro<sup>™</sup> with the buckle sewn to them where shown under the back of the seat, and then connect it to the rear loop Velcro<sup>™</sup>. Trim the excess length of all the Velcro<sup>™</sup>. Some repositioning of the seat cover and Velcro<sup>™</sup> may be needed to provide the best fit. Remember the seams of your seat should closely line up with the seams of the seat cover.



**Step 13. Driver & Passenger Top/DT&PT:** Slide the seat cover on with the extending hook Velcro<sup>™</sup> to the front. Pull the cover down into position as shown, tucking the fabric behind the plastic on the sides. Remember the seams of the seat cover should closely line up with the seams of you seat, so adjust left or right as needed.



**Step 14. Driver & Passenger Top/DT&PT:** Tuck the fabric of the seat cover under the plastic for the headrests starting with the push button release side first. Move the backrests ahead into a straight up position.



**Step 15. Driver & Passenger Tops/DT&PT:** Tuck the Velcro<sup>™</sup> into the seat. Pull on the fabric not the Velcro<sup>™</sup> from behind the seat while using your other hand in a smoothing action from top to bottom, smoothing and tightening the seat cover.



**Step 16. Driver & Passenger Tops/DT&PT:** Route the long hook Velcro<sup>™</sup> under the seat to the metal bar supporting the seats foam 7-8" in from the back edge. Route them over the top of the bar, then back to the loop Velcro<sup>™</sup> sewn inside the seat cover. You may have to smooth and re-fasten more than once.



**Step 17. Driver & Passenger Bottoms/DB&PB:** Recline the backrests to their normal position and look at the front side of the seat. You may have to repeat Step 15 and re-tighten the Velcro<sup>™</sup> to remove slack on the front side. Re-connect the elastic straps from the carpeted back panel to the plastic hooks under the seat.



**Step 18. Driver & Passenger Bottoms/DB&PB:** Cloth seat: Pull down and press Velcro<sup>™</sup> to the carpet on the back of the seat. Leather seats: Hook plastic buckle over same metal bar that the plastic hooks are on in Step 17. Pull the Velcro<sup>™</sup> tight thru the buckle and press it together, trim the excess.



**Step 19. Headrests/H:** Slide the headrest covers on with the extending hook Velcro<sup>™</sup> to the front. Connect them to the loop Velcro<sup>™</sup> sewn inside the back edge.



**Step 20. Lid/L:** Connect the Velcro<sup>™</sup> under the lid as shown.



**Step 21. Lid/L:** Feed the Velcro<sup>™</sup> into the hole in the plastic where shown.



**Step 22. Lid/L:** Connect it to the front Velcro<sup>™</sup> where shown.



Congratulations, you're done. It does take a little effort to get them on, but once they're in place they will give you several years of use.



Seat covers that hold a gun, maps, or anything else you want to store, you are all set for the outdoors.