

## 2009-2010 F-150 Super Crew Rear 60-40 Installation



### Step 1. Driver & Passenger Bottoms/DB&PB:

All the parts of the seat cover are labeled inside. Use the seat cover Piece Identification Chart to ID parts. Using the seat release lever, lift the seat bottom partway up. Slide the seat cover on with the cut-out for the seat release to the bottom as shown.



### Step 2. Driver & Passenger Bottoms/DB&PB:

Pull the cover down on the left and right sides by kneeling over each side, gripping the top and bottom and pulling down. Line up the seams of the seat cover to the seams of the seat, they should closely match. Manipulate the seat cover material inside the cover to the middle from thumb to forefinger as shown.



### Step 3. Driver & Passenger Bottoms/DB&PB:

Fold the seat down and tuck in the extending hook (sticky) Velcro™ in, making sure to feed the female end of the center seatbelt through the provided opening.



### Step 4. Driver & Passenger Bottoms/DB&PB:

Use one hand in a smoothing action on the top of the seat from front to back while gently pulling on the Velcro™ from the bottom. Press the Velcro™ to the carpet on the seat as shown.



### Step 5. Driver & Passenger Bottoms/DB&PB:

Connect the inside edge hook Velcro™. The passenger side fastens slightly different than the driver's side.



### Step 6. Driver & Passenger Bottoms/DB&PB:

Press the hook Velcro™ sewn inside the seat cover into the carpet under the seat, starting on one side, moving to the other.



**Step 7. Driver & Passenger Top/DT&PT:**

Lift the seat bottoms up and temporarily remove the headrests by lifting them up all the way, pushing the two release buttons at the same time while gently lifting up.



**Step 8. Driver & Passenger Top/DT&PT:**

Instructions for releasing the top of the backrests from the back wall of the truck. This make the installation a lot easier. Lift the seat bottoms up, feel for the latch behind the top of the seat on the outside edge (location is shown on the back wall in Step 9). Use a gloved hand to move the silver catch up, it's pretty tough on the finger or thumb. The silver latch must be moved up (towards the pointer finger) to the open position as shown to release the backrest.



**Step 9. Driver & Passenger Top/DT&PT:**

Carefully disconnect the Velcro™ on the bottom edge. Tuck the fabric under the plastic for the headrests starting with the push button release first. Line up the seams of the seat cover to the seams of the seat on the left and right side, they should closely match. Tuck in the front edge of the seat cover and long hook Velcro™.



**Step 10. Driver & Passenger Top/DT&PT:**

Route the two long front hook Velcro™ around to the side and press them to the seat holding them tight. Tighten the seat cover by using one hand in a smoothing action down the front of the seat cover from top to bottom while pulling on the bottom edge of the seat cover with the other hand. Use the bottom hand to pin the material to the seat, then reconnect the Velcro™ tighter to remove any slack on the front side.



**Step 10. Driver & Passenger Top/DT&PT:**

Press the Velcro™ together on the outside edge.



**Step 10. Driver & Passenger Top/DT&PT:**

Make sure the wall bracket looks like the picture with the sliding rod down about an inch. Then, with the seat bottoms up, push the backrest onto the back wall until you hear a click from the latch. Pull forward on the seat top to make sure the latch is secured. If it's not connected, reposition the rod on the wall bracket and keep trying to click it in. It may take a few attempts.



**Step 12. Headrests/H:**

Slide the cover on with the extending hook Velcro™ to the front, mating them to the loop Velcro™ in back.

**Congratulations, you're done!!!**