

2011-2014 F-150 XLT & Lariat 40-20-40 Installation Instructions



Step 1. Driver & Passenger Top/DT&PT:

Temporarily remove the headrests by lifting them up all the way. Then, keeping gentle upward pressure, push the release buttons at the same time until the headrest comes out.



Step 2. Driver & Passenger Top/DT&PT:

All the parts of the seat cover are labeled inside. Use the seat cover Piece Identification Chart to ID parts. Carefully open the seat cover, making sure to open the inside edge vertical Velcro™ as shown.



Step 3. Driver & Passenger Top/DT&PT:

Slide the seat cover on with the extending hook (sticky) Velcro™ to the front, and then tuck the fabric under the plastic of the headrests starting with the push button side first as shown. Line up the seams of the seat cover to the seams of your seats along the sides and top, they should closely match. Mate the inside edge vertical Velcro™ (not shown).



Step 4. Driver & Passenger Top/DT&PT:

Tuck the hook Velcro™ into the seat, gently pulling them through to the back. Use one hand in a smoothing action from top to bottom, down the front of the seat cover while gently pulling on the Velcro™ from behind. Then tuck the hook Velcro™ under the back edge, mating them to the loop (fuzzy) Velcro™ sewn inside the back edge.



Step 5. Driver & Passenger Bottom/DB&PB:
Place the seat cover on with the long hook Velcro™ to the front. Put the seatbelt through the provided opening as shown.



Step 6. Driver & Passenger Bottom/DB&PB:
Turn the inside edge of the seat cover next to the console inside out to help keep the Velcro™ from sticking while you work the rest of the seat cover.



Step 7. Driver & Passenger Bottom/DB&PB:
Tuck the back edge of the seat cover into the seat, but don't fasten it down yet. Line up the seams of the seat cover to the seams of your seats around the sides and front, they should closely match.




Step 8. Driver & Passenger Bottom/DB&PB:
Then, work the material from the seam inside the seat cover outward (forefinger to thumb). Pulling the seat cover from behind the seat will help hold the cover to the front of the seat bottom.



Step 9. Driver & Passenger Bottom/DB&PB:
Pull the inside edge back, mating the hook Velcro™ to the carpet on the seat. Reach in next to the console and turn the seat cover right side out, mating the Velcro™ on the inside edge to the carpet on the seat.



Step 10. Driver & Passenger Bottom/DB&PB:
Fold the outside edge hook Velcro™ in half, sticking it to itself. Next, slide it down between the seat and the plastic cowl exactly where shown. Tuck the seat cover behind the plastic cowl.

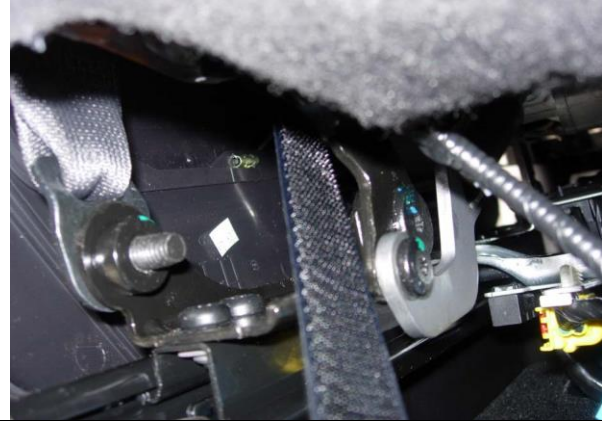

Step 11. Driver & Passenger Bottom/DB&PB:
View from under the back of the driver seat. Carefully feel for the Velcro™ under the seat, routing it where shown at an angle to the back.



Step 12. Driver & Passenger Bottom/DB&PB:
Mate the Velcro™ at an angle to the carpet on the back edge of the seat.



Step 13. Driver & Passenger Bottom/DB&PB:
Tuck the outside edge of the seat cover in and back around the corner, mating the hook Velcro™ to the carpet on the seat similar to Step 9, while sliding one hand down the side of the seat cover from front to back, tightening and removing wrinkles.



Step 14. Driver & Passenger Bottom/DB&PB:
Route the long hook Velcro™ under the front of the seat, over the top of the metal framework to the back edge of the seat.



Step 15. Driver & Passenger Bottom/DB&PB:
Stick them to the carpet on the back edge of the seat. Test the seat by moving it in all directions to make sure the seats action is not impeded. Adjust if needed.



Step 16. Driver & Passenger Bottom/DB&PB:
Again, use one hand in a smoothing action from front to back while pulling on the rear part of the seat cover. Stick it to the carpet on the back edge of the seat, starting on one side, moving to the other.



Step 17. Middle Bottom/MB:

Place the cover over the front, tucking it behind the latch, mating the Velcro™ to the carpet in front.




Step 18. Middle Bottom/MB:

Again, use one hand in a smoothing action from front to back, and mate the rear Velcro™. Slide one hand down the side, while mating the Velcro™.



Step 19. Console/C:

Remove the headrest as in Step 1. Tuck the fabric under the plastic for the headrests and seat belt.

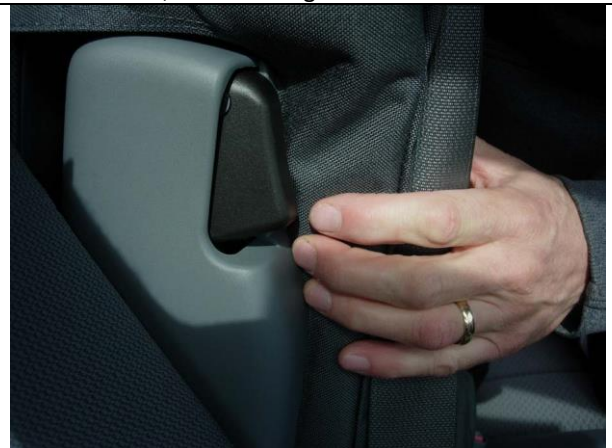

Step 20. Console/C:

Tuck in the left and right sides behind the plastic. Install middle headrest cover and set aside.



Step 21. Console/C:

Tuck in the front edge.



Step 22. Console/C:

Mate the Velcro™ on the right side net to the seat belt.



Step 23. Console/C:

Continue connecting the Velcro™ along the right side. Open the lid and line up the cover making sure no material gets folded into the inside of the cavity.



Step 24. Console/C:

Slide the back Velcro™ into and through the hinge. Note the areas where they will lay inside. Clean the surface of the plastic by scrubbing it hard with rubbing alcohol, and wiping it dry while it still wet. Peel off the adhesive plastic guard and press it hard onto the plastic. Re-clean if they aren't sticking.



Step 25. Lid/L:

Mate the Velcro™ under the lid, re-connecting and tightening the fasteners for the best fit.



Step 26. Headrest/H:

Slide the cover on with the extending hook Velcro™ to the front, compressing the headrest to help get it on.



Step 27. Headrest/H:

Manipulate the material inside the cover from forefinger to thumb along the sides and top.



Step 28. Headrest/H:

Tuck the hook Velcro™ under the back edge, mating the Velcro™ as shown.