## **2004-10 Ford Ranger Ext. Cab Rear Installation**



Step 1. Driver & Passenger Top/DT&PT:

All the parts of the seat cover are labeled inside. Use the Seat Cover Part ID Chart to ID parts. Slide the tops on with the abbreviations "DT & PT" to the front. Turn the covers inside out to keep the Velcro™ from sticking when you pull it down.



Step 2. Driver & Passenger Top/DT&PT:

Form the seat cover to the top of the seat. Line up the seams of the seat cover to the seams of your seat, they should match closely. Work the fabric inside the seat cover to the middle of the seat between thumb and forefinger.



Step 3. Driver & Passenger Top/DT&PT:

Fold the backrest forward and press the Velcro™ sewn on the seat cover to the carpet fuzz on the seat.



Step 4. Driver & Passenger Top/DT&PT:

Pull the front edge down.



Step 5. Driver & Passenger Top/DT&PT:

Press the Velcro™ to the fuzz under the front edge.



Step 6. Driver & Passenger Bottom/DB&PB:

Carefully open the seat cover Velcro<sup>™</sup>. Slide the covers on with the Velcro<sup>™</sup> opening to the back.



**Step 7. Driver & Passenger Bottom/DB&PB:** Tuck the material under the plastic cowling.



Step 8. Driver & Passenger Bottom/DB&PB:
Press the Velcro™ to the fuzz under the backrests.



Step 9. Driver & Passenger Bottom/DB&PB: Connect the Velcro™ seam.



Step 10. Driver & Passenger Bottom/DB&PB: Lastly, pull the cover tight and press the remaining Velcro™ to the fuzz.