

## 2005-2008 Tacoma Double Cab Rear 40/60 Installation



### Step 1. Driver and Passenger Top/DT&PT:

All the parts of the seat cover are labeled inside. Use the seat cover piece identification chart to ID parts. Temporarily remove the headrests by depressing the push button release and gently lifting up in the middle.



### Step 2. Driver Top/DT:

Tilt the backrest away from the cab and slide the seat covers on with the extending hook (sticky) Velcro™ to the front. Feed the release strap through the provided opening.



### Step 3. Driver Top/DT:

Tuck the fabric under the plastic for the headrests starting with the push button release. Pull the cover down into position on the left and right, lining up the seams of the seat cover to the seams of the seat, they should closely match.



### Step 4. Driver Top /DT:

Tuck the hook Velcro™ into the seat and fold the seat flat. Connect the hook Velcro™ to the loop (fuzzy) Velcro™ sewn inside the back edge. Use your hand in a smoothing action down the front of the seat while pulling on the Velcro™ to remove slack and tighten the seat cover.



### Step 5. Driver and Passenger Bottom/DB&PB:

Temporarily remove the seat release strap from its restraint on the back of the seat. Slide the cover on with the long hook Velcro™ to the front.



### Step 6. Driver and Passenger Bottom/DB&PB:

Pull the cover back and flip the back edge inside out so the hook Velcro™ doesn't connect yet. Line up the seams of the seat cover to the seams of the seat, they should match closely. 2005-08 Have loop Velcro™ sewn on the outside of the back edge.



**Step 7. Driver and Passenger Bottoms/DB&PB:**  
Route the side hook Velcro™ at an angle as shown and press it onto the carpet on the back edge of the seat. Route the long front Velcro™ under the seat and connect it to the carpet (or to the loop Velcro™ on 2005-08) on the back edge of the seat. Now, pull the back edge of the cover back and press the hook Velcro™ sewn inside to the carpet on the back of the seat bottom. Feed the release strap through the provided elastic.



**Step 8. Passenger Top/PT:**  
Carefully open the seat cover, slide it behind the center seatbelt with the extending hook Velcro™ to the front and wrap it around to the back of the seat. Tuck the seat cover under the plastic for the headrests and center seatbelt. Pull the left and right sides of the seat cover down into position and feed the release strap through the provided opening.



**Step 9. Passenger Top/PT:**  
Fold the backrest forward and connect the Velcro™ behind the center seatbelt.



**Step 10. Passenger Top/PT:**  
Gather the fabric to the center and mate the Velcro™ down the back working a few inches at a time. Tilt the backrest up and tuck the hook Velcro™ into the seat and connect them to the loop Velcro™ in back same as step 4.



**Step 11. Left and Right Headrests/H:**  
Slide the covers on with the extending hook Velcro™ to the front. Connect them to the loop Velcro™ in back as shown. Install the headrests back into the seat.



**Step 12. Middle Headrest/MH:**  
Slide the cover over the front of the headrest with the extending hook Velcro™ to the front. Connect the Velcro™ same as step 11.