

## 1981-1991 Suburban Bench



Step 1. Bottom: Temporarily remove this Phillips screw from both sides.



Step 2. Bottom: Place the seat cover on with the long hook (sticky) Velcro™ to the front and feed the seat belts through the provided openings.



Step 3. Bottom: Position the seat cover by lining up the seams of the seat cover to the seams of the seat. Pull on the back edge of the seat cover with one hand and use your other hand in a smoothing action from front to back, then route the front hook Velcro™ under the seat and connect them to the loop Velcro™ sewn on the back edge. Be sure to route the Velcro™ avoiding the seat slide wire.




Step 4. Bottom: Tuck the sides of the seat cover between the plastic and the seat on both sides as shown.





Step 5. Bottom: Route the long outside edge Velcro™ at an angle to the loop Velcro™ sewn on the back edge. Use a scratch all to poke thru the cover if needed to put the side screws back in.

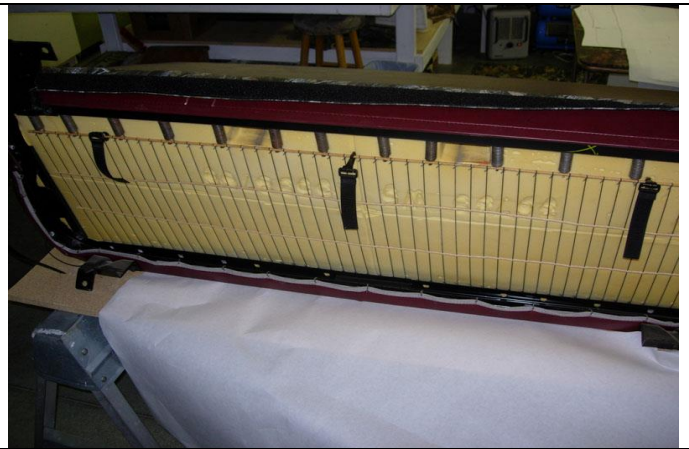


Step 6. Bottom: Clip the three plastic clips with Velcro™ sewn to them onto the metal bar under the back edge where shown.



Step 7. Bottom: Connect them to the loop Velcro™ sewn on the back edge. Trim excess.



**Step 8. Top/T:**  
Slide the seat cover on with the extending hook Velcro™ to the front as shown. Line up the seams of the seat cover with the seams of the seat, they should closely match.

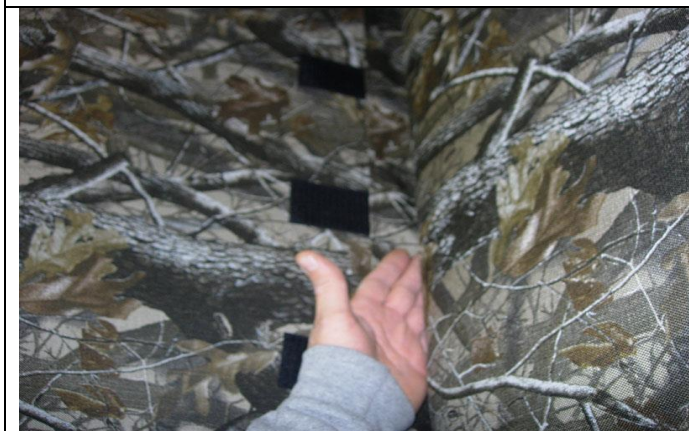

**Step 9. Top:**  
Tuck the Velcro™ into the seat and connect them to the loop Velcro™ sewn inside the back edge. Do this by gently pulling on the Velcro™ from behind the seat with one hand and use your other hand in a smoothing action in front from top to bottom.

**Congratulations, you're done!!**