

# 1981-91 Chevy/GMC Bench Installation



## Step 1. Bottom/B:

The seat cover bottom is marked inside. "B" stands for bottom and "T" is for the top. Place the seat cover on with the extending hook (sticky) Velcro™ to the front as shown. Removing the seat is not necessary, but can make the install much easier.



## Step 2. Bottom/B:

Feed the seatbelts through the provided openings and tuck in the rear part of the seat cover. Line up the seams of the seat cover to the seams of the seat, they should closely match. Manipulate the fabric inside the seat cover along the seams, outward. Meaning work the fabric inside the cover from the main seating area to the sides of the seat cover.




## Step 3. Bottom/B:

Temporarily remove this Phillips screw from the plastic piece on both sides of the seat bottom.



## Step 4. Bottom/B:

Pull back on the rear part of the seat cover, again lining up the seams, and then tuck the fabric behind the plastic.

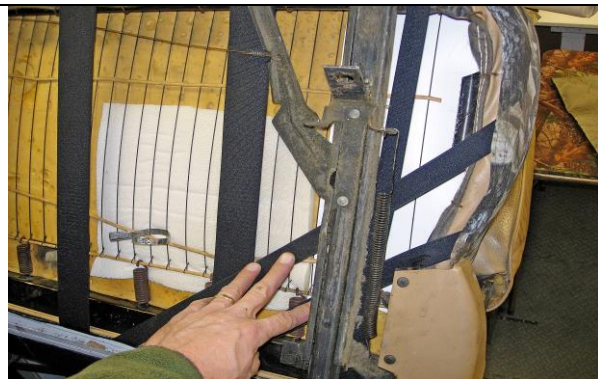

## Step 5. Bottom/B:

First, route the front (under the knees) 1"x22" hook Velcro™ straight back, under the seat slide (between the bolts of the seat slide in back), and connect it to the loop Velcro™ sewn on the back edge. Next route the side hook Velcro™ where shown at an angle, over the seat slide and connect them to the to the loop Velcro™ in back.



## Step 6. Bottom/B:

Route the remaining 2"x22" front hook Velcro™ under the front of the seat, over or under the seat slide wire, connecting them to the loop Velcro™ in back. Snap the plastic hook onto the metal bar as shown, and mate it to the rear loop Velcro™. Do this for the driver, middle, and passenger seating areas of the seat bottom. This prevents the seat cover from moving.



**Step 7. Top/T:**

Slide the seat cover on with the extending hook Velcro™ to the front. Again, line up the seams of the seat cover to the seams of the seat, they should closely match.



**Step 8. Top/T:**

Manipulate the fabric inside the seat cover one way or the other along the seams to provide a wrinkle free fit.



**Step 9. Top/T:**

Tuck the hook Velcro™ into the seat and fold the backrest forward. Use one hand in a smoothing action down the front of the seat from top to bottom while gently pulling on the Velcro™ from behind with the other hand. Pin it to the seat as shown with the front hand, tucking it under the back edge, connecting it to the loop Velcro™ sewn inside the back edge.



**Step 10. Visors, an optional accessory.**

Slide the visor covers on with the gap in the Velcro™ towards the metal bar, and connect the Velcro™. Note: removing the visors is not necessary.