

1987-1991 F-150-550 XLT Lariat Regular Cab Installation



Step 1.
Temporarily remove this Phillip's screw on each side. Seat removal isn't necessary, but does make the install easier.



Step 2.
Remove the Phillips screws from behind each corner, set aside the plastic pieces and screws for later installation.



Step 3.
Remove the main side bolts using an Allen wrench, or socket as shown.



Step 4. Bottom/B:
Place the seat cover on with the long hook (sticky) Velcro™ to the front.



Step 5. Bottom/B:
Work the fabric inside the seat cover as shown, outward, from fingers to thumb. Line up the seams of the seat cover to the seams of the seat, they should match closely.



Step 6. Bottom/B:
Pull one back corner over the metal catch on one side.



Step 7. Bottom/B:

Continue to work the fabric outward from finger to thumb along the front of the seat cover.



Step 8. Bottom/B:

Grab a hold of the seat cover and pull it over the other back corner. Try to not drag or force the material over the metal, you could damage the stitching.




Step 9. Bottom/B:

Continue to line up the seams of the seat cover to the seams of the seat. Next, line up the holes for the side bolts on each side.




Step 10. Bottom/B:

Once the holes are lined up, connect the side hook Velcro™ to the loop (fuzzy) Velcro™ sewn on the back edge.

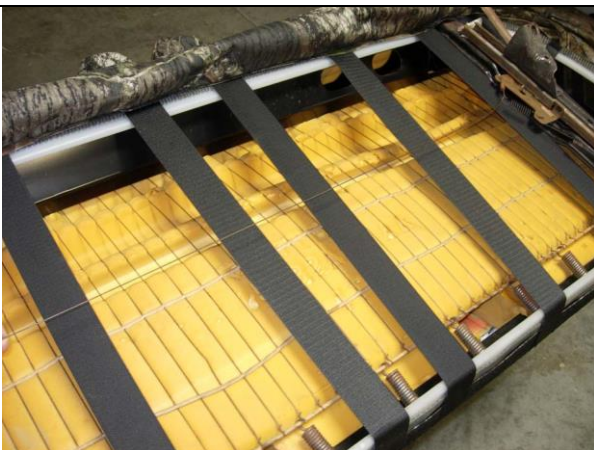

Step 11. Bottom/B:

Route the long Velcro™ under the seat avoiding the seat slide wire.

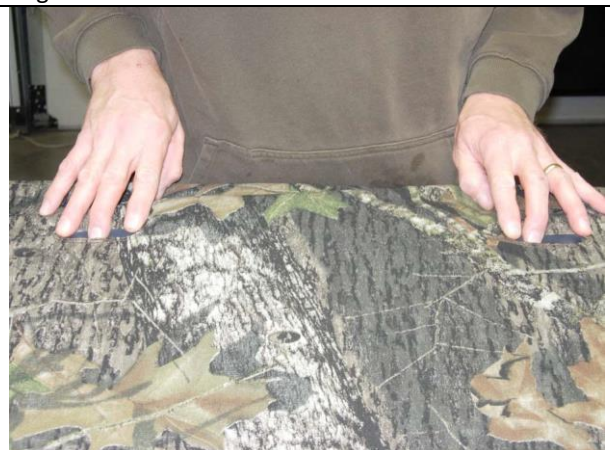

Step 12. Bottom/B:

Make sure the seat belt openings are lined up.



Step 13. Bottom/B:
If the plastic hook is not prepped and still has the retainer on it, clip it off with a side cutter.




Step 14. Bottom/B:
Force the clip under the metal plate.



Step 15. Bottom/B:
Push it up through the hole in the metal.



Step 16. Bottom/B:
Run the Velcro™ thru the opening on the snap, pull it tight and connect it to itself.

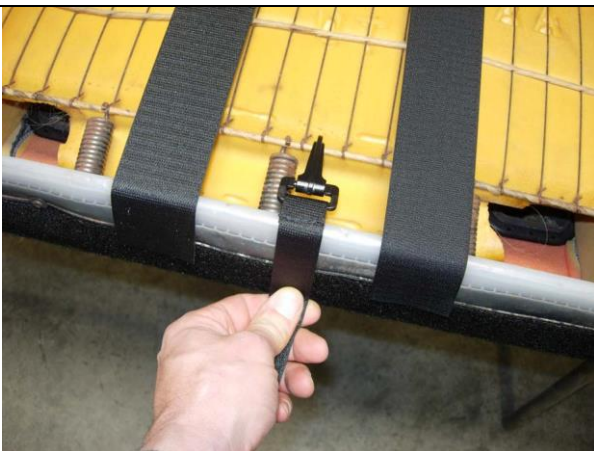

Step 17. Bottom/B:
Connect the three back edge plastic buckles to the metal bar where shown, then press them onto the loop Velcro™



Step 18. Top/T:
Bolt the seat top to the bottom and put the plastic covers back on the sides. Fold the armrest down, sliding the seat cover on with the extending hook Velcro™ to the front.



Step 19. Top/T:
Form the seat cover to the top of the seat.



Step 20. Top/T:
Pull each side down over the front corners.




Step 21. Top/T:
As in Step 5 & 7, line up the seat cover to the seams on the seat.



Step 22. Top/T:
Tuck the material behind the armrest.



Step 23. Top/T:
Push the armrest back into the cavity.

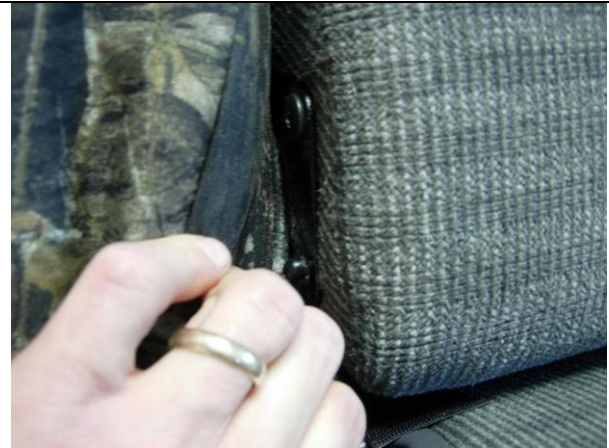

Step 24. Top/T:
Tuck each side of the seat cover in next to the metal hinge, and under the seat.



Step 25. Top/T:

Tuck the Velcro™ into the seat.



Step 26. Top/T:

Route the Velcro™ between the seat and the metal bar. Use one hand in a smoothing action down the front of the seat while pulling on the Velcro™ from behind the seat. This will tighten the cover.



Step 27. Armrest/A:

Slide the armrest cover on with the extending hook Velcro™ to the front.



Step 28. Armrest/A:

Tuck the Velcro™ under the armrest and fold the armrest down. Connect the Velcro™ at the back edge.