

1992-94 Chevy/GMC 40-60 Installation



Step 1. Seat Preparation:
Temporarily remove the headrest covers by holding gentle upward pressure while inserting a piece of wire into the hole in the plastic, keep holding upward pressure and release the other post. You'll need to do this twice for each post.



Step 2. Driver & Passenger Top/DT&PT:
All the part of the seat cover are labeled inside. Use the seat cover piece identification chart to ID parts. Slide the covers on with the extending hook Velcro™ to the front.




Step 3. Driver & Passenger Top/DT&PT:
Turn the backside Velcro™ inside out while pulling the cover down.



Step 4. Driver & Passenger Top/DT&PT:
Tuck the seat cover under the plastic for the headrests. Line up the seams of the seat cover to the seams of the seat, they should match closely.



Step 5. Driver & Passenger Top/DT&PT:
Tuck the Velcro™ into the seat and fold the seat forward. Connect the Velcro™ to the carpet on the back of the seat.

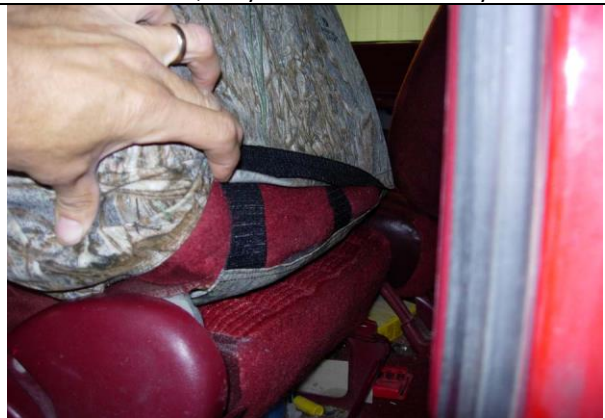

Step 6. Driver & Passenger Top/DT&PT:
Pull the back edge down and stick the Velcro™ to the carpet on the seat back starting on the inside of the seat and work our way out.



Step 7. Driver & Passenger Bottom/DB&PB:
Place the covers on with the extending hook Velcro™ to the front.



Step 8. Passenger Bottom/PB:
Feed the seat belts through the provided opening.



Step 9. Driver & Passenger Bottom/DB&PB:
Tuck the back edge into the seat.



Step 10. Driver & Passenger Bottom/DB&PB:
Tip the backrest forward and pull the outside back corner down.



Step 11. Driver & Passenger Bottom/DB&PB:
Pull the inside edge of the cover back and stick it to the carpet on the seat.



Step 12. Driver & Passenger Bottom/DB&PB:
Pull the inside edge of the cover back and stick the Velcro™ to the carpet on the seat.



Step 13. Driver & Passenger Bottom/DB&PB:
Route the long Velcro™ under the seat, avoiding the seat slide mechanism and wire as shown.



Step 14. Driver & Passenger Bottom/DB&PB:
Pull the Velcro™ tight and stick it to the carpet back edge of the seat.



Step 15. Driver & Passenger Bottom/DB&PB:
.Tuck the seat cover behind the plastic on the outside edge.



Step 16. Passenger Bottom/PB:
Slide the small side Velcro™ straight down through the hole you can see.



Step 17. Driver & Passenger Bottom/DB&PB:
Take both Velcro™ side pieces and stick them to the carpet on the backside of the seat, keeping them about the seat slide in back.



Step 18. Driver & Passenger Bottom/DB&PB:
As in Step 17, stick the inside edge Velcro™ to the carpet on the inside edge of the seat.



Step 19. Driver & Passenger Bottom/DB&PB:

Pull the remaining back part of the cover down and stick it to the carpet on the back of the seat.



Step 20. Driver & Passenger Bottom/DB&PB:

View from under the front of the seat. Snap the plastic buckle over the front of the seat frame, then fasten it back onto itself, trim the excess.



Step 21. Headrests/H:

Slide the cover on with the extending Velcro™ to the front.



Step 22. Headrests/H:

Fasten the center Velcro™ first.



Step 23. Headrests/H:

Then do the sides.



Step 24. Headrests/H:

Lastly, do the left and right side, reinstall the headrests back into the seat.