

1995-98 Chevrolet/GMC 60/40 no armrest



Step 1. Driver & Passenger Bottoms/DB&PB:

Temporarily remove the recline levers on the outside of the seat bottoms. Use the seat Identification Chart to ID the seat covers, pieces are labeled inside. Place the seat covers on with the long hook (sticky) Velcro™ to the front.

Driver Bottom: Feed the seat belts through the provided opening. Tuck the seat cover between the seats. Route the long front hook Velcro™ to the back and mate them to the carpet on the back edge of the seat. Route the left and right long hook Velcro™ around to the back edge carpet.



Step 2. Driver & Passenger Bottoms/DB&PB:

Pull the inside flap of the seat cover (pictured behind the center set of seat belts at the top in step 1) around the back between the seats. Next, pull the driver's side flap around to the back, lining up the hole for the recline lever, and then mate the hook Velcro™ sewn on the inside of the seat cover to the carpet behind the seat as shown. Pull the inside flap back and mate the inside Velcro™ to the carpet.



Step 3. Driver & Passenger Bottoms/DB&PB:

Tuck the rear part of the seat cover in and mate the hook Velcro™ sewn inside the back edge to the carpet on the back of the seat bottom. Install the recline lever. Move the seat back and forth and make sure the seat's movement is not impeded.




Step 4. Driver & Passenger Top/DT&PT:

Temporarily remove the headrests by lifting them all the way up. While holding gentle upward pressure, insert a heavy paper clip into the hole in the plastic as shown until it releases. Keep holding upward pressure and release the other side. Both sides of the headrests need to be released twice. Also, temporarily remove the access levers on the outside of both backrests.



Step 5. Driver & Passenger Top/DT&PT: Slide the seat covers on with the long hook (fuzzy) Velcro™ to the front.

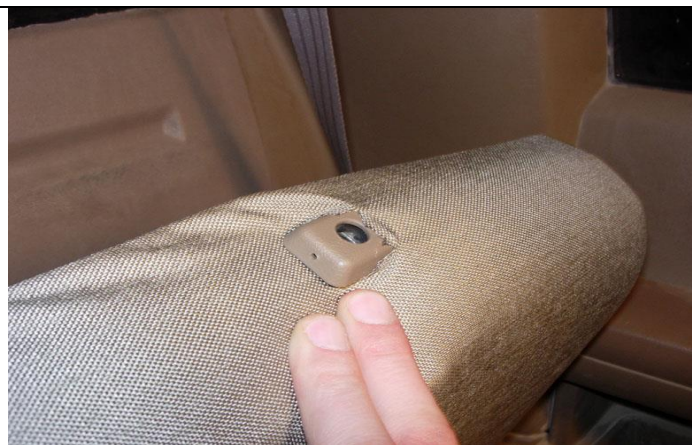

Step 6. Driver & Passenger Top/DT&PT: Tuck the seat covers under the plastic for the headrests. Next, tuck the long hook Velcro™ into the seat and mate them to the loop Velcro™ sewn inside the back edge.



Step 7. Headrests/H:
Slide the covers on with the long hook straps to the front. Mate them to the loop Velcro™ sewn inside the back edge.



Congratulations, you are done!
Your properly installed seat covers should fit tight, stay in place, and give you several years of use.