


1995-2000 Chevy/GMC Regular Cab Bench Installation



Step 1.

Temporarily remove the headrests by lifting them up all the way, insert a heavy paper clip or coat hanger wire into the hole in the plastic while holding gentle upward pressure until you feel it release, keep holding gentle upward pressure, and release the other side of the headrest. You'll need to release each post two times. They can easily slip back in, so keep holding upward pressure through the whole process.

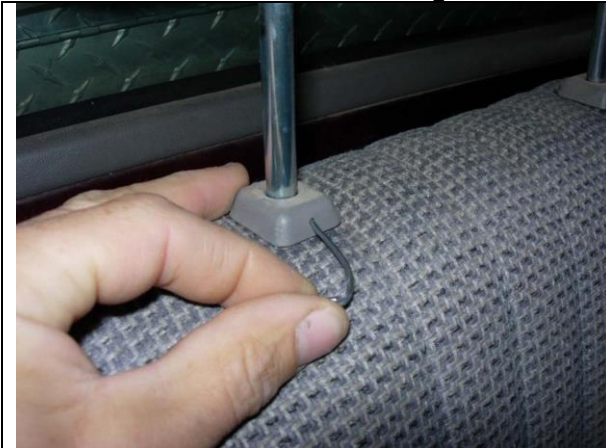

Step 2. Headrests/H:

All the parts of the seat cover are abbreviated inside the seat cover on the front right side. Use the seat cover piece identification chart to ID parts. Slide the headrest cover on with the extending hook (sticky) Velcro™ to the front, center it by aligning the cutout for the headrest posts.



Step 3.

Smooth the cover down each side and press the Velcro™ together on the back edge. Reposition and adjust for best fit.



Step 4. Bottom/B:

Place the seat cover bottom on with the extending hook Velcro™ to the front as shown.




Step 5. Bottom/B:

Feed the seat belts through the provided opening.



Step 6. Bottom/B:

Manipulate the seat cover material inside the cover from forefinger top thumb around the sides and front of the seat bottom. Line up the seams of the seat cover to the seams of your seat, they should closely match.

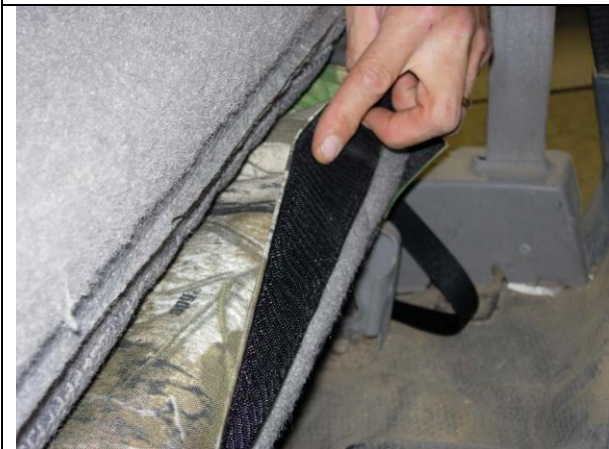

Step 7. Bottom/B:

Tuck the back edge of the seat cover through to the back, but don't connect it to the carpet yet.



Step 8. Bottom/B:

Pull the left and right side of the seat covers around the backside and press the Velcro™ onto the carpet on the seat. Wrap it around the corner and give it all you got for tension along the bottom, connecting it at an upward angle. This removes wrinkles along the bottom outside edge and makes room for the rest of the Velcro™.



Step 9. Bottom/B:
Route this side Velcro™ around the corner to the back.



Step 10. Bottom/B:
Make sure the Velcro™ is not in the way of the seat slide in back by sawing Velcro™ in above it, then press the Velcro™ onto the carpet on the back edge of the seat.



Step 11. Bottom/B:
Route the long front Velcro™ where shown between the seat and metal frame. Run them straight back. This will help avoid interference with the two seat slide tension springs on the left and right of the back edge, under the seat.



Step 12. Bottom/B:
Pull back on the Velcro™ and press them onto the carpet on the seat.



Step 13. Bottom/B:
Lastly, pull back and press the Velcro™ onto the carpet.



Step 14. Bottom/B:
Connect the plastic buckle under each front corner of the seat to the metal frame, then press the Velcro™ together, trim the excess.



Step 15. Top/T:
Slide the Top on with the extending hook Velcro™ to the front.



Step 16. Top/T:
.Tuck the material under the plastic for the headrests.



Step 17. Top/T:
Turn the backside Velcro™ inside out to help with sliding it down all the way.



Step 18. Top/T:
As in Step 6, line up the seams of the seat cover to the seams of your seat, they should closely match. Work the material inside cover from forefinger to thumb.



Step 19. Top/T:

Tuck the Velcro™ into the seat and fold the backrest forward.



Step 20. Top/T:

Pull the Velcro™ back while using a smoothing action down the front of the seat cover from top to bottom, then press the Velcro to the carpet on the back of the seat.



Step 21. Top/T:

.Pull the back edge down and press the Velcro onto the carpet on the back of the seat.



Step 22. Top/T:

Start on one side, and move to the other. The cover should wrap under the back edge as shown.