

1995-2000 Toyota Tacoma 60/40 Split Bench Installation



Step 1. Driver Top/DT:

Temporarily remove the headrests by depressing the push button release and gently lifting up. Open the seat cover up and slide the seat cover over the small piece of the seat below the armrest.



Step 2. Driver Top:

The parts of the seat cover are labeled inside. Use the "Seat Cover Piece Identification Chart" to ID pieces. Slide the seat cover on tucking it behind the armrest.



Step 3. Driver Top:

Tuck the seat cover under the plastic for the headrests. Slide it over the push button release side of the plastic first to avoid damaging it.




Step 4. Driver Top:

Tuck the hook Velcro™ into the seat and mate them to the loop strip sewn inside the back edge. Do this by gently pulling on the hook Velcro™ from behind the seat with one hand and smoothing the front of the seat cover from top to bottom with the other hand.



Step 5. Passenger Top/PT: Temporarily remove the headrest. Slide the seat cover on with the long hook Velcro™ to the front. Tuck the seat cover under the plastic for the headrests. Tuck the Velcro™ into the seat and connect them to the loop Velcro™ sewn inside the back edge using the same technique in step 4.

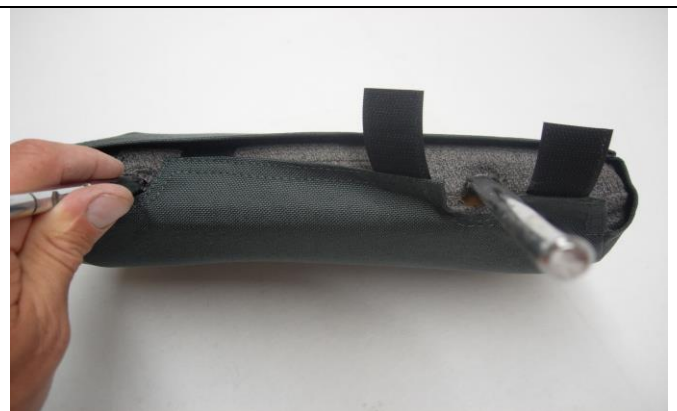

Step 6. Headrests/H:

Slide the headrest covers on with the long hook Velcro™ to the front. Connect them to the loop Velcro™ sewn inside the back edge.



Step 7. Armrest/A:

Slide the armrest cover on with the long hook Velcro™ to the front.



Step 8. Armrest:

Fold the armrest down, tuck the Velcro™ in and connect them to the loop Velcro™ sewn inside the back edge.



Step 9. Drivers Bottom/DB:

Place the seat cover on with the hook Velcro™ to the front.



Step 10. Drivers Bottom:

Fit the inside back piece of the seat cover under the armrest.



Step 11. Drivers Bottom:

Route the long hook Velcro™ under the seat and connect them to the loop Velcro™ sewn inside the back edge.



Step 12. Drivers Bottom:

Tuck the inside edge hook Velcro™ between the seats and mate it to the loop Velcro™ as shown.



Step 13. Drivers Bottom:

Route the long outside edge hook Velcro™ exactly where shown above the seat slide. Fasten it to the rear loop Velcro™ at an angle.



Step 14. Drivers Bottom:

Fasten the plastic no slip hook under the back edge of the seat to the heavy wire running left to right in back. This will keep your seat cover from sliding forward.



Step 15. Passenger Bottom/PB:

Place the seat cover on with the long hook Velcro™ to the front. Tuck the seat cover behind the plastic cowling in front.



Step 16. Passenger Bottom:

Slide the outside edge long hook Velcro™ down behind the plastic routing it between the seat slide and the seat at an angle and Velcro™ it to the rear loop Velcro™.



Step 17. Passenger Bottom:

Slide the inside edge long hook Velcro™ behind the plastic where shown, over the seat slide and mate it to the rear loop Velcro™. Fasten a no slip buckle under the back edge of the seat as in step 14.



Congratulations! It takes a little work to get the seat covers on, but its well worth it. They will take any abuse you can dish out. This customer wanted a can holder in the notch of the driver's seat bottom, no problem.