


## 1995-2000 Tahoe 60-40 w/ Opening Console Installation



**Step 1. Driver and Passenger Tops/DT & PT:**  
All the parts of the seat cover are labeled inside.  
Use the "Seat Cover Part ID Chart" to identify the parts of the seat cover.  
Temporarily remove the headrests by lifting them up all the way. Hold gentle upward pressure with one hand between the metal posts and insert a heavy paper clip into the holes in the two plastic pieces as shown until the headrest releases. This step will need to be done twice for each post, or until the headrest releases.

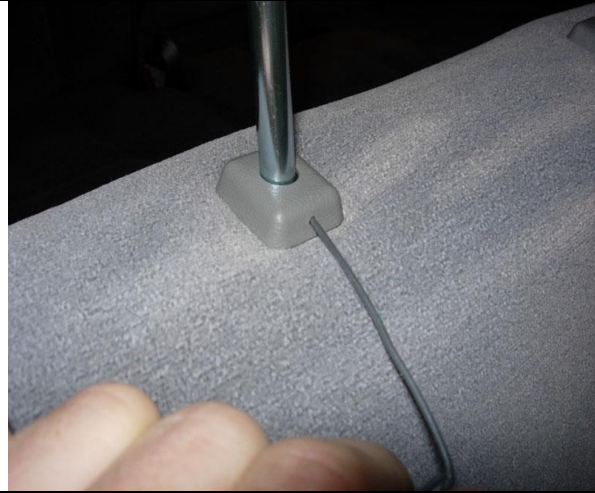

**Step 2. Driver and Passenger Tops/DT & PT:**  
Slide the seat cover on with the extending hook Velcro™ to the front.  
Line up the seams to the seat cover to the seams of the seat, they should closely match. Manipulate the material inside the seat covers along the seams for the best fit.



**Step 3. Driver and Passenger Tops/DT & PT:**  
Tuck the fabric under the plastic for the headrests. Then tip the backrest forward, slide the seat ahead, and tuck the hook Velcro™ into the seat.



**Step 4. Driver and Passenger Tops/DT & PT:**  
Use one hand in a smoothing action from top to bottom in front while gently pulling on the hook Velcro™ from behind, pin it to the seat with the front hand (shown), and then mate it to the loop (fuzzy) Velcro™ sewn inside the back edge.



**Step 5. Driver and Passenger Bottoms/DB & PB:**

Loosen the screws on the plastic seat control panels and remove the recline levers using a Phillips screwdriver.

**Driver seat only:** Move the seat all the way forward and slide the seatbelts (where the two seat bottoms meet in the middle) out of their cloth restraint on the seat one at a time. Slide the seat covers on with the long hook fasteners to the front, feed the seatbelts through the provided restraint on the inside edge of the seat cover, and through the middle of the cover



**Step 6. Driver and Passenger Bottoms/DB & PB:**

Tuck the material behind the seat control panel and tighten the screws, pull back on the outside edge of the seat cover, line up the hole for the recline lever, and then press the Velcro™ sewn inside to the carpet on the back edge of the seat, shown on the left side of the photo.

**Driver's side electric controls only:**

Route the long outside edge hook Velcro™ at an angle to the back, avoiding any seat mechanisms, pressing it to the carpet on the back edge of the seat.



**Step 7. Driver and Passenger Bottoms/DB & PB:**

View from behind the driver's seat. Pull the inside edge of the seat cover around to the back and press the hook Velcro™ to the carpet on the back of the seat



**Step 8. Driver and Passenger Bottoms/DB & PB:**

Route the long hook Velcro™ under the front of the seat and connect them to the carpet on the back edge of the seat. For vehicles with electric controls: route the long outside edge Velcro™ at an angle to the back edge and connect it to the carpet on the back edge of the seat.



**Step 9. Driver and Passenger Bottoms/DB & PB:**  
Tuck in the rear most part of the seat cover, pull it back hard and press the Velcro™ to the carpet on the back edge of the seat.



**Step 10. Lid/L:**  
Place the lid cover on with the console folded down and with the letter "L" marked inside to the back. Connect the Velcro™ under the lid as shown. First connect the front to back Velcro™, then the sides. Re-connect and re-tighten the cover until its snug fitting.



**Step 11. Console/C:**  
With the console in the up position place the cover on and with one hand holding it in position and then fold the console down. Line up the seams of the cover to the seams of the console. Slide the two rear Velcro™ into the left and right side of the hinge using a sawing motion while moving the lid. Note the areas where the Velcro™ will lay inside the console. Clean these areas with rubbing alcohol by scrubbing hard on the plastic, wiping it dry while it's still wet. Then, starting with the front two, remove the backing from the adhesive hook Velcro™ keeping the adhesive hook connected to the loop Velcro™, push them hard into the plastic. Then do the rear Velcro™, then lastly, the side Velcro™.



**Step 12. Headrests/H:**  
Slide the cover on with the extending hook Velcro™ to the front, tucking them under the back edge and connecting them to the loop Velcro™ sewn inside the back edge.