

1997-98 F-150 Bucket Installation



Step 1. Driver and Passenger Tops/DT&PT:

The parts of the seat covers are labeled inside. Use the "Seat Cover Piece Identification Chart" to identify the parts. Slide the seat cover on with the long hook Velcro™ (sticky) to the front and the cut-out for the armrest to the inside.



Step 2. Driver and Passenger Tops/DT&PT:

Work the access lever through the provided opening behind the seat. Line up the seams of the seat cover to the seams of your seat, they should closely match.




Step 3. Driver and Passenger Tops/DT&PT:

Connect the Velcro™ under the armrest starting under the armrest and work your way down as shown.



Step 4. Driver and Passenger Tops/DT&PT:

Tuck the hook Velcro™ into the seat and connect them to the loop Velcro™ sewn in back. Do this by using one hand in a smoothing action down the front of the seat from top to bottom while gently pulling on the front hook Velcro™, and then tuck it under the back edge and pressing them together.

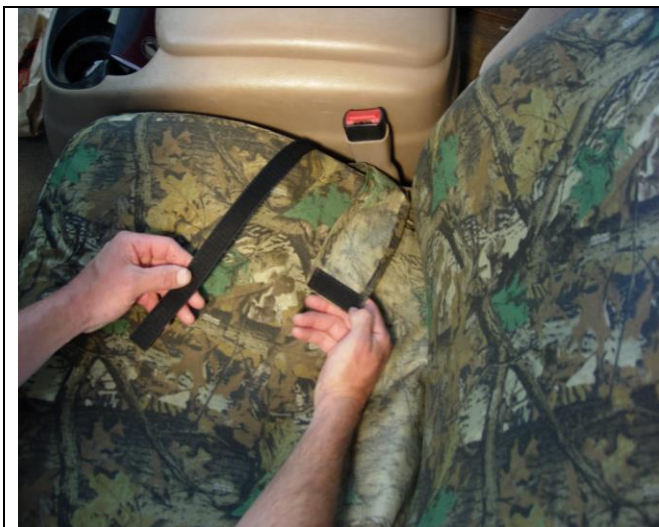


Step 5. Driver and Passenger Bottoms/DB&PB:
Place the seat covers on with the long hook Velcro™ to the front and the long flap of material (shown in right hand) to the inside.



Step 6. Driver and Passenger Bottoms/DB&PB:
Tuck the material of the seat cover behind the plastic cowling in front. Route the long hook Velcro™ under the seat and press them to the carpet on the back edge of the seat.



Step 7. Driver and Passenger Bottoms/DB&PB:
Slide the long outside edge hook Velcro™ between the seat and the plastic. Route the Velcro™ between the recline lever and the lumbar knob.

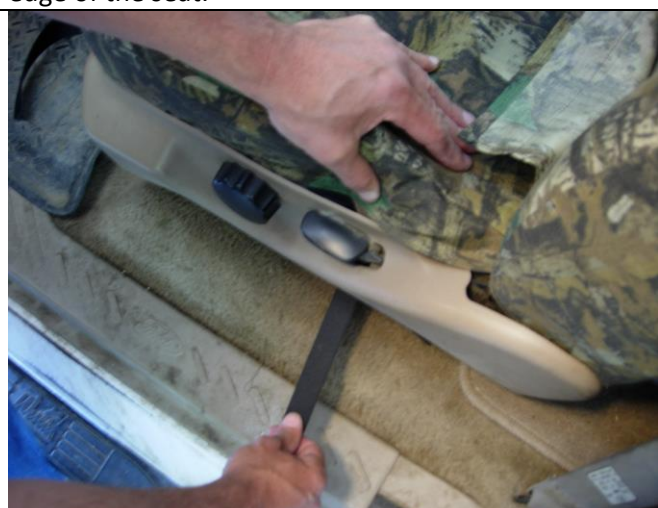

Step 8. Driver and Passenger Bottoms/DB&PB:
Pull the Velcro™ through to the bottom of the plastic and tuck the fabric behind the plastic cowling.



Step 9. Driver and Passenger Bottoms/DB&PB:
Route the outside edge hook Velcro™ between the seat slide and the seat as shown and press it to the carpet on the back edge of the seat.




Step 10. Driver and Passenger Bottoms/DB&PB:
Pull the inside of the edge of the seat around to the back of the seat and mate it to the carpet on the back edge of the seat. The flap is on the right side of the photo. Route the long inside hook Velcro™ around the back inside corner of the seat, mating it to the carpet.




Step 13. Driver and Passenger Armrests/DA&PA:
Slide the cover on with the cut out towards the seat.



Step 14. Driver and Passenger Armrests/DA&PA:
Work the armrest cover on all the way using both hands from top to bottom.

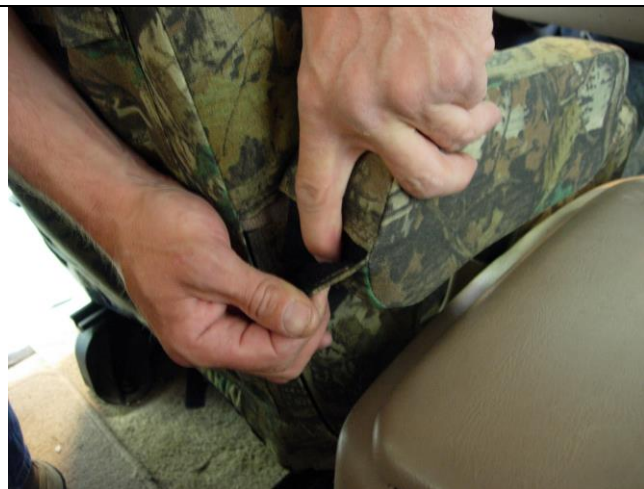

Step 15. Driver and Passenger Armrests/DA&PA:
Connect the Velcro™ at the back of the armrest covers as shown.

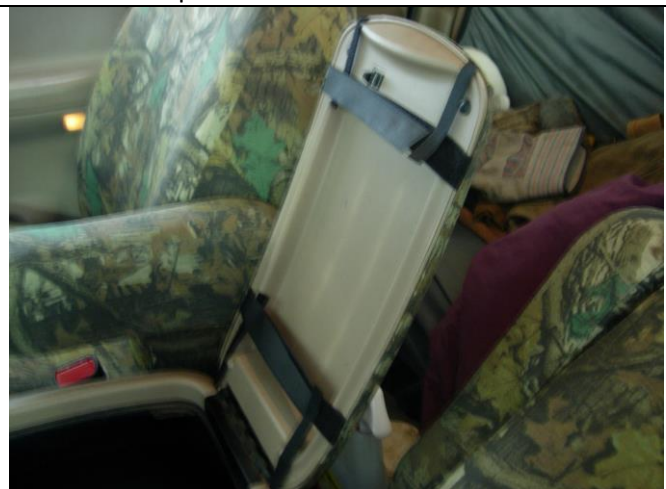

Step 16. Lid/L: Mate the fasteners under the lid as shown. Note: The lid cover was modified and looks different than the picture. The hook Velcro™ in front extend and connect to the rear Velcro™.