

2000-02 Chevy Avalanche Rear 60/40 Split Bench Install



Step 1. Driver and Passenger Tops/DT&PT:
Temporarily remove the headrests. Do this by lifting them up all the way and apply gentle upward pressure while inserting a small wire into the hole in the plastic until it releases. Keep holding upward pressure and insert the wire into the other piece of plastic and pull the headrest out.



Step 2. Driver and Passenger Tops/DT&PT:
Temporarily remove the rubber bumpers on the back of both seats using a Phillips screwdriver. All the parts of the seat cover are labeled inside. Use the Seat Cover Part Identification Chart to ID parts.



Step 3. Driver's Top/DT:
Open the seat cover and slide it over the inside top of the seat, and then tuck the fabric behind the armrest.



Step 4. Driver's Top/DT:
Tuck the fabric of the seat cover under the plastic for the headrests.



Step 5. Driver's Top/DT:
Slide the fabric of the seat cover behind the metal hinge of the armrest using a sawing motion. Line up the seams of the seat cover with all the seams of your seat, they should closely match.




Step 6. Driver's Top/DT:
Tuck the hook (sticky) Velcro™ in front into the seat, then fold the seat bottom forward and lay the backrest flat. Mate the hook Velcro™ to the loop (fuzzy) Velcro™ sewn inside the back edge.



Step 7. Passenger Top/PT:
Open the bottom and inside of the seat cover and slide it on with the long hook Velcro™ to the front.




Step 8. Passenger Top/PT:
Same as the driver's seat, tuck the fabric under the plastic for the headrests.

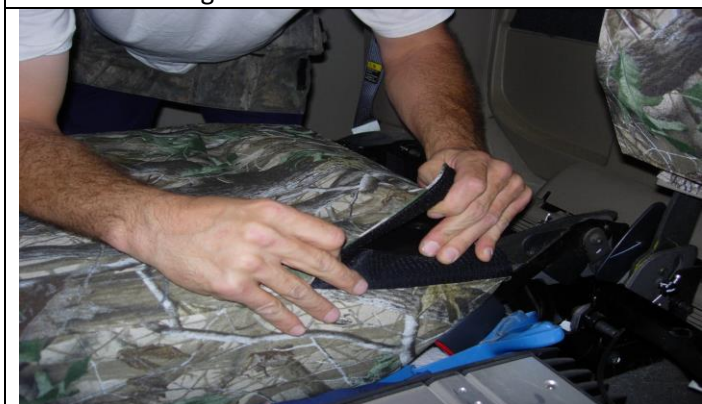

Step 9. Passenger Top/PT:
Tuck the hook Velcro™ in front into the seat, then fold the seat bottom forward and lay the backrest flat. Mate the vertical Velcro™ on the inside back edge as shown.



Step 10. Passenger Top/PT:
Mate the hook Velcro™ to the loop Velcro™ sewn inside the back edge starting on one side moving to the other.

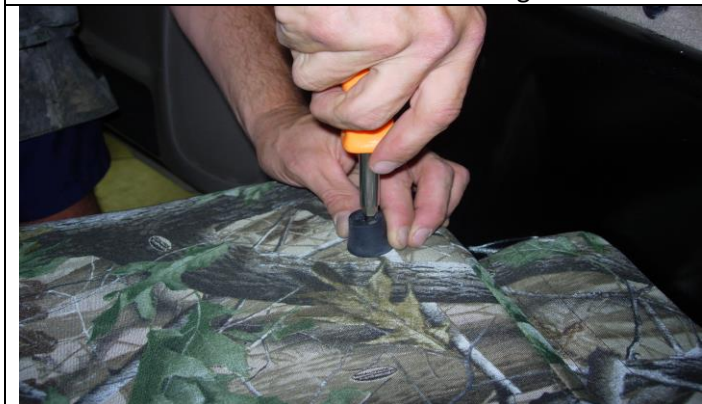


Step 11. Driver and Passenger Top/DT&PT:
Orient the hole in the seat cover for the rubber bumpers and install the bumpers back onto the seat.



Step 12. Driver and Passenger Bottoms/DB&PB:
Tilt the seat bottoms slightly forward and feed the release strap through the provided opening. Attach a few hook Velcro™ to the carpet on the seat behind the strap. Pull the seat cover over the front of the seat and mate the hook Velcro™ under the front of the seat.



Step 13. Driver and Passenger Bottoms/DB&PB:
Tilt the seats forward and mate the remaining hook Velcro™ in the rear to the carpet as shown.

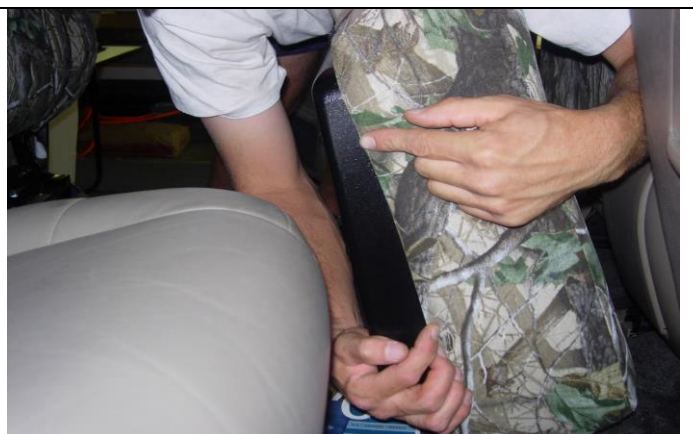

Step 14. Driver and Passenger Bottoms/DB&PB:
Tuck the fabric of the seat cover behind the plastic along the sides of the seat and mate the hook Velcro™ to the carpet on the seat. Some repositioning of the hook Velcro™ may be needed to provide the best fit.



Step 15. Headrests/H:
Slide the headrest covers on with the hook Velcro™ to the front. Mate them to the loop Velcro™ sewn inside the back edge as shown.



Step 16. Armrest/A:
Slide the armrest cover on with the opening for the beverage holders on top. Tuck it under the plastic in front making sure to keep the pull strap exposed as shown.



Step 17. Armrest/A:
Continue tucking the fabric under the plastic on the sides and the back of the plastic.



Step 18. Armrest/A:
Tuck the two hook Velcro™ under the armrest and mate them to the loop Velcro™ sewn inside the back.