


## 2000-04 Toyota Tundra 40/60 Split Bench w/ Console Installation



### Step 1. Driver & Passenger Tops/ DT & PT:

Temporarily remove the headrests by gently and evenly lifting up while depressing the push button release until the headrest comes out.

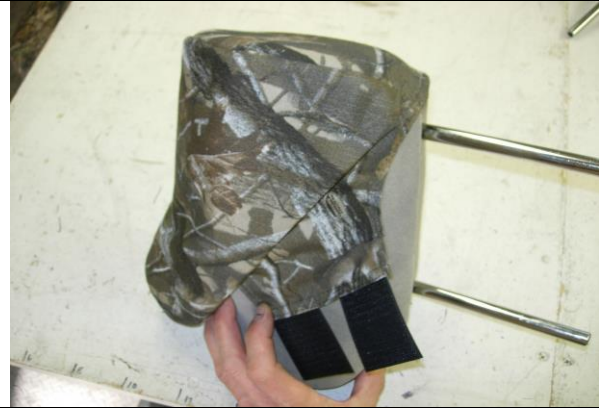

### Step 2. Headrests/H:

Use the "Seat Cover Piece Identification Chart" to identify the different parts of the seat cover. Slide the cover over one side first with the extending hook (sticky) Velcro™ to the front.



### Step 3. Headrests:

Compress the other side of the headrest and pull the other side down. Line up the seams of the seat cover to the seams of the headrest, they should closely match. Work the fabric from the seam inside the cover from thumb to forefinger to produce a wrinkle free seam.



### Step 4. Headrests:

Tuck the extending hook Velcro™ under the back edge and connect them to the loop (fuzzy) Velcro™ sewn inside the back edge.



### Step 5. Driver & Passenger Tops/ DT & PT:

Slide the seat cover on with the extending Velcro™ to the front. Line up the seams of the seat cover to the seams on the seat, they should closely match.



### Step 6. Driver & Passenger Tops:

View of the top left of the driver seat. Work the fabric seam inside the seat cover outward around the top corners from forefinger to thumb.



**Step 7. Driver & Passenger Tops:**  
Carefully tuck the fabric under the plastic for the headrests starting with the push button release (shown) to avoid damaging the button.



**Step 8. Driver & Passenger Tops:**  
Use one hand in a smoothing action down the front of the seat from top to bottom while pulling on the Velcro™ with the other hand from behind to smooth and tighten the seat cover. Keep tension and follow the hook Velcro™ through the seat with your hand (shown). Tuck them under the back edge and connect them to the loop Velcro™ inside the back edge.



**Step 9. Driver & Passenger Bottoms/DB & PB:**  
Place the seat covers on with the long 2" hook Velcro™ to the front and line up the seams.



**Step 10. Driver & Passenger Bottoms:**  
Work the fabric seam inside the seat cover outward from forefinger to thumb around the sides and front.



**Step 11. Driver & Passenger Bottoms:**  
Tuck the rear edge of the seat cover into the seat, but don't press the hook Velcro™ to the carpet yet.



**Step 12. Passenger Bottom:**  
Carefully tuck the fabric in around the seatbelt area all the way down between the plastic and the seat.



**Step 13. Driver & Passenger Bottoms:**  
View of the driver's seat outside edge. Slide the long hook Velcro™ up between the plastic cowling and the seat fabric where shown. Then, carefully feel under the seat for the Velcro™. Route it at an angle to the back edge and avoid any seat mechanisms, connecting it to the carpet on the back edge of the seat at an angle.



**Step 14. Driver & Passenger Bottoms:**  
Route the inside hook Velcro™ similarly avoiding any seat mechanisms. Next, route the long hook Velcro™ under the front of the seat, avoiding any mechanisms and mate them to the carpet on the back of the seats. Carefully move the seats back and forth to make sure the seat's slide action is not being impeded by any of the Velcro™. If so, reposition the Velcro™.



**Step 15. Driver & Passenger Bottoms:**  
Lastly, pull back and press the hook Velcro™ sewn inside the back edge to the carpet on the back edge of the seat.



**Step 16. Lid/L:**  
Place the lid cover on with the letter "L" labeled inside to the back. Slide the rear Velcro™ into the hinge using a sawing motion while lifting the lid up and down. Connect the Velcro™ under the lid as shown.



**Step 17. Console/C:**  
Slide the cover on with the console up, tucking the sides under the plastic for the hinge. Slide the two rear loop Velcro™ into the hinge same as step 16. Pull the fabric up flush to meet the edge of the opening where the lid and the console meet.



**Step 18. Console/C:**  
Fold the Velcro™ into the plastic cavity, noting the locations. Clean the areas with rubbing alcohol. Peel off the backing and stick the adhesive hook to the inside of the box and push hard. Make sure to place the adhesive hook on the sides of the box, not the top.