

2003-2007 Avalanche Bucket Seat Installation



Step 1. Driver and Passenger Tops/DT & PT: Temporarily remove the headrests by lifting it up all the way and inserting a heavy paper clip into the holes in the plastic as shown. Do this one at a time, gently lifting up and holding pressure until the headrest releases. The pieces of the seat cover are labeled inside. Use the "Seat Cover Piece Identification Chart" to identify the pieces of the seat cover.



Step 2. Driver and Passenger Tops: Open the sides and bottom Velcro™ of the seat cover. Slide the seat cover over the armrest and tuck the fabric behind it.



Step 3. Driver and Passenger Tops: Carefully tuck the fabric of the seat cover behind the plastic for the seat belt using something thin like a feeler gauge or screwdriver.



Step 4. Driver and Passenger Tops: Connect the horizontal Velcro™ as shown.



Step 5. Driver and Passenger Tops: Tuck the fabric behind the plastic for the side impact airbag.



Step 6. Driver and Passenger Tops: Slide the seat forward, tilt the backrest ahead and connect the vertical Velcro™ on the outside edge, starting at the top using a bear hug method.



Step 7. Driver and Passenger Tops:
Work your way to the bottom a few inches at a time.



Step 8. Driver and Passenger Tops:
Tuck the seat cover under the plastic for the headrests.




Step 9. Driver and Passenger Tops:
Tuck the long hook Velcro™ into the seat.



Step 10. Driver and Passenger Tops:
Gently pull the Velcro™ from behind the seat with one hand and use your other hand in a smoothing motion from top to bottom to tighten the seat cover. Connect the Velcro™ starting in the middle working your way to the outside edge.



Step 11. Driver and Passenger Armrests/DA & PA:
Slide the armrest cover on with the cut out for the hinge bolt on the inside.

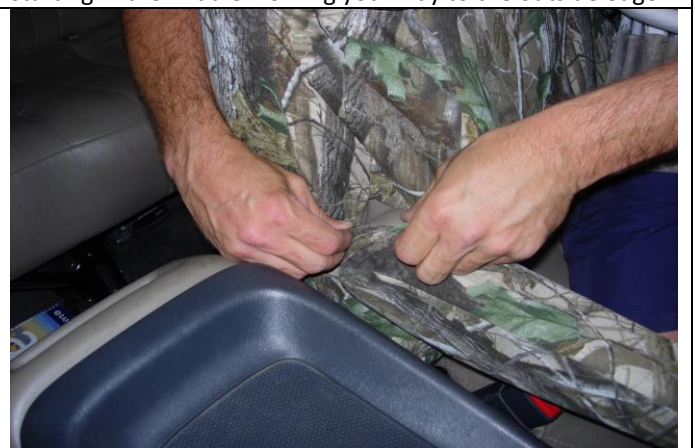

Step 12. Driver and Passenger Armrests:
Connect the Velcro™ behind the armrest.



Step 13. Headrests/H:

Compress the headrest and slide the covers on with the hook Velcro™ to front. Using the corner of a table to do this will make it easier, or do it with the headrest still in the seat. Pull it down a few inches at a time on the left and right.



Step 14. Headrests:

Tuck the hook Velcro™ inside the back edge and connect them to the loop Velcro™ sewn inside the back edge.



Step 15. Driver and Passenger Bottoms/DB & PB:

Place the seat cover bottoms on with the long hook Velcro™ to the front and pull it down and back onto the seat. Move the seat back and forth and tilt the backrest as needed to make plenty of room to install the cover. Use caution when reaching under the seat.




Step 16. Driver and Passenger Bottoms:

Use your thumbs to work the seat cover fabrics on the inside of the cover, out. Try to match the seams of the seat cover to the seams of your seat for the best possible fit.



Step 17. Driver and Passenger Bottoms:

Using the electric controls, lift the seat up all the way, then tuck the seat cover behind the plastic for the electrical panel. Slide the long outside hook Velcro™ between the plastic above the recline lever. Feel for it under the seat, then route it to the back edge at a 45 degree angle and press it onto the seat carpet. Route the inside edge Velcro™ to the back edge of the seat and press it to the seat carpet.

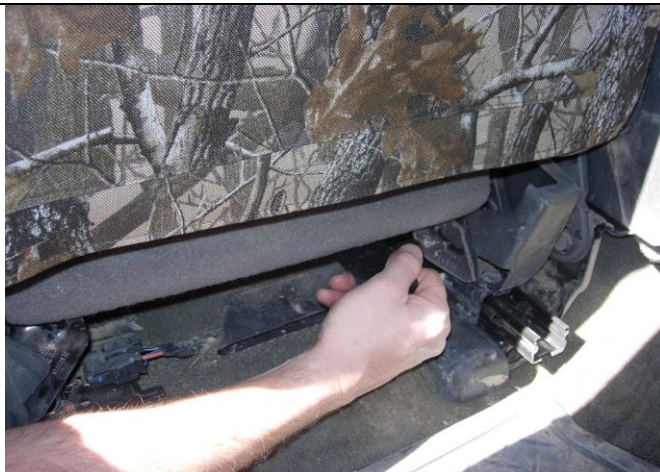

Step 18. Driver and Passenger Bottoms:

With the seat cover pulled back and in position, route the front hook Velcro™ under the seat, avoiding any seat mechanisms, and press them to the carpet located on the back edge of the seat.



Step 19. Lid/L:

Place the lid cover on with the cut-out for the push button release on the front left side (thumb).



Step 20. Lid:

Connect the Velcro™ on the underside of the lid. Clean the area shown under the short side Velcro™ (pointer finger) with rubbing alcohol. Remove the plastic backing from the adhesive hook Velcro™ and stick it to the plastic.