


2003-2007 Chevy/GMC Crew Cab Rear 60/40 Installation

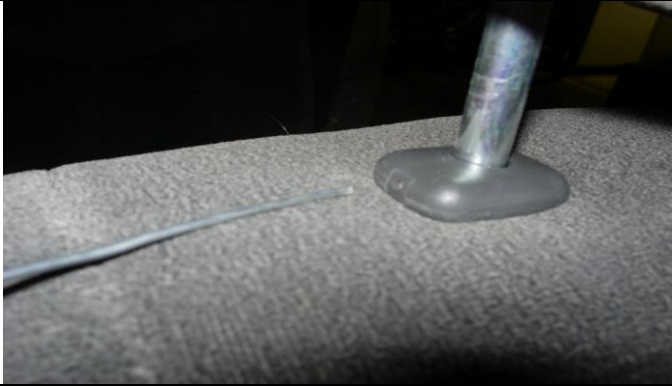

Step 1. Driver & Passenger Tops/DT & PT:

Use the "Seat Cover Piece Identification Chart" to identify the different parts of the seat cover.

Temporarily remove the headrests. Do this by lifting the headrests up all the way: insert a heavy paper clip into the hole in the plastic while holding gentle upward pressure until it releases, keep holding it up. Insert the paper clip into the other piece of plastic and it should come right out.

Sometimes the released side slips back in and will need to be re-released.



Step 2. Drivers Top/DT:

Open the bottom and inside part of the seat cover gently.

Tuck the seat cover behind the armrest, bottom, and around the hinge for the armrest.

Next, tuck the seat cover between the seat and the seat belt. Connect the Velcro™ for the armrest cavity behind the armrest, the seat cover materials should meet in back.



Step 3. Driver Top:

Tuck the seat cover under the plastic for the headrests.



Step 4. Drivers Top:

Make sure the seatbelts are exposed by tipping them forward and tucking the seat cover behind them.



Step 5. Driver Top:

Connect the Velcro™ under the plastic of the seatbelt starting at the top and working your way down a few inches at a time.




Step 6. Driver Top:

Gently pull both pieces down and connect the Velcro™. Line up the seams of the seat cover to the seams on the seat, they should match closely.



Step 7. Passenger Top/PT:
 Open the bottom and inside of the seat cover and slide the cover on with the long hook straps to the front tucking the seat cover under the plastic for the headrests. Fold the seat flat and connect the inside Velcro™ as shown.

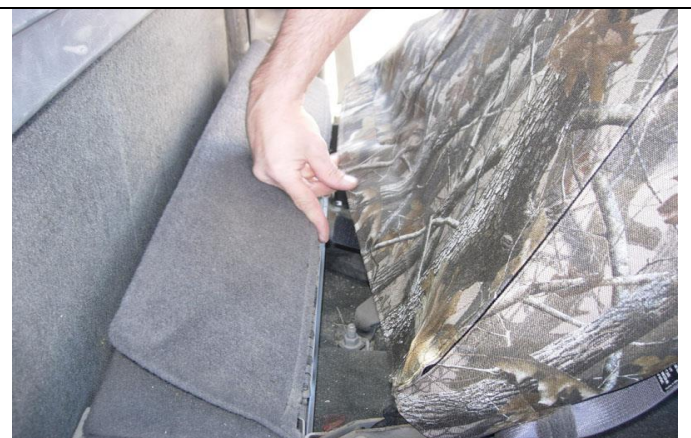

Step 8. Driver & Passenger Tops:
 Tuck the long hook Velcro™ into the seat and connect them to the loop Velcro™ sewn inside the back edge as shown. Placing something heavy to hold the cargo flap down out of the way will make this step easier.



Step 9. Driver & Passenger Cargo Flaps/DCF & PCF:
 Fold the backrests down. The cargo flap is the carpet covered spring loaded trim piece shown here.



Step 10. Driver & Passenger Cargo Flaps:
 Press the hook Velcro™ to the carpet starting on one side working to the other. The angled edge goes to the outside.



Step 11. Armrest/A:
 Slide the armrest cover on with the cut out for the drink holders on top. Feed the armrest strap through the provided opening, then tuck the material under the plastic for the drink holders. Connect the Velcro™ in back.




Step 12. Headrests/H:
 Slide the headrest cover on with the long hook Velcro™ to the front. Connect them to the loop Velcro™ sewn inside the back edge as shown.




Step 13. Driver and Passenger Bottoms/DB & PB:

Pull the back of the seat bottoms up partway by pulling up on the nylon release tab on top of the seat. Place the seat covers on orienting the cut out for the release tab. Same as Step 6, line up the seams of the seat cover to the seams on the seat around the front and sides, they should match closely.

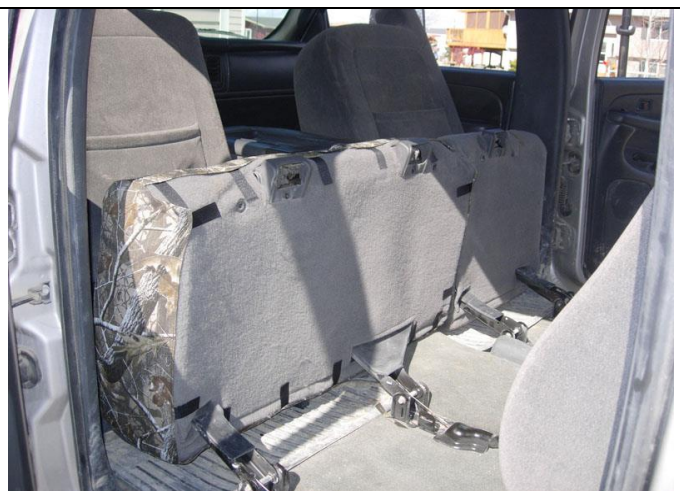

Step 14. Driver and Passenger Bottoms:

Press the hook Velcro™ to the carpet under the seat as shown. Pulling back on the back left and right sides will pull out any slack in the sides of the seat cover.

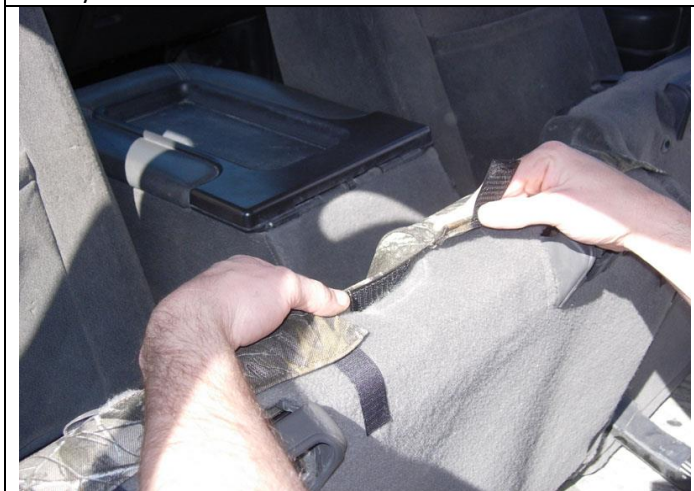

Step 15. Drivers Bottom/DB:

Press the hook strip Velcro™ inside the cover to the carpet in the recession for the seatbelts as shown (left thumb).



Step 16. Back Panel

Tuck the thick edge of the Back Panel cover under the plastic panel under the back window, then tuck the left and right sides behind the plastic cowlings.