

2005-09 Dodge Mega Cab 40-20-40 W/ Opening Consoles

Items needed for the installation: Scissors, Phillips screwdriver, rubbing alcohol, and paper towels.



Step 1. Driver and Passenger Bottoms/DB&PB:
All the parts of your seat covers are labeled inside. Use the "Seat Cover Piece Identification Chart" to ID parts.
Temporarily remove the screw from the recline lever using a Phillips screwdriver.



Step 2. Driver and Passenger Bottoms/DB&PB:
Slide the seat cover over the upholstered flap on the outside, then position the cut outs for the electric seat controls and recline lever. Electric controls only: Tuck the seat cover behind the electric control panel. Pull the outside edge of the seat cover back lining up the hole for the recline lever and press the hook (sticky) Velcro™ to the carpet on the back of the seat.



Step 3. Driver and Passenger Bottoms/DB&PB:
If you have electric seats be sure to lift the seat up as high as it will go. This will pull everything away from your seat and free up some space. Route the long hook Velcro™ under the front of the seat and press them to the carpet on the back edge of the seat. Make sure the Velcro is routed above any wires or bars. Next, pull the inside edge of the seat cover (next to the center console) around to the back and press the hook Velcro™ to the carpet on the back edge.



Step 4. Driver and Passenger Bottoms/DB&PB:
Route the long inside and outside hook Velcro™ to the carpet on the back edge. Tuck the back edge of the seat cover into the seat and press the hook Velcro™ to the carpet on the back of the seat. Adjust the Velcro™ to re-position and smooth out any wrinkles. Move the seat in all directions after installing to make sure the seat's action is not impeded.



Step 5. Driver and Passenger Tops/DT&PT:

Temporarily remove the headrests by depressing the push button release and gently lifting up. Slide the seat cover on with the extending hook Velcro™ to the front. Tuck the seat cover under the plastic for the headrest starting with the push button release.



Step 6. Driver and Passenger Tops/DT&PT:

Tuck the hook Velcro™ into the seat. Line up the seams of the seat cover to the seams of your seat, they should closely match. Gently pull on the hook Velcro™ with one hand from the back while sliding your other hand down the front of the seat cover taking up the slack in the seat cover. Lastly, connect the hook Velcro™ to the loop Velcro™ sewn inside the back edge.



Step 7. Console/C:

With the console in the up position, slide the console cover on and tuck it in on the bottom. Fold the console down, holding it in position with one hand. Note where the Velcro™ will lay inside the cavity. Fasten the right side and left side rear hook Velcro™ to the carpet behind the console hinge.



Step 8. Console/C:

Do not apply a fabric protecting agent like Armourall to the inside of the console. Clean the surface with rubbing alcohol. Scrub the plastic hard with rubbing alcohol and wipe it dry when it's still wet. Peel off the backing and stick the adhesive Velcro™ to the plastic on the inside of the box, not on the top. If they are not sticking, stop and re-clean the areas. The adhesive hook works best at 68 degrees or warmer for at least 24 hours if possible.




Step 9. Lid/L:

Connect the Velcro™ under the console lid. The lid cover was modified by lengthening the front to back Velcro™ so they connect to each other. The old method is pictured, sorry.



Step 10. Lid/L:

Connect the lid and the console cover in back. Note there will be a gap in the fabrics with a little loop Velcro™ showing.

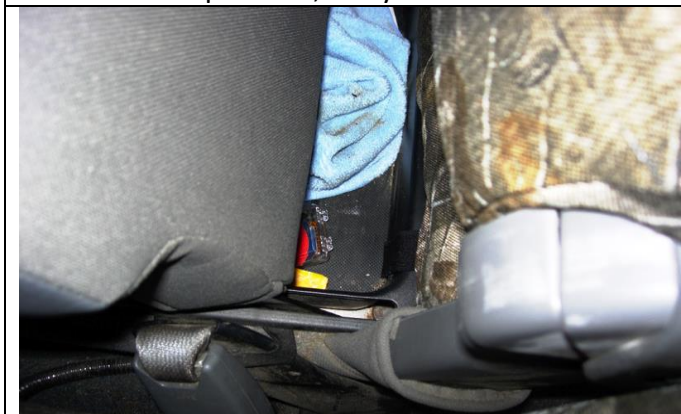

Step 11. Middle Bottom Back/MBB:

Lift the middle bottom up and place the loop Velcro™ into the cavity of the middle bottom. Prepare the surface of the plastic the same as step 8. Press the adhesive hook Velcro™ to the inside of the plastic box and connect the loop Velcro™ to it.



Step 12. Middle Bottom Back/MBB:

Press the hook Velcro™ to the carpet on the back edge of the middle seat bottom, tucking behind the vent as shown.



Step 13. Middle Bottom/MB:

Connect the Velcro™ to the carpet on the bottom of the seat and the long ones across the middle to each other.



Step 14. Headrests/H:

Slide the headrest cover on with the hook Velcro™ to the front, connecting them to the loop Velcro™.