

2002-05 Dodge 40-20-40 Non-opening Middle Bottom Installation



Step 1. Driver and Passenger Bottoms DB/PB:

Use the "Seat Cover Piece Identification Chart" to identify the different parts of the seat cover. Temporarily remove the recline lever using a Phillips screwdriver. A cordless screwdriver works the best for removing and re-installing the screw, just be careful to not strip the screw putting it back in.



Step 2. Driver and Passenger Bottoms:

Slide the seat cover over the upholstered flap on the outside, then position the cut outs for the electric seat controls and recline lever. Pull the outside edge of the seat cover back lining up the hole for the recline lever and press the hook (sticky) Velcro™ to the carpet on the back edge of the seat, and then put the lever back on.



Step 3. Driver and Passenger Bottoms:

If you have electric seats be sure to lift the seat up as high as it will go. This will pull everything away from your seat and free up some space. Route the long hook Velcro™ under the front of the seat and press them to the carpet on the back edge of the seat. Make sure the Velcro is routed above any wires or bars. Next, pull the inside edge of the seat cover (next to the center console) around to the back and press the hook Velcro™ to the carpet on the back edge of the seat. Notice the left and right sides leave about 3/4" of carpet showing under them. This allows the back edge of the seat cover to connect to the carpet in Step 4.



Step 4. Driver and Passenger Bottoms:

Route the long side hook Velcro™ to the carpet on the back edge at an angle. Next, tuck the back edge of the seat cover into the seat, pull back, and press the Velcro™ to the carpet on the seat. Move the seat in all directions after installing to make sure the seat's action is not interfered with. Adjust the Velcro™ if needed to free the seats action or smooth out any wrinkles.



Step 5. Driver and Passenger Tops/ DT & PT:

Temporarily remove the headrests by depressing the push button release, gently and evenly lifting up. Slide the seat cover on with the extending Velcro™ to the front. Tuck the seat cover under the plastic for the headrest starting with the push button release.




Step 6. Driver and Passenger Tops:

Tuck the Velcro™ into the seat. Line up the seams of the seat cover to the seams of your seat, they should closely match. Gently pull on the hook Velcro™ with one hand from behind while sliding your other hand down the front of the seat cover taking up the slack in the seat cover. Lastly, press the front Velcro™ to the loop Velcro™ inside the back edge.



Step 7. Armrest/A:

Slide the cover on with the extending Velcro™ to the front.

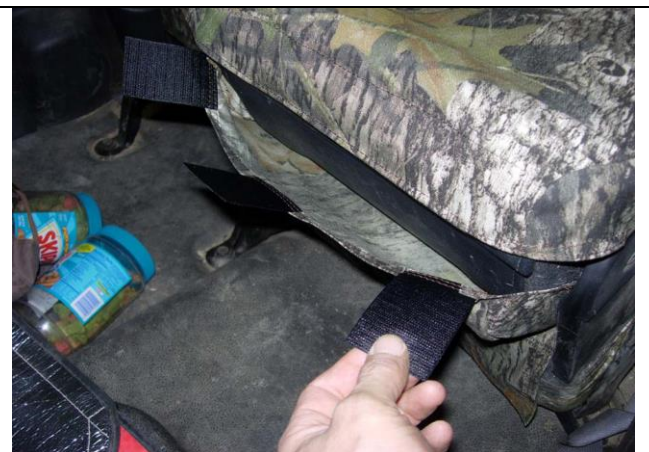

Step 8.

Fold the armrest down and pull the material together.



Step 9. Lid/L:

Tuck the front Velcro™ under the back edge and press the Velcro™ together as shown.



Step 10. Middle Bottom/ MB:

Temporarily remove the seatbelt from its elastic restraint. Place the seat cover on with the long Velcro™ to the front.



Step 11. Middle Bottom:

Pull the left and right sides of the seat cover around to the back and press them to the carpet on the seat. Route the long Velcro™ under the front of the seat and press them to the carpet. Route the side Velcro™ under the seat and press them at an angle to the carpet forming an "X" in the middle as shown.



Step 12. Middle Bottom: Press the back edge to the carpet as shown. Put the seatbelts through the elastic restraints sewn to the seat cover.



Step 14. Headrests/H:

Slide the cover on with the extending Velcro™ to the front. Line up the seams of the seat cover to the seams on the headrest, they should closely match. Tuck the front Velcro™ under the back edge and connect it. Recline the backrests to put the headrests back in.

Congratulations, you're done!