

## 2004-09 Dodge 40-20-40 Opening Console, Non-opening Middle Bottom Install

Items needed for the installation: Scissors, Phillips screwdriver, rubbing alcohol, and paper towels.



### Step 1. Driver and Passenger Bottoms/DB&PB:

The parts of the seat cover are labeled inside. Use the "Seat Cover Piece Identification Chart" to identify the parts. Temporarily remove the screw from the recline lever using a Phillips screwdriver.



### Step 2. Driver and Passenger Bottoms/DB&PB:

Slide the seat cover over the upholstered flap on the outside, then position the cut outs for the electric seat controls and recline lever. Electric controls only: Tuck the seat cover behind the electric control panel. Pull the outside edge of the seat cover back lining up the hole for the recline lever and press the hook (sticky) Velcro™ to the loop Velcro™ sewn on the back of the seat cover.




### Step 3. Driver and Passenger Bottoms/DB&PB:

If you have electric seats be sure to lift the seat up as high as it will go. This will pull everything away from your seat and free up some space. Route the long hook Velcro™ under the front of the seat and press them to the carpet on the back edge of the seat. Make sure the Velcro is routed above any wires or bars. Next, pull the inside edge of the seat cover and press it to the loop Velcro™ sewn on the back of the seat cover.



### Step 4. Driver and Passenger Bottoms/DB&PB:

Route the long inside and outside hook Velcro™ to the carpet on the back edge. Tuck the back edge of the seat cover into the loop Velcro™ on the back of the seat cover. Adjust the Velcro™ to re-position and smooth out any wrinkles. Move the seat in all directions after installing to make sure the seat's action is not impeded. Connect the two plastic hooks with hook Velcro™ sewn to them, under the seat to the metal frame, then press them onto the loop Velcro™ sewn on the back of the seat cover.

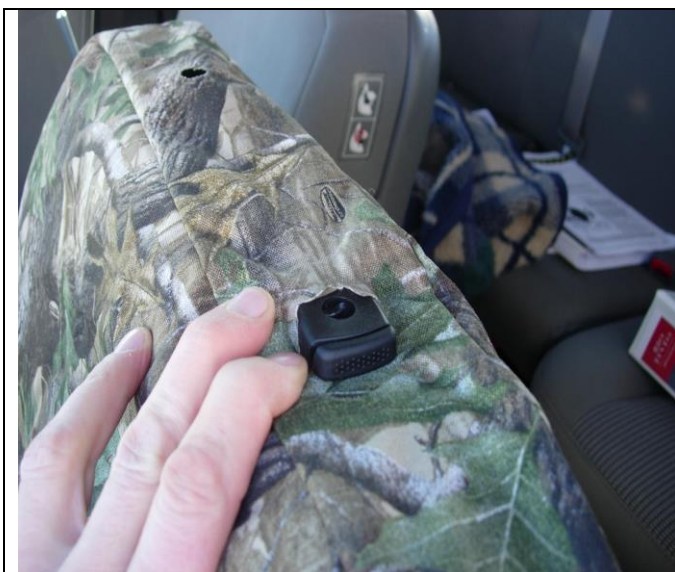

**Step 5. Driver and Passenger Tops/DT&PT:**

Temporarily remove the headrests by depressing the push button release and gently lifting up. Slide the seat cover on with the extending hook Velcro™ to the front. Tuck the seat cover under the plastic for the headrest starting with the push button release.



**Step 6. Driver and Passenger Tops/DT&PT:**

Tuck the hook Velcro™ into the seat. Line up the seams of the seat cover to the seams of your seat, they should closely match. Gently pull on the hook Velcro™ from the backside with one hand while sliding your other hand down the front of the seat cover taking up the slack in the seat cover. Push the front hand thru to the back pinning the Velcro™ to the seat, then connect the Velcro™ for a snug fit.



**Step 7. Console/C:**

With the console in the up position, slide the console cover on and tuck it in on the bottom. Fold the console down, holding it in position with one hand. Align the seams of the cover to the seams of the console. Pull the cover up flush to the opening around the hinges. Press the Velcro™ sewn inside the cover to the fuzzy carpet behind the hinge on the left and right. Note where the Velcro™ will lay inside the cavity.



**Step 8. Console/C:**

Clean the surface of the plastic with rubbing alcohol. Scrub the plastic hard with rubbing alcohol and wipe it dry when it's still wet. Peel off the backing and stick the adhesive Velcro™ to the plastic on the inside of the box, not on the top. If they are not sticking, stop and re-clean the areas.



**Step 9. Lid/L:**

Connect the Velcro™ under the console lid starting with the top or front. The photo doesn't show an improvement to the top to bottom Velcro™. Slide the bottom, or rear Velcro™ into the left and right side of the hinge, connecting them to the corresponding Velcro™ in front.



**Step 10. Console Lid/L:**

Connect the lid and the console cover in back. Note there will be a ½"-1" gap in the fabrics with a little loop Velcro™ showing.



**Step 11. Middle Bottom/MB:**

Temporarily remove the seatbelt from its elastic restraint. Place the seat cover on with the long hook Velcro™ to the front.



**Step 12. Middle Bottom/MB:**

Pull the left and right sides of the seat cover around to the back and press the Velcro™ to the back edge. Route the long hook Velcro™ under the front of the seat and press them to the carpet on the back edge. Route the long side hook Velcro™ under the seat and connect them at an angle forming an "X" in the middle as shown.



**Step 13. Headrests/H:**

Slide the headrest cover on with the hook Velcro™ to the front, connecting them to the loop Velcro™ as shown.