

## 2005-2009 Dodge 40-20-40 Cloth sided w/Opening Consoles installation

Items needed for the installation: Scissors, Phillips screwdriver, rubbing alcohol, and paper towels.



### Step 1. Driver and Passenger Bottoms/DB&PB:

The parts of the seat cover are labeled inside. Use the "Seat Cover Piece Identification Chart" to identify the parts. Temporarily remove the screw from the recline lever using a Phillips screwdriver, or cordless drill.

Seats with **ELECTRIC CONTROLS**: Lift seats all the way up.



### Step 2. Driver and Passenger Bottoms/DB&PB:

Slide the seat cover over the upholstered flap on the outside, then position the cut outs for the electric seat controls and recline lever. Electric controls only: Tuck the seat cover behind the electric control panel. Pull the outside edge of the seat cover back lining up the hole for the recline lever and press the hook (sticky) Velcro™ to the carpet on the back of the seat.




### Step 3. Driver and Passenger Bottoms/DB&PB:

Route the long hook Velcro™ under the front of the seat and press them to the carpet on the back edge of the seat. Next, pull the inside edge of the seat cover (next to the center console) around to the back and fasten it to the carpet on the back edge.



### Step 4. Driver and Passenger Bottoms/DB&PB:

Route the long inside and outside hook Velcro™ to the carpet on the back edge. Tuck the back edge of the seat cover into the seat and press the hook Velcro™ sewn inside to the carpet on the back of the seat. Adjust the Velcro™ to re-position and smooth out any wrinkles. Move the seat in all directions after installing to make sure the seat's action is not impeded.

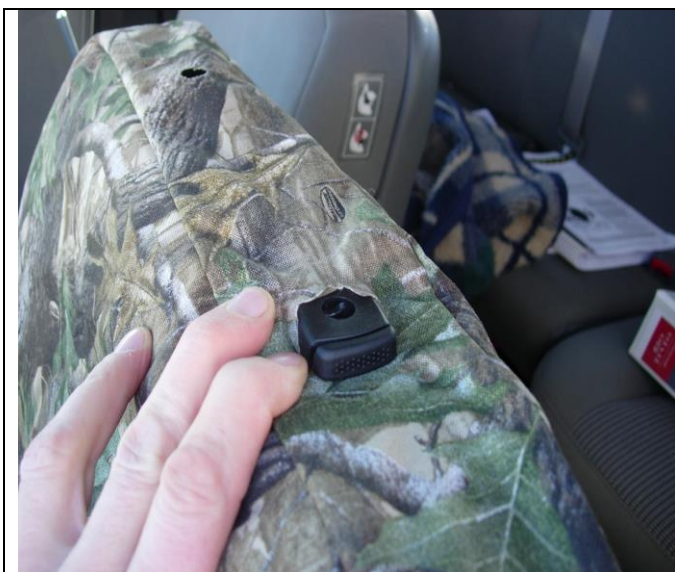

**Step 5. Driver and Passenger Tops/DT&PT:**

Temporarily remove the headrests by depressing the push button release and gently lifting up. Slide the seat cover on with the extending hook Velcro™ to the front. Tuck the seat cover under the plastic for the headrest starting with the push button release.



**Step 6. Driver and Passenger Tops/DT&PT:**

Tuck the hook Velcro™ into the seat. Line up the seams of the seat cover to the seams of your seat, they should closely match. Gently pull on the hook Velcro™ from the backside with one hand while sliding your other hand down the front of the seat cover taking up the slack in the seat cover. Push the front hand thru to the back pinning the Velcro™ to the seat, then connect the Velcro™ for a snug fit.



**Step 7. Console/C:**

With the console in the up position, slide the console cover on and tuck it in on the bottom. Fold the console down, holding it in position with one hand. Align the seams of the cover to the seams of the console. Pull the cover up flush to the opening around the hinges. Press the Velcro™ sewn inside the cover to the fuzzy carpet behind the hinge on the left and right. Note where the Velcro™ will lay inside the cavity.



**Step 8. Console/C:**

Clean the surface of the plastic with rubbing alcohol. Scrub the plastic hard with rubbing alcohol and wipe it dry when it's still wet. Peel off the backing and stick the adhesive Velcro™ to the plastic on the inside of the box, not on the top. If they are not sticking, stop and re-clean the areas.






**Step 9. Lid/L:**

Connect the Velcro™ under the console lid starting with the top or front. Slide the bottom, or rear Velcro™ into the left and right side of the hinge, connecting them to the corresponding Velcro™ in front.



**Step 10. Console Lid/L:**

Connect the lid and the console cover in back. Note there will be a ½"-1" gap in the fabrics with a little loop Velcro™ showing.

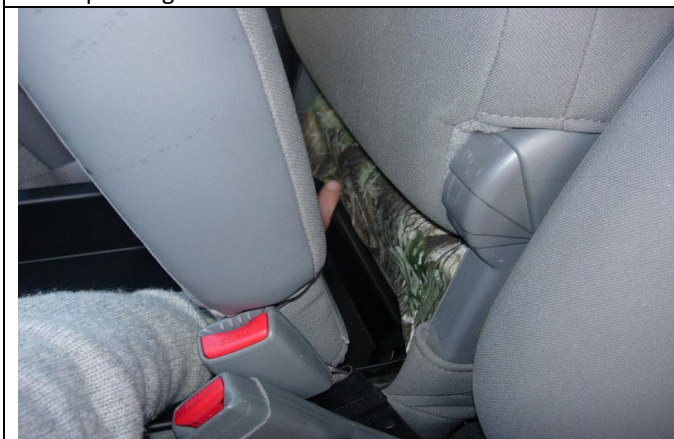

**Step 11. Middle Bottom Back/MBB:**

Lift the middle bottom up and place the loop Velcro™ into the cavity of the middle bottom. They should go straight down, but not hit the bottom. Prepare the surface of the plastic the same as step 8. Press the adhesive hook Velcro™ to the inside of the plastic box, then connect the loop Velcro™ to it.



**Step 12. Middle Bottom Back/MBB:**

Press the hook Velcro™ to the carpet on the back edge of the middle seat bottom. Mega Cab not shown: For Mega Cab, tuck the back edge of the cover in behind the heating and cooling vent and press it to the carpet on the seat.



**Step 13. Middle Bottom/MB:**

Press the Velcro™ to the carpet on the bottom of the seat, then the long side to side middle Velcro™ to each other.



**Step 14. Headrests/H:**

Slide the headrest cover on with the hook Velcro™ to the front, connecting them to the loop Velcro™ as shown.