

# 2004-2012 Colorado 60/40 Install



## Step 1. Driver & Passenger tops/DT&PT:

Temporarily remove the side lever attached to the backrest with a Torx # 15.

All the parts of the seat cover are labeled inside. Use the seat cover piece identification chart to ID parts.

Slide the seat cover for the backrest on with the long hook Velcro™ to the front. Notice, it will be tight going on but it will relax when the cover is pulled down all the way. With the hole lined up install the recline lever.



## Step 2. Driver & Passenger tops/DT&PT:

Position the cover so the seams of the seat cover closely line up with the seams of the seat. Tuck the hook Velcro™ into the seat and mate the hook to the loop Velcro™ sewn inside the back edge. Be careful to not over tighten the hook Velcro™ because they permanently dent your seat.



## Step 3. Passenger bottom/PB:


Place the seat cover on with the long hook Velcro™ to the front. Feed the female part of the seat belt through the provided opening as shown and tuck the material flap behind the seat belt around to the back of the seat.



## Step 4. Driver and Passenger bottom/DB&PB:

View from behind the passenger seat. Line up the seat cover seams with the seams on the seat, they should closely match. Pull the inside flap of seat cover behind the seat belt back and press the Velcro™ to the carpet on the seat. Tuck the rear part of the seat cover into the seat, pull it down to the bottom edge and connect it to the carpet on the seat.



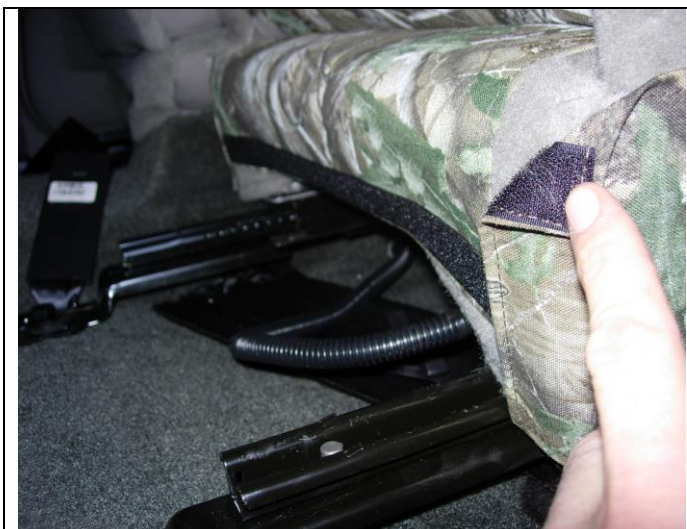

**Step 5. Passenger bottom/PB:**

Pull the outside flap back and press it onto the carpet fuzz on the seat. Next, route the long hook Velcro™ under the front of the seat to the carpet on the back edge of the seat. Avoid any seat mechanisms under the seat.



**Step 6. Driver & Passenger bottoms/DB&PB:**

View from the Passenger side bottom. Route the long outside hook Velcro™ between the seat slide mechanism and the seat as shown. Mate the hook Velcro™ to the carpet behind the seat at roughly a forty-five degree angle. The inside Velcro™ route similarly. Some repositioning of the Velcro™ may be necessary for the best fit.



2007 Colorado Regular Cab pictured in Realtree Hardwoods Green HD.



With all the necessary accessories, you are ready to go outside and play.