

2007-13 Tundra 40-20-40 Fold Flat Passenger Installation



Step 1. Driver/DT: Temporarily remove the elastic straps from the underside of the seat.



Step 2. Driver Top/DT:
The elastic straps are connected to the seat bottom by the white plastic hooks shown in the photo.



Step 3. Driver & Passenger Top/DT&PT:
Temporarily remove the headrests by gently lifting up while depressing the push button release as shown.



Step 4. Driver & Passenger Bottoms/DB&PB:
All the parts of the seat cover are labeled inside. Use the seat cover piece identification chart to ID parts. Place the seat cover on with the long hook (sticky) Velcro™ to the front. Driver only: open the outside edge Velcro™ by the lumbar knob.



Step 5. Driver & Passenger Bottoms/DB&PB:
If you have electric seats be sure to lift the seat up as high as it will go. This will pull everything away from your seat and free up some space. Tuck the fabric behind the plastic cowling in front.




Step 6. Driver's Bottom/DB:
Connect the Velcro™ under the lumbar knob, skip this step if no knob exists.



Step 7. Driver & Passenger Bottoms/DB&PB:
Continue tucking the fabric behind the plastic cowling. Tuck the back edge of the seat cover into the seat. Line up the seams of the seat cover should to the seams of your seat, they should closely match.



Step 8. Driver & Passenger Bottoms/DB&PB:
View from the outside edge of the driver seat. Use your fingers to push the seat cushion away from the plastic cowling. Route the long outside edge hook Velcro™ exactly where shown in front of the plastic nub shown inside the cowling.

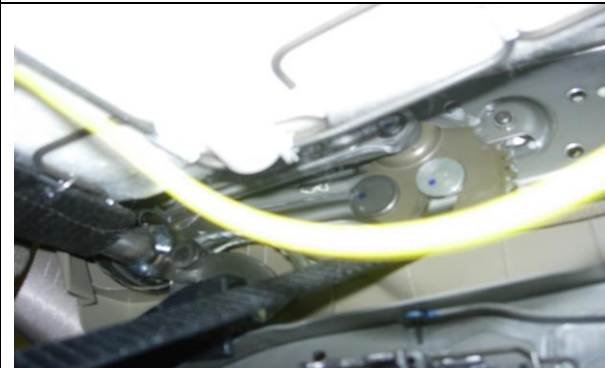


Step 9. Driver & Passenger Bottoms/DB&PB:
Use caution while reaching under the seat to avoid being cut by sharp metal framework. Route the outside edge hook Velcro™ through the gap where shown and press it to the rear loop (fuzzy) Velcro™ sewn to the back edge of the seat cover.



Step 10. Driver & Passenger Bottoms/DB&PB:
Route the long inside edge hook Velcro™ where shown between the seat and the plastic cowling.



Step 11. Driver & Passenger Bottoms/DB&PB:
View from behind the driver's underside, next to the center console. Route the inside edge hook Velcro™ where shown through the gap, just above the metal frame, mating it to the rear loop Velcro™. Route the long hook Velcro™ under the front of the seat, to the loop Velcro™ in back, being sure to route them avoiding any seat mechanisms under the seat.

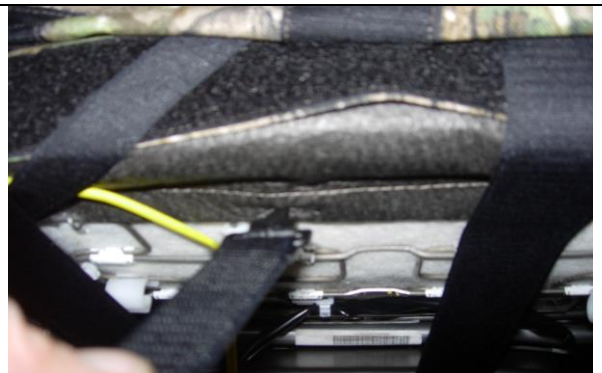

Step 12. Driver & Passenger Bottoms/DB&PB:
Clip the short hook Velcro™ with the buckle sewn to it under the back of the seat to the seat support wire shown just in front of the clip, then press it to the rear loop Velcro™. Trim the excess length of all the Velcro™. Some repositioning of the seat cover and Velcro™ may be needed to provide the best fit. Remember the seams of your seat should closely line up with the seams of the seat cover.



Step 13. Driver & Passenger Top/DT&PT:

Slide the seat cover on with the extending hook Velcro™ to the front. Pull the cover down into position as shown, tucking the fabric behind the plastic on the sides. The seams of the seat cover should closely line up with the seams of your seat.



Step 14. Driver Top/DT:

Tuck the fabric of the seat cover under the plastic for the headrests starting with the push button release side first.



Step 15. Driver/DT:

Tuck the Velcro™ into the seat. Pull on the fabric not the Velcro™ from behind the seat while using your other hand in a smoothing action from top to bottom, smoothing and tightening the seat cover.



Step 16. Driver Top/DT:

Route the long hook Velcro™ under the seat to the metal bar supporting the seats foam 7-8" in from the back edge. Route them over the top of the bar, then back to the loop Velcro™ sewn inside the seat cover. You may have to smooth and re-fasten more than once.



Step 17. Driver Top/DT:

Re-connect the elastic straps from the carpeted back panel to the plastic hooks under the seat.



Step 18. Driver Top /DT:

Lastly, connect the hook Velcro™ to the carpeted flap, starting on the inside next to the center console, working your way out.



Step 19. Passenger Top/PT:

Place the cover on with the extending hook Velcro™ to the front, and tuck the fabric under the headrest plastic.



Step 20. Passenger Top/PT:

Tuck in the left and right front sides, fold the seat flat and pull the back edge up. Mate the Velcro™ at the back edge,



Step 21. Passenger Bottom/PB:

Install the passenger seat bottom the same as the driver seat bottom, except mate the side and front Velcro to the carpet on the seat.



Step 22. Passenger Bottom/PB:

Likewise, press the hook Velcro™ onto the carpet on the back edge of the seat.



Step 23. Headrests/H:

Slide the headrest covers on with the extending hook Velcro™ to the front. Mate them to the loop Velcro™ sewn inside the back edge.



Step 24. Middle Bottom/MB:

Tilt the seat bottom up and feed the release strap through the provided opening in back.



Step 25. Middle Bottom/MB:

Mate the hook Velcro™ to the carpet on the underside of the seat as shown.



Step 26. Console/C:

Temporarily remove the headrest by depressing the push button release and gently lifting up. Tuck the fabric of the console cover under the plastic for the headrests and the seatbelt.



Step 27. Console/C:

Mate the Velcro™ behind the seatbelt box and tuck the fabric under the plastic.



Step 28. Console/C:

Tuck the bottom left and right sides of the cover in behind the plastic of the hinge area.



Step 29. Console/C:

Open the lid and slide the two rear loop Velcro™ into the hinge area by lifting the lid up and down, using a sawing motion to slide them in.



Step 30. Console/C:

Note the areas where the Velcro™ will lay inside the console. Clean the areas with rubbing alcohol, scrubbing hard and wiping it dry while it's still wet, don't let it air dry.



Step 31. Console/C:

Dry fit the Velcro™ to the inside of the box, making sure the adhesive hook Velcro™ are on the inside of the box and not on the top lip, trim them if necessary. Peel off the backing from the adhesive hook and stick it to the inside of the box pushing hard. If they are not sticking, stop and re-cleans the areas.



Step 32. Lid/L:

Place the lid cover on with the letter "L" on the inside of the cover to the back. Slide the Velcro™ into the hinge area using the same sawing motion as in step 24. Mate the front to back Velcro™ first, then the side to side ones. Re-tighten The Velcro™ as tight as you can get them.



Step 33. Middle Headrest/MH:

First, slide the cover over the front of the headrest with the extending hook Velcro™ to the front. Then mate them to the loop Velcro™ sewn inside the back edge.



Congratulations, you're done.

It does take a considerable effort to get them on, but once they're in place they will give you several years of use and stay put until you want to remove them.