

2007-2014 Chevy/GMC Crew Cab Rear Installation



Step 1. Driver & Passenger Top DT&PT:

Slide the headrest covers on (follow Step 2) before removing the headrests. Temporarily remove the headrests by lifting them up all the way holding gentle upward pressure and insert a heavy paper clip into the hole in the plastic until it releases. Keep holding upward pressure and release the other side of the headrest.



Step 2. Headrests/H:

All the parts of the seat cover are labeled inside. Use the seat cover piece identification chart to ID parts. Slide the headrest cover on with the extending hook (sticky) Velcro™ to the front. Tuck them inside the back edge and connect them to the loop (fuzzy) Velcro™ sewn inside the back edge.



Step 3. Driver's Top/DT:

Tuck the seat cover behind the seatbelt and turn the top of the seat cover inside out to keep the hook Velcro™ from connecting to the carpet behind the backrest.



Step 4. Driver's Top/DT:

Fold the armrest partway down and tuck the material around the armrest.



Step 5. Driver & Passenger Top/DT&PT:

Tuck the seat cover fabric under the plastic for the headrests.



Step 6. Driver & Passenger Top/DT&PT:

Tuck the seat cover in behind the plastic on the inside and outside edge.



Step 7. Driver's Top/DT:
Tuck the seat cover fabric behind the metal hinge for the armrest.



Step 8. Driver's Top/DT:
Tuck the sides and bottom of the armrest cavity fabric behind the plastic lip.



Step 9. Driver's Top/DT:
Tuck the top corners of the material behind the plastic using a shoe horn or some other rounded corner tool.



Step 10. Driver's Top/DT:
Using the shoe horn tuck the fabric in on the top. Do it by pushing it in and down behind the plastic.



Step 11. Driver & Passenger Top/DT&PT:
Lift the seat bottom part way up and tuck the long hook Velcro's™ into the seat, then flip the seat bottoms up. Laying on the floor of the truck, fold the Velcro™ in half lengthwise and push them up towards the window.



Step 12. Driver & Passenger Top/DT&PT:
Reach down from the top and connect the Velcro™ to the carpet on the back of the seat. Use a smoothing action with one hand down the front while pulling on the Velcro™ to tighten the cover.



Step 13. Driver & Passenger Top/DT&PT:
Mate the hook Velcro™ sewn inside the back of the seat cover to the carpet behind the top of the seat.



Step 14. Driver & Passenger Top/DT&PT:
Do this by tucking the right and left corner hook Velcro™ into the seat.




Step 15. Driver & Passenger Top/DT&PT:

Lift the seat bottoms up, route the long right and left corner hook Velcro™ around to the side of the seat and connect them to the loop Velcro™ sewn in the side. Carefully move the seat bottoms up and make sure the action of the seat is not being interfered with. Some reconnecting of the Velcro™ may be needed to get the best fit. Lastly, connect the hook Velcro™ on top of the cover to the carpet on the back of the seat below the rear window.



Step 16. Driver and Passenger Bottoms/DB&PB:

With the seat bottoms tilted up slide the seat covers on with DB and PB up (labeled inside the seat cover). Turn the Velcro™ away from the carpet while sliding it down to keep it from attaching prematurely.

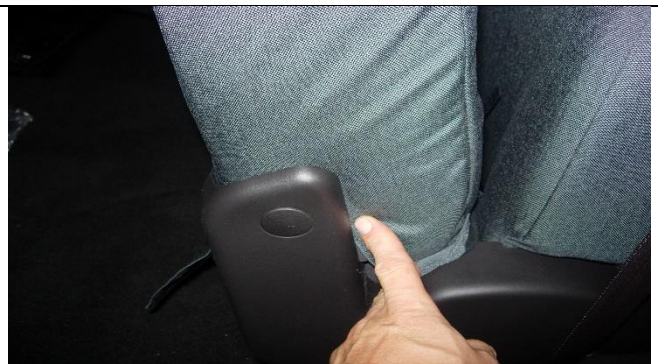

Step 17. Driver and Passenger Bottoms/DB&PB:

Tuck the fabric of the seat cover behind the plastic on the outside edge of the seat.



Step 18 Driver and Passenger Bottoms/DB&PB:

Tuck the back left and right of the seat covers around the back corners of the seat.



Step 19 Driver and Passenger Bottoms/DB&PB:

Tuck the hook Velcro™ into the seat and press them to the carpet under the seat. Do this by gently pulling the hook Velcro™ with one hand and use your other hand in a smoothing action from the front of the seat to the back.



Step 20. Driver and Passenger Bottoms/DB&PB:

Press the hook Velcro™ sewn inside the bottom edge to the carpet under the seat starting in the middle and work your way out.



Step 21. Driver and Passenger Bottoms DBPB:
Tuck the fabric behind the plastic under the seat on the outside edge.



Step 22. Armrest/A:
Slide the armrest covers on with the opening for the drink holders on top.



Step 23. Armrest/A:
Feed the pull strap from your armrest through the provided opening in the cover.



Step 24. Armrest/A:
Tuck the fabric under the plastic for the drink holders in front.



Step 25. Armrest/A:
Continue tucking the fabric along the sides, and then under the back of the plastic. The fit is very snug to avoid shifting.



Step 26. Armrest/A:
Tuck the fabric around the hinges on left and right and pull the cover all the way on. Tuck the hook Velcro™ under the front of the armrest and connect it to the loop Velcro™ sewn inside the back edge.