

2007-2014 Chevy/GMC Extended Cab Rear 60/40 Installation



Step 1. Driver and Passenger Top/DT&PT:

Temporarily remove the headrests. Lift the seat bottoms up to move the backrest away from the back of the cab. Next, wedge your left hand between the seat and the headrests holding gentle upward pressure and insert a paper clip (dead center) into the hole in plastic with your right hand until it releases. Keep holding upward pressure.



Step 2. Driver and Passenger Top/DT&PT:

While holding gentle upward pressure with your left and right hand insert a paper clip into the hole in the plastic on the right side and pull the headrest out evenly. The key is to not let the headrest posts slide back into the seat and catch. If so, keep releasing the posts until the headrests come out. They should easily slide out with out excessive force.



Step 3. Driver Top/DT:

Tuck the seat cover between the seat belt and the seat. All the parts of the seat cover are labeled inside. Use the seat cover piece identification chart to ID parts.



Step 4. Driver and Passenger Top/DT&PT:

Lift the seat bottoms up. Let the long hook (sticky) Velcro™ hang in front of the seat and tuck the seat cover behind the seat.



Step 5. Driver and Passenger Top/DT&PT:
Tuck the seat cover under the plastic for the headrests.



Step 6. Driver and Passenger Top/DT&PT:
Tuck the long left and right side hook Velcro™ into the seat.



Step 7. Driver and Passenger Top/DT&PT:
Grab the outside edge Velcro™ from under the seat and connect them to the loop Velcro™ sewn inside the sides of the seat cover.



Step 8. Driver and Passenger Top/DT&PT:
Slide the long loop Velcro™ behind the seat one at a time. Do it by moving the seat bottoms up and down while pushing the Velcro™ down as far as you can get them. Then lie on your back and reach up behind the seat (see step 7) and feel for them. Pull them down and connect them to the corresponding loop Velcro™ sewn inside the front edge. Re-connect the Velcro™ for the best fit.



Step 9. Driver and Passenger Bottoms/DB&PB:
Tip the seat bottoms part way up and slide the seat covers on with the DB&PB up on the seating surface. Tuck the seat cover behind the plastic.



Step 10. Driver and Passenger Bottoms/DB&PB:
Tuck the inside back part of the seat cover around the back corner of the seat.



Step 11. Driver and Passenger Bottoms/DB&PB:
Tuck the back edge of the seat cover into the seat and press the hook Velcro™ to the carpet on the back edge of the seat.




Step 12. Driver and Passenger Bottoms/DB&PB:
Tip the seat bottom all the way up. Press the hook Velcro™ to the carpet on the underside of the seat.



Step 13. Driver and Passenger Bottoms/DB&PB:
The material of the seat cover should meet at the bottom of the seat.



Step 14. Headrests/H:
Slide the cover on with the long hook Velcro™ to the front. You will need to compress the headrest to get it on.

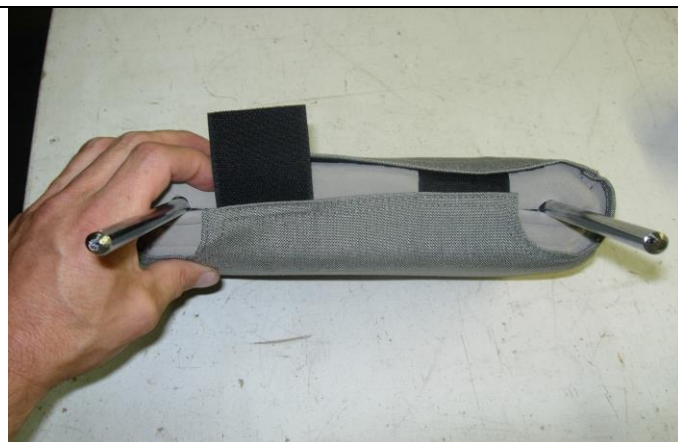

Step 15. Headrests/H: Connect the Velcro™ on the back edge.



Congratulations, you're done! Properly installed, this seat cover should be wrinkle free and stay put.