

## 2007-2014 2nd Row Bucket Seat Installation



### Step 1. Headrests/H:

All the parts of the seat cover are labeled inside. Use the seat cover piece identification chart to ID parts. Slide the headrest covers on with the extending hook (sticky) Velcro™ to the front. Line up the seams of the seat cover to the seams of the seat, they should closely match.



### Step 2. Headrests/H:

Remove the headrest same as the front seats. Use gentle upward pressure while depressing the push button release on the plastic and poke a wire into the hole in the other piece of plastic until it comes out. Tuck the hook Velcro™ under the back edge and press the loop Velcro™ to it as shown.



### Step 3. Driver & Passenger Top/DT&PT:

Slide the covers on with the extending hook Velcro™ to the front. Tuck the fabric under the plastic for the headrests.



### Step 4. Driver & Passenger Top/DT&PT:

Tuck in the front left and right side. AS in Step 1, line up the seams of the seat cover to the seams of your seat. Fold the seat back forward/flat.



**Step 5. Driver & Passenger Top/DT&PT:**  
Slide the Velcro™ under the armrest and press it onto the seat back.



**Step 6. Driver & Passenger Top/DT&PT:**  
Continue fastening all the hook Velcro™ to the carpet as shown.



**Step 7. Driver & Passenger Top/DT&PT:**  
Press the back edge Velcro™ onto the carpet on the seat back.




**Step 8. Driver & Passenger Bottom/DB&PB:**  
Place the seat covers on with the long Velcro™ to the front.



**Step 9. Driver & Passenger Bottom/DB&PB:**  
Tuck in the back edge of the cover, and line up the seams of the seat cover to the seams of the seat as Steps 1 & 4.



**Step 10. Driver & Passenger Bottom/DB&PB:**  
Tuck the left and right edges of the seat cover under the plastic. Line up the seams of the seat covers same as Steps 1, 4, and 9.

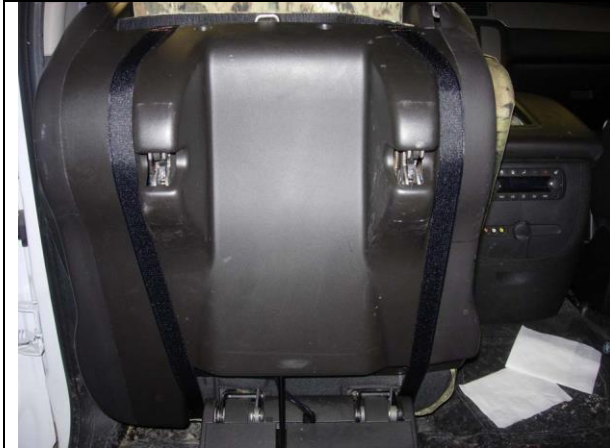

**Step 11. Driver & Passenger Bottom/DB&PB:**

Tip the seat bottom up, and route the long Velcro™ where shown, outside of the latches.



**Step 12. Driver & Passenger Bottom/DB&PB:**

Pull tight the Velcro™ and press them onto the carpet on the seat back.



**Step 13. Driver & Passenger Bottom/DB&PB:**

Pull the rear edge back and press the Velcro™ onto the carpet on the back edge.



**Step 14. Armrests/A:**

Recline the backrest and open the cover, sliding it on all the way to the top, forming around the front.



**Step 15. Armrests/A:**

Tuck the front side under and press the hook Velcro™ to the back side with one hand.



**Step 16. Armrests/A:**

Use the other hand to press the loop Velcro™ onto the hook Velcro™. The material should meet in the back.