


2009-12 Dodge Reg Cab 40-20-40 opening upper console w/non-opening middle bottom Installation



Step 1.
Prepare the driver and passenger seat for installation by temporarily removing the headrests. Recline the backrests and depress the two push button releases shown while holding gentle upward pressure.



Step 2.
(View from under the back of the seat bottom.)
Temporarily unhook both plastic pieces sewn to the elastic straps by pushing them forward. Use caution reaching under the seat and avoid sharp metal edges.

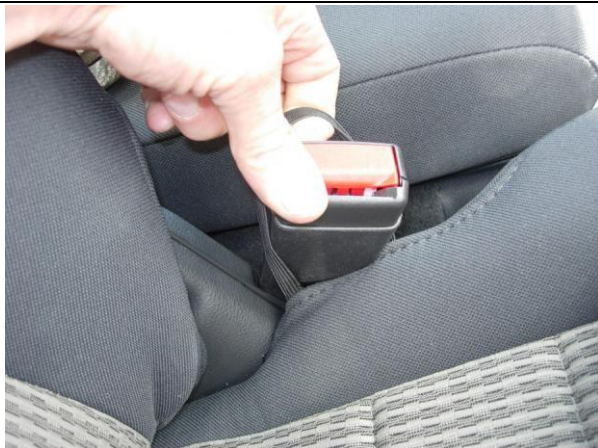

Step 3.
Remove the seat belt from the elastic on the inside edge of the driver and passenger seat bottoms.



Step 4. Driver & Passenger Bottoms/DB&PB:
All the parts of the seat cover are labeled inside. Use the Seat Cover Piece Identification Chart to ID parts. Tuck the back edge of the seat cover into the seat. Next, route the long hook (sticky) Velcro under the front of the seat where shown, avoiding any seat mechanisms.



Step 5. Driver & Passenger Bottoms/DB&PB: Slide the long outside edge hook Velcro™ in as shown between the plastic and the seat, then put the seat belts through the elastic on the inside of the seat cover.



Step 6. Driver & Passenger Bottoms/DB&PB: Line up the seams of the seat cover to the seams of the seat, they should match closely. Then, tuck the outside edge in as shown.



Step 7. Driver & Passenger Bottoms/DB&PB: Mate the long front edge hook Velcro™ to the loop Velcro™ sewn on the back edge. Route the outside edge hook Velcro™ from Step 5 at an angle and connect it to the loop Velcro™ sewn on the back edge. Use one hand in a smoothing action from front to back along the outside edge and top of the seat cover while pulling on the back of the seat cover, then tightening the Velcro™.



Step 8. Driver & Passenger Bottoms/DB&PB: View from the inside edge of the passenger bottom next to the middle bottom. Press the two hook Velcro™ sewn inside the seat cover to the carpet on the seat. Like step 7, slide one hand from front to back along the inside edge while pressing the Velcro™ to the carpet to remove any slack in the seat cover.



Step 9. Driver & Passenger Bottoms/DB&PB:
Connect the plastic hooks under the back edge of the seat to the metal bar, and then mate hook Velcro™ to the loop fastener sewn on the back edge. This will keep the seat cover from shifting around.



Step 10. Driver & Passenger Top/DT&PT:
Slide the seat covers on with the extending hook Velcro™ to the front. Tuck the fabric under the plastic on the outside edge of the seat. Like Step 6, line up the seams of the seat cover to the seams of the seat.



Step 11. Driver & Passenger Top/DT&PT: Tuck the fabric under the plastic of the headrests starting with the push button side as shown.



Step 12. Driver & Passenger Top/DT&PT: Tuck the hook Velcro™ into the seat, slide the seat forward and tip the backrests forward.



Step 13. Driver & Passenger Top/DT&PT:
View from under the back of the seats. Route the long hook Velcro™ on left and right, over the metal rod that runs front to back. Note: the Velcro™ will get crinkled when it's run over the bar and tightened. Feed the center Velcro™ over the metal rod.



Step 14. Driver & Passenger Top/DT&PT:
Use one hand in a smoothing action down the front of the seat, pull the fabric down in back and hold it to the seat while you pull the Velcro™ forward over the bar, then bring it back and connect the Velcro™ as shown. It might take a couple tries before you get it tight.



Step 15. Driver & Passenger Top/DT&PT:
Re-connect the plastic clips under the seat. Route the 1"x12" loop Velcro™ over the same metal bar used in Step 13 and pull both ends out to the back.



Step 16. Driver & Passenger Top/DT&PT:
Press the loop Velcro™ to the backrest.



Step 17. Driver & Passenger Top/DT&PT:

While holding the loop Velcro™ tight to the seat, pull down and press the back edge hook Velcro™ of the seat cover to the loop Velcro™ as shown.



Step 18. Middle Bottom/MB:

Temporarily remove the seatbelts from the elastic. Line up the seams of the seat cover to the seams of the seat, and then pull back and press the hook Velcro™ on left and right to the carpet on the back edge of the seat.



Step 19. Middle Bottom/MB:

Route the side hook Velcro™ in front of the metal brace and to the back side of the middle bottom.



Step 20. Middle Bottom/MB:

Press the back edge of the seat cover onto the side hook Velcro™ as shown. Lastly, push the seat belts through the provided elastic loops on the seat cover.



Step 21. Console/C:

With the console in the up position, slide the console cover on and tuck it in on the bottom. Fold the console down, holding it in position with one hand. Note where the Velcro™ will lay inside the cavity. Fasten the right side and left side rear hook Velcro™ to the carpet behind the console hinge.



Step 22. Console/C:

Clean the surface with rubbing alcohol. Peel off the backing from the adhesive hook Velcro™ and stick them to the plastic on the inside of the console. If they are not sticking, stop and re-clean the areas. Keep truck at 68 degrees or warmer for at least 24 hrs. if possible for best results.



Step 23. Lid/L:

Connect the Velcro™ under the console lid. Tuck the loop Velcro™ sewn on the back edge, under the console cover, connecting the Velcro™ with a 1/4" gap.



Step 24. Headrests/H:

Slide the cover on with the extending hook Velcro™ to the front. Line up the seams, and connect the Velcro™ as shown.