

## 2010-2022 Dodge Mega Cab Rear 40-60 Installation



**Step 1. Driver & Passenger Bottoms/DB&PB:**  
Temporarily remove the plastic handles on the outsides of each seat bottom by sliding the retaining clip off the handle. Keep one finger in front of it so it doesn't go flying off into Never Never Land. Set handle aside.



**Step 2. Driver & Passenger Bottoms/DB&PB:**  
All the parts of the seat cover are labeled inside. Use the seat cover piece identification chart to ID parts. Place the seat cover bottoms on with the extending hook (sticky) Velcro™ to the front.



**Step 3. Driver & Passenger Bottoms/DB&PB:**  
Line up the seams of the seat cover to the seams of the seat, they should closely match. Route this long outside edge hook Velcro™ at an angle to the carpet on the back edge of the seat. Do it by sliding one hand down the side of the seat cover from front to back while gently pulling on the Velcro™ from behind. Line up the hole for the lever and put the lever back on.



**Step .4 Driver & Passenger Bottoms/DB&PB:**  
Route the long hook Velcro™ under the front of the seat to the back edge of the seat bottom and connect them to the carpet on the back of the seat bottom.



**Step 5. Driver & Passenger Bottoms/DB&PB:**  
Tuck in the back edge of the seat cover, keeping it inside out until you wrap the seat cover around the back corners. Then, use one hand in a smoothing action from front to back on the top of the seat cover while pulling on it from behind, connecting the hook Velcro™ sewn inside to the carpet on the seat.



**Step 6. Driver & Passenger Top/DT&PT:**  
Temporarily and carefully remove the headrests using the push button release on the plastic.  
Driver Top: Carefully open the bottom, back, and armrest cavity of the seat cover. Slide the armrest through the provided opening as shown.





**Step 7. Passenger Top/PT:**  
Tuck the Velcro™ under the armrest.



**Step 8. Passenger Top/PT:**  
Tuck the seat cover behind the plastic for the armrest.



**Step 9. Passenger Top/PT:**  
Connect the Velcro™ behind the armrest.



**Step 10. Passenger Top/PT:**  
Tuck the fabric under the plastic for seatbelt.



**Step 11. Driver & Passenger Top/DT&PT:**  
Tuck the fabric under the plastic for the headrests.



**Step 12. Passenger Top/PT:**  
Press the hook Velcro™ to the carpet under the seatbelt.




**Step 13. Passenger Top/PT:**  
Starting at the top, Connect the Velcro™ below the seatbelt.



**Step 14. Passenger Top/PT:**  
Continue connecting the Velcro™ using slight downward pressure, all the way to the bottom.



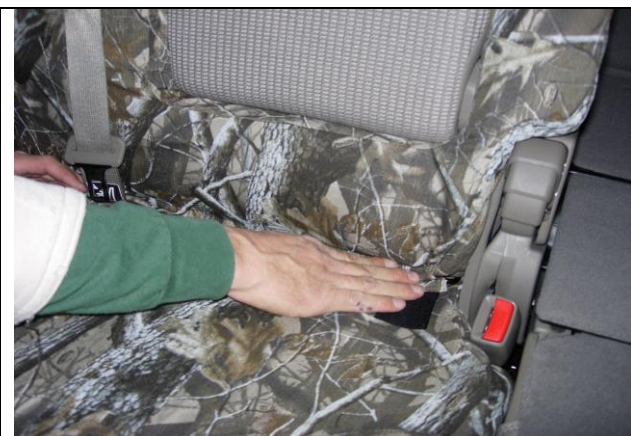

**Step 15. Driver & Passenger Top/DT&PT:**  
Tuck the hook Velcro™ into the seat and fold the backrest forward.



**Step 16. Driver & Passenger Top/DT&PT:**  
Connect the Velcro™ in back using one hand in a smoothing action down the front of the seat cover from top to bottom while gently pulling on the Velcro™, and then tucking it under, connecting the Velcro™.




**Step 17. Armrest/A:**  
Slide the cover on with the cut-out on top. Tuck the fabric under the plastic for the drink holders and tuck in the front.



**Step 18. Armrest/A:**  
Connect the Velcro™ behind the armrest starting on one side moving to the other.



**Step 19. Headrests/H:**  
Slide the cover on with the extending hook Velcro™ to the front. Connect them to the loop Velcro™ in back.

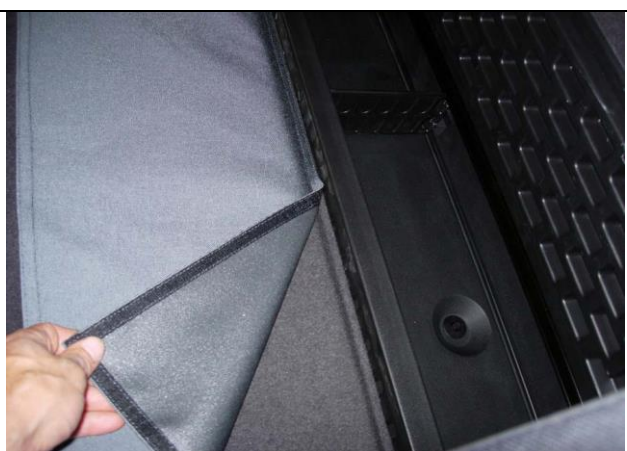

**Step 20. Driver & Pass. Cargo area/PCF,DCF,PST,DST.**  
Press the hook Velcro™ to the carpet on the panels, aligning the cut-outs for the storage compartment handles.