

2014-2019 Chevy/GMC Crew Rear 60-40 W/Arm Installation



Step 1. Seat preparation.

This Installation can be seen on our YouTube channel.

The link is: <https://youtu.be/iIXJ0S26SqE>

Temporarily release the headrests by gently lifting up and holding pressure while inserting a heavy paper clip or small allen wrench into the each of the holes in each of plastic for the headrests.



Step 2. Headrests/H:

All the parts of the seat cover are labeled on the inside right front corners. Use the seat cover part identification chart to ID parts. Slide the cover on with the extending hook Velcro™ to the front. You'll have to compress the slightly in order to get it on. Don't worry, it'll relax back once pulled into position.



Step 3. Headrests/H:

Line up the seams of the cover to the seams of the headrest, they should match closely. Tuck the hook Velcro™ under the back edge and press the Velcro™ together.



Step 4. Driver & Passenger Top/DT&PT:

Lift the seat bottoms up and carefully disconnect the Velcro™ on the seat cover. Tuck the seat cover under the plastic for the headrests keeping the top Velcro™ turned inside out so it doesn't connect to the backside of the seat. Start with the Passenger Top.



Step 5. Driver & Passenger Top/DT&PT:

Tuck the Velcro™ into the seat and tuck the inside front corners of the cover in next to the plastic. Slide your hand down the left side (In between the driver & passenger backrests) and smooth the side of the seat cover. It will be tight between the seats, but start on the top forming the seat cover to the seat, then sweep your hand down the side of the seat.



Step 6. Driver & Passenger Top/DT&PT:

Tuck in the outside front corner in same as Step 5.



Step 7. Driver & Passenger Top/DT&PT:

Lift the seat bottoms up and make sure all the Velcro™ is pulled through to the bottom. Notice the small 1" X 12" Velcro™ on the outside edges. They connect to the sides of the seat cover shown in Step 8.



Step 8. Driver & Passenger Top/DT&PT:

Working on the passenger inside edge. While laying on your back, pull the small 1" hook Velcro™ up between the driver and passenger backrests with your right hand, then with your left hand, push the left side of the seat cover back, connecting the Velcro™ on the side. This is a tough maneuver so be prepared to make a couple attempts as you tighten it up..



Step 9. Driver & Passenger Top/DT&PT:
View from under the seat on the passenger seat, outside edge of the seat. Slide the 1" hook Velcro™ straight up where shown, up next to the metal plate and your seats fabric.



Step 10. Driver & Passenger Top/DT&PT:
Routed properly the Velcro™ will appear above the plastic cowling. Pull it tight and connect the hook Velcro™ to the loop Velcro™ sewn in the side of the seat cover.



Step 11. Driver & Passenger Top/DT&PT:
Fold the Velcro™ in half lengthwise with the sticky part facing inward. This will stiffen the Velcro™ up.



Step 12. Driver & Passenger Top/DT&PT:
In a sitting position, slide the long front Velcro™ up behind the seat and feel for it with the other hand.



Step 13. Driver & Passenger Top/DT&PT:
Grab the Velcro™ from the topline and pull up, pressing it to the carpet on the backside of the seat. To tighten the seat cover, slide one hand down the front of the cover while pulling the slack out from under the seat, then reconnect the Velcro™ on top.



Step 14. Driver & Passenger Top/DT&PT:
Pull the back edge down and press the Velcro™ to the carpet on the backside of the seat top.



Step 15. Driver Top/DT:

Pull the seat belt forward and tuck the seat cover behind it.



Step 16. Driver Top/DT:

Follow Steps 4-14, making sure to line the opening for the armrest on top, bottom and the sides. Tuck the seat cover between the seat and the plastic hinge.



Step 17. Driver Top/DT:

Tuck the bottom edge under the armrest. Keep pushing it in until you push the rope sewn inside the seat cover under the plastic cowling behind the armrest.



Step 18. Driver Top/DT:

As in Step 17, tuck both sides behind the plastic cowling.



Step 19. Driver Top/DT:

Tuck the top edge in by pulling the plastic away slightly and tuck the rope behind the plastic. Using a shoe horn or similar tool will help tuck in the top corners.




Step 20. Armrest/A:

Slide the armrest cover on with the hook Velcro™ to the front and the opening on top. Feed the strap for the armrest through the provided opening. Pull the cover down, tuck the fabric under the front of the plastic.




Step 21. Armrest/A:
Tuck in the sides and back under the plastic.

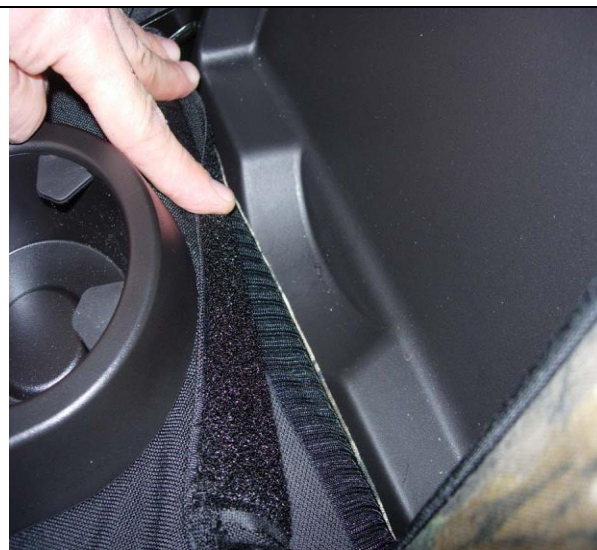

Step 22. Armrest/A:
Lift the armrest up and tuck the front edge in. Pull the front edge up and connect the Velcro™.



Step 23. Driver & Passenger Bottom/DB&PB:
Slide the covers on with the abbreviations "DB & PB" to the top side of the seat. Line up the seams of the seat cover to the seams of the seat, they should closely match.

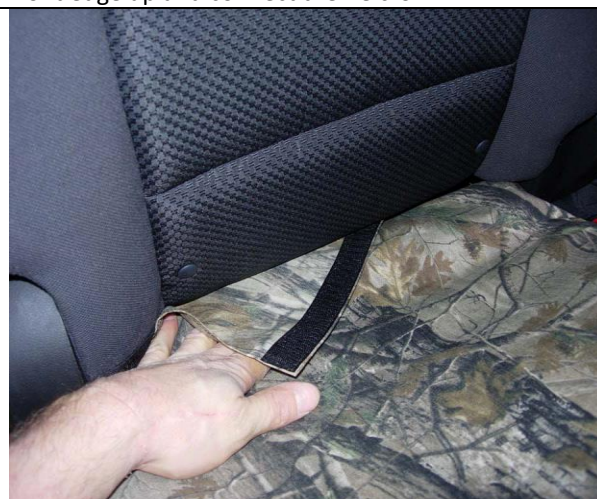

Step 24. Driver & Passenger Bottom/DB&PB:
Fold the seat down, tuck the back edge in and lift the seat bottom up.
Changes were made to the factory upholstery. Modifications were made to the seat cover. The seat cover does not have the Velcro™ sewn on as shown in the picture, it will have 1"X3" extending hook Velcro™.



Step 25. Driver & Passenger Bottom/DB&PB:
View from under the passenger seat bottom. As mentioned in Step 24, the seat cover has been modified and does not look like this. The seat cover will have 1'X3" extending hook Velcro™ that fastens under the seat bottom to the carpet fuzz as shown in Step 27.



Step 26. Driver & Passenger Bottom/DB&PB:
Tuck the seat cover behind the plastic cowl on the outside edge of the seat.



Step 27. Driver & Passenger Bottom/DB&PB:
Pull this small hook Velcro™ to the underside of the seat and press it to the carpet under the seat.



Step 28. Driver & Passenger Bottom/DB&PB:
Lastly, press the remaining hook Velcro™ to the underside of the seat.