

## 2015-2022 Colorado Crew 60/40 w/Arm



**Step 1. DB/PB: Driver & Passenger Bottoms**  
All pieces are marked with a letter on the inside of the cover. There will be a sheet provided that shows what each letter belongs to. Disconnect the Velcro and lay the cover out on the seat. Start to form the cover to the seat. Make sure to match the seams of the cover with the seams of your seat.



**Step 2. DB/PB: Driver & Passenger Bottoms**  
Take the top flap and tuck it in-between the backrest and seat bottom.  
*If you have holes in your covers for child restraints, make sure you line the holes up with the restraints.*



**Step 3. DB/PB: Driver & Passenger Bottoms**  
Now, fold the seat up and reach for the Velcro you just tucked to the back. Pull the material tight and paste the Velcro to the fuzzy carpeting that is on the underside of your seat.



**Step 4. DB/PB: Driver & Passenger Bottoms**  
On the sides of your cover you will notice some shorter Velcro straps. Take these, pull tight and paste them to the underside as well.



**Step 5. DB/PB: Driver & Passenger Bottoms**

On the inside of the cover there are also some small pieces of Velcro sewn on the inside of the cover. Pull that edge of the cover around the bottom and attach it to the carpeting too.



**Step 6. DB/PB: Driver & Passenger Bottoms**

Lastly, you'll want to take the long Velcro hanging off the front of the cover and attach them. Make sure to pull them nice and tight. As you attach them to the carpeting make sure you follow the groove on the underside of the seat. This will allow the seat to set down correctly.



**Step 7. H: Headrests**

Slip the cover onto the headrests with the extending Velcro on the front. Make sure the seams of the headrest are lining up with the seams of the cover.



**Step 8. H: Headrests**

Lift the headrests up a bit and push the button on the plastic ring around the pegs. Lift until the headrest is released. If you don't have enough room to get the headrest out, just push the button on the side of the headrest to make your headrest topple. Making it easier to pull out.



**Step 9. H: Headrests**

Once you get the cover where it needs to be, take the extending Velcro and connect it to the Velcro on the opposite side.



**Step 10. H: Headrests**

Flip the headrest over to the button side. Push down on the material around the button and it should slip right underneath the plastic



**Step 11. DT: Driver Top**

Before we begin the backrest, we highly suggest detaching your middle seatbelt. While it is not required, it will make for less hassle in the long run. Take a solid thin object and push down on the grey button shown. Make sure to hold onto the seatbelt so it doesn't snap back at the rear glass.



**Step 12. DT: Driver Top**

Take the cover and detach all the Velcro. Now, find the hole in the backrest for the armrest to slip through and proceed to stick the armrest through.



**Step 13. DT: Driver Top**

Once the armrest is through, go ahead and pull the tab on your seat so that the backrest folds forward. Take the seat cover and start pulling the cover over the seat. You need to start on the side with the armrest and work your way toward the driver side door.



**Step 14. DT & PT: Driver & Passenger Tops**

Once the cover is over the other edge start pulling it down.

**IMPORTANT:** Before you get the cover all the way down, make sure you find your pull tab. Take the tab and fish it through a small opening at the top of the cover.

*If you don't do this and latch your seat to the cab again. It will be very difficult to get the tab out from under the cover.*



**Step 15. DT & PT: Driver & Passenger Tops**

Once the cover is pulled down, the plastic headrest slots can be slipped through.

**IMPORTANT:** *On the push button plastic, make sure you start pulling it through on the push button side. If you start on the other side, it will put a bunch of pressure on the button and potentially brake it.*



**Step 16. DT: Driver Top**

Before you go to the back of the cover, you need to check your corners. Make sure the bottom corners of the front portion are pulled around the edges correctly.




**Step 17. DT & PT: Driver & Passenger Tops**

Take the front flap and tuck it in-between the seat top and bottom.



**Step 18. DT: Driver Top**

On the door side of the cover, you'll find Velcro extending off of the side. Pull the side down and fold the extending Velcro to the back. While holding the Velcro, take the back flap and lay it onto the Velcro, connecting them. The Velcro should be completely covered.

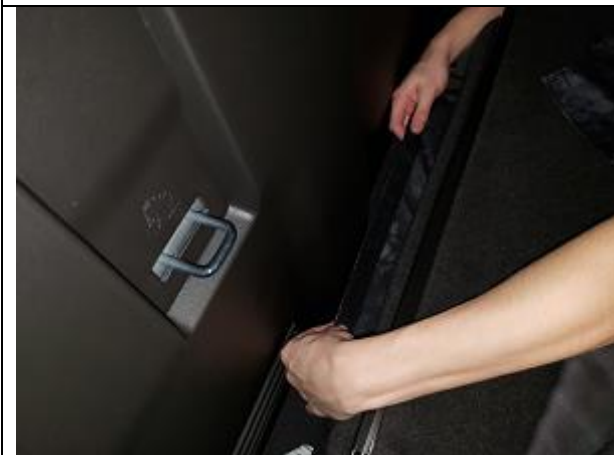

**Step 19. DT & PT: Driver & Passenger Tops**

Take the flap that you tucked between the seats and pull tight. Paste it to the fuzz on the seat.



**Step 20. DT & PT: Driver & Passenger Tops**

Take the back flap, pull it down tight, and paste it to the fuzz as well.



**Step 21. DT: Driver Top**

Flip your seats back up. Under the armrest is some extending Velcro that needs to be tucked under and behind the armrest. Lay the Velcro flat against the back of the arm encasement.



**Step 22. DT: Driver Top**

Above the arm is another flap. This needs to be shoved down behind the arm and attach to the extending Velcro from the bottom flap.



**Step 23. A: Armrest**

Take the cover and start pulling it on. Make sure to line up the seam of the cover up with the seams of the armrest.



**Step 24. A: Armrest**

As you pull the cover on make sure to tuck the material under the plastic.



**Step 25. A: Armrest**

Once the cover is pulled on, tuck the underside of the cover up and behind the arm.



**Step 26. A: Armrest**

Take the extending Velcro from the top of the arm and attach it to the Velcro from the bottom flap.



**Congratulations!**

You installed the covers!