

2019-2022 Chevy/GMC 60/40 with Arm and No Storage



Step 1. DB/PB:
All pieces are marked with a letter on the inside of the cover. There will be a sheet provided that shows what each letter belongs to. Pull the cover over your seat bottom with the extending Velcro on top. As your pulling it on, you'll want to match the seams of the cover with the seams of the seat.



Step 2. DB/PB:
Once you get it positioned on there, tuck the extending Velcro in-between the seat bottom and backrest. Make sure you don't cover up any seat buckles.



Step 3. DB/PB:
Lift the seat up. Now, pull tightly on the fabric and connect the extended Velcro to the fuzzy carpeting on the bottom of your seat. Pull down on the other side of your cover and connect it to the fuzz as well.



Step 4. MH:
Pull on the cover to the middle headrest with the extending Velcro on the front. It may help to get the cover on and adjusted while it's still connected to the seat. Again, we are looking to match the seams together.



Step 5. MH:
Now, we have to release the headrest from the seat. On the plastic circles underneath the headrest, are bush buttons. Push both in and pull up on the headrest.



Step 6. MH:
Make any final adjustments needed and take the extended Velcro and connect it to the Velcro on the opposite side.



Step 7. H:
Similar to steps 4 and 5, pull your cover on and release it. If the headrest is too tall for you to pull out. Push the button on the side and topple the headrest forward before pulling it out.



Step 8. H:
Make sure that when you are putting the cover, you line up the button with the opening provided. Push the fabric under the plastic button. Now, connect the Velcro.



Step 9. T:

Disconnect any Velcro. Set the Velcro with clips aside for later. Notice the cutouts for the headrest plastics at the top of the cover. Lift your middle seatbelt away from the seat and shove our cover behind it. Lay the cover onto the backrest.




Step 10. T:

Go ahead and start pushing all the headrest plastics through their respective openings. ***Important: Make sure that when you are pushing them through, you start with the push button side first. If you start with the wrong side and try to pull the cover over the button, you have a chance of snapping the button off.**



Step 11. T:

Pull the corner edges of the cover around the edges of the seat and start forming the cover to the seat. The top edge flap of the cover doesn't connect to anything. Once the headrest plastics are pushed through the flap tuck behind the seat.

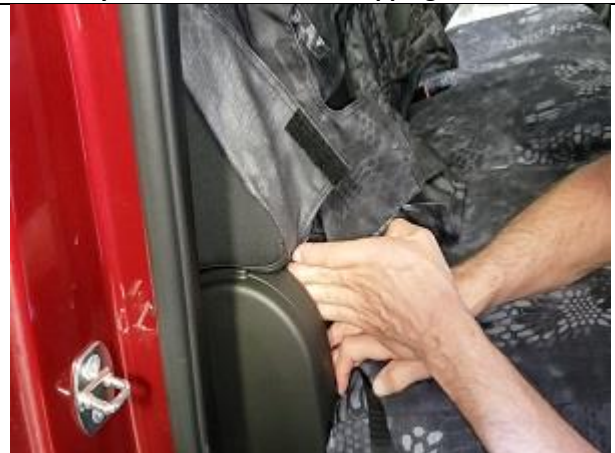

Step 12. T:

As you continue to form the cover, you'll notice some plastic near the bottom of the backrest. The cover needs to be tucked behind it.



Step 13. T:

Now, take the bottom edge of the cover and push it through the space between the backrest and seat bottom.



Step 14. T:

Lift your seats up. At the corner edges that you shoved through, there is a long piece of Velcro. Take that Velcro and fold it in half long ways. You have to feed this up the back and around the inside of the plastic.



Step 15. T:

The easiest way to feed that up is reaching behind your child restraints. There should be plenty of space in-between the child restraints to stick your hand back behind the outside restraint. Now, take the folded Velcro and pass it to your hand. Take that Velcro and start feeding it upwards and toward the outside of the seat.



Step 16. T:

Look at the outside edge of your seat, above the plastic, and you should be able to see the Velcro poking through. You need to take your free hand and finish pulling it through.



Step 17. T:

Lay the hook Velcro you just pulled up and pull it tightly. Hold it against the back edge of your seat with the hook facing your door. There is a flap with some Velcro on that same side. Take the flap, pull tight, and attach it to the hook Velcro.



Step 18. T:

On the bottom inside corner, you'll notice another bit of loop Velcro sew to the inside of the cover. This is where we use the Velcro with the clips. Take the clip Velcro and you'll have to attach it to a metal bar on your framework as shown.



Step 19. T:

Once clipped, pull both the clip Velcro and the material tight and attach them together.



Step 20. T:

With everything tight, it's time to work on the encasement around the armrest. Take the armrest and fold it down slightly. Shove the bottom flap of the cover underneath the arm.



Step 21. T:
You'll need to go around the edges and tuck them behind the plastic inside your encasement.



Step 22. T:
If you are having a tough time doing this by hand, try using a rounded flat object or dull butter knife to tuck the edges in.



Step 23. A:
The armrest cover pulls over the arm with an opening for both the drink holder and your pull tab.



Step 24. A:
As your pulling your cover into position, make sure to match the seams up and pull your tab through the opening.



Step 25. A:
Once the cover is pulled down all the way. You'll want to tuck the front edges into the encasement area.



Step 26. A:
Fold the arm down grab the edge and pull up tightly.



Step 27. A:

Take the two sides of the cover and connect them.

Congrats!

You have installed your covers!

If these instructions weren't quite good enough for you, check out the video installation on YouTube:

<https://youtu.be/8ZNv-43NNYA>

***The Video will be showing the install for storage areas in the seat. This is not part of your seat. Just ignore this section.**