

1992-1998 Ford Bench w/ Armrest Installation



Step 1. Bottom/B:
Remove this screw from the plastic.



Step 2. Bottom:
Tip the seat forward, lift the upholstery and remove this screw.



Step 3. Bottom:
Remove this 5/16" stud bolt on both sides. Wipe off any grease or dirt on the metal arms after removing it from the bottom.



Step 4. Bottom:
Temporarily remove the plastic cup holders by lifting up to expose these bolts. Use a # 25 Torx bit to remove them.



Step 5. Top:
Temporarily remove the headrests by pushing the material down to expose this clip. Lift the headrests up all the way and keep gentle upward pressure while pulling back on both clips until you feel them release. Don't try to remove the clips.



Step 6. Bottom:
Place the seat cover on with the long hook (sticky) straps to the front as shown. Route the straps under the seat, avoiding the seat mechanisms and the slide release wire. Mate them to the carpet on the back edge of the seat.



Step 7. Bottom:
Center the cut out for the seat belts.



Step 8. Bottom:
Pull the sides of the seat cover back and line up the hole for the backrest bolt.



Step 9. Bottom:
Pull the side flap around to the back and mate it to the carpet on the back edge of the seat.




Step 10. Bottom:
Route the long outside edge hook strap to the carpet on the back edge of the seat. Lastly, mate the hook strip sewn inside the back edge of the seat cover to the carpet on the back of the seat.



Step 11. Bottom:
Route these two outside edge ropes under the seat.



Step 12. Bottom:
Run the ropes around one of the wires that support the seat's foam and tie it back to the loop where the rope is sewn on. Be careful to not over tighten the ropes and cause damage to the wire. Bolt the backrest to the bottom and put the plastic on.

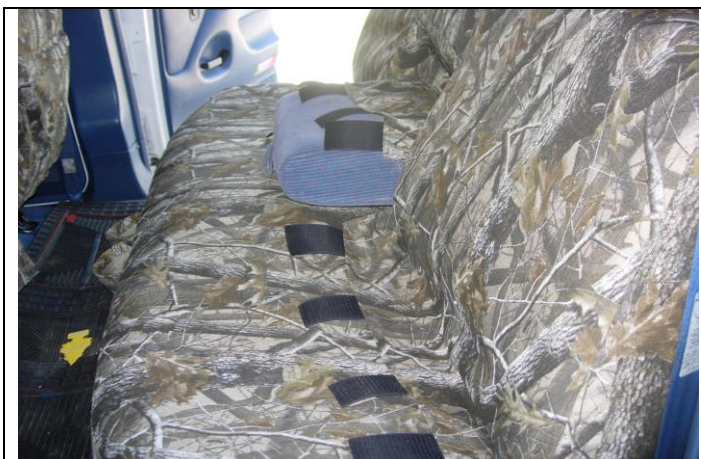

Step 13. Top/T:
Fold the armrest part way down and slide the seat cover on with the long hook straps to the front and tuck the armrest through the opening.



Step 14. Top:
Tuck the material in around the sides of the armrest.



Step 15. Top:
Line up the top seam to the top of the armrest opening so the armrest can tuck into the seat.



Step 16. Top:
Tuck the seat cover material under the plastic for the headrests.



Step 17. Top:
Tuck the hook straps into the seat. Tipping the seat forward will help do this.



Step 18. Top:
Route the hook straps between the seat and the wide black metal bar and mate them to the loop strip sewn inside the back edge.



Step 19. Armrest/A: Slide the armrest cover on with the long hook straps to the front and mate them to the loop strip sewn on the back edge as shown.



Step 20. Headrests/H: Slide the headrest covers on with the long hook straps to the front and mate them to the loop strip sewn inside the back edge as shown.



This seat is covered in Realtree Hardwoods HD 1000 Denier Cordura. This is a full coverage seat cover with two beverage holders in front and two gun scabbards behind the backrest.