


1999-2007 F-250-550 Super Cab Rear 40-60 Bottoms/Bench Top Installation



Step 1. Top/T:

Temporarily remove the backrest by lifting up. Place the seat cover on with the long 2" wide hook (sticky) Velcro™ to the bottom of the seat.

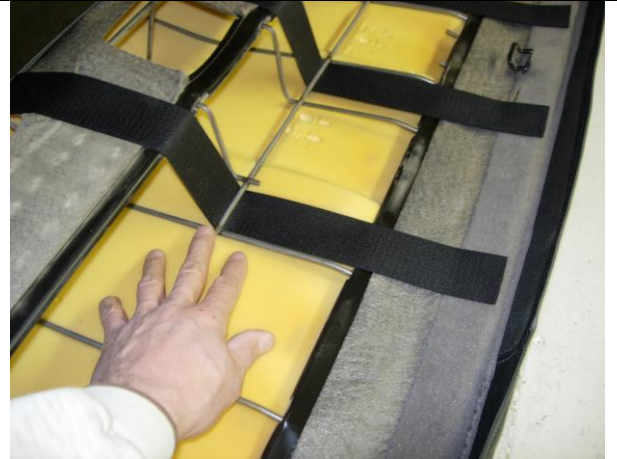

Step 2. Top:

Position the seat cover by lining up the side seams of the seat cover with the seams of your seat, they should closely match. Route the long hook Velcro™ under the metal bar and press them to the carpet on the top back of the seat as shown.



Step 3. Top:

Route the left and right top side loop (fuzzy) Velcro™ where shown, under the 2" wide hook Velcro™ connecting to it and under the metal bar.



Step 4. Top:

Wrap it around the top of the hook Velcro™ and connect it again to the hook Velcro™ back at an angle.



Step 5. Top:

Connect the two left and right bottom side loop Velcro™ to the long hook Velcro™ as shown.



Step 6. Top:

Lastly, pull the seat cover down, removing the slack, and connect the hook Velcro™ sewn inside the top edge to the carpet on the top back of the backrest.



Step 7. Passenger Bottom/PB:

Remove the seatbelts from their elastic restraints in the middle of the seat.



Step 8. Driver and Passenger Bottom/DB & PB:

Cargo Net with no seat carpet shown in picture. Slide the seat covers on with the extending hook Velcro™ to the top and the 2" wide loop Velcro™ to the bottom. Tuck the fabric behind the latch on the outside edges. With the seat partway up use one hand in a smoothing action from front to back to remove slack from the seat cover, connecting the hook Velcro™ to the loop Velcro™.

Seat carpet:

Follow same directions except press the hook Velcro™ to the carpet on the bottom of the seat.