

2011-2016 F-250-350 XLT & Lariat Super Crew Rear 60/40 Installation



Step 1. Driver and Passenger Tops:

Temporarily remove the headrests. Do this by first lifting the headrests up all the way using the visible plastic push button release. Hold gentle upward pressure and simultaneously depress the visible release button and the hidden release button on the other plastic piece until the headrest releases.



Step 2. Driver and Passenger Tops:

Driver's side; Tilt the armrest forward and slide the seat cover with the extending hook (sticky) Velcro™ to the front, tucking the armrest through the provided opening. Note, the center seatbelt is moved out of the way, no special opening is needed.
Passenger side; Slide the seat cover on with the extending hook Velcro™ to the front



Step 3. Driver and Passenger Tops:

Tuck the fabric of the seat cover under the plastic for the headrests.




Step 4. Driver and Passenger Tops:

Fold the backrest forward and connect the Velcro™ below the seat release levers on the outside edge of each backrest.



Step 5. Driver Top:

Tuck the fabric under the armrest and along the sides. Be sure to tuck the fabric in and around the hinge area in a manner that does not impede the armrest movement.

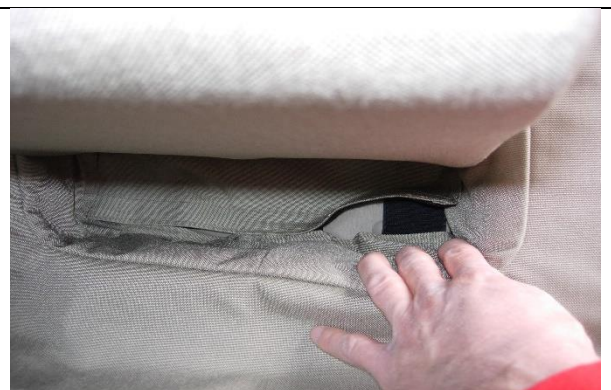

Step 6. Driver Top:

Line up the seams of the seat covers armrest opening to the opening for the armrest, the top being the most important. Fold the armrest down and connect the Velcro™ in back.



Step 7. Driver and Passenger Tops:

Line up the seams of the seat cover with the seams of your seat along the left and right sides of each backrest, they should closely match. Tuck the hook Velcro™ into the seat and fold the backrest down. Pull tight and connect the hook Velcro™ to the loop (fuzzy) Velcro™ sewn inside the back edge working from one side to the other.



Step 8. Driver and Passenger Tops:

Pull the inside edge of the seat cover down and press the hook Velcro™ sewn inside to the carpet on the seat as shown.



Step 9. Armrest:

Slide the armrest cover on with the opening on top and feed the factory pull tab for the armrest thru the provided opening in the cover. Fold the armrest down and tuck the fabric under the plastic starting in front. Line up the seams of the cover to the seams of the armrest on the left and right sides. Tuck the hook Velcro™ under the armrest and connect them to the loop Velcro™ sewn inside the back edge.



Step 10. Headrests:

Slide the headrest covers on with the extending hook straps to the front. Line up the seams on left and right and connect the Velcro™ in back as shown.



Step 11. Driver and Passenger Bottoms:

Remove the seat belts from the elastic straps. Using the side release lever, lift the seat bottoms partway up. Slide the seat cover on with the extending hook Velcro™ up and line up the seams.



Step 12. Driver and Passenger Bottoms:

Lift the seat bottom up. Press the hook Velcro™ to the carpet on the underside of the seat starting with the extending hook Velcro™ on top, then the bottom. Place the seat belts thru the seat cover's elastic.