

2004-06 Tundra Double Cab Rear 60/40 Installation



Step 1. Driver and Passenger Bottom/DB&PB: Place the seat cover on with the long hook (sticky) Velcro™ to the front. Driver only: Open the Velcro™ for the seatbelt then reconnect them behind the seatbelts as shown. Tuck the back edge of the seat cover into the seat, but don't fasten it yet.




Step 2. Driver and Passenger Bottom/DB&PB: Work the material of the seat cover out from the forefinger to the thumb all the way around the seat cover.



Step 3. Driver and Passenger Bottom/DB&PB: **Cloth seats:** Route the long hook Velcro™ under the seat and press them to the carpet on the back edge of the seat. Route the long outside edge Velcro™ where shown to the carpet on the back edge. **Leather seats:** Connect the hook Velcro™ to the loop Velcro™ sewn on the back edge of the seat cover.



Step 4. Driver & Passenger Bottom: /DB&PB: **Cloth seats** , tuck the back edge into the seat, pull it back hard. press the back edge Velcro™ onto the carpet on the back edge of the seat. **Leather seats** have no carpet fuzz, see Step 3.

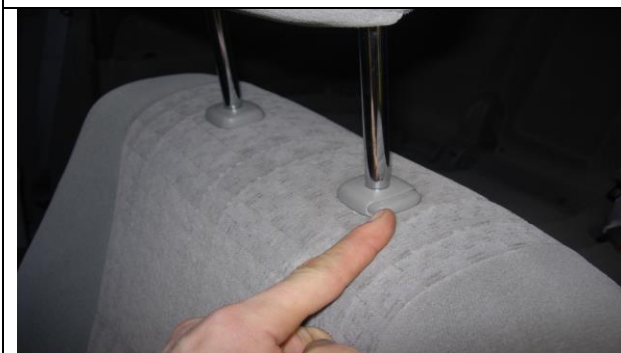

Step 5. Driver and Passenger Tops/DT&PT: Remove the headrests depressing the push button and gently lifting up.



Step 6. Driver's Top/DT: Open the seat cover, tuck it behind the seatbelt, and around the armrest.



Step 7. Driver's Top/DT:
Fold the seat flat and pull the seat cover around to the back, and then tip the backrest up.



Step 8. Driver's Top/DT:
Tuck the fabric under the plastic for the headrests and the center mounted seatbelt.



Step 9. Driver's Top/DT:
Tuck the hook Velcro™ and fabric under the armrest by tipping the armrest down and pulling them up. Tuck the sides of the around the hinge area.



Step 10. Driver's Top/DT:
With the hook Velcro™ pulled up as shown, press the back part of the armrest cavity to the hook tabs. The material should meet at the bottom.



Step 11. Driver's Top/DT:
Connect the Velcro™ in the back of the seat starting at the top, working your way to the bottom a few inches at a time. Tuck the fabric under the plastic for the seatbelt in back.



Step 12. Driver's Top/DT:
Tuck the hook Velcro™ into the seat and fold the seat flat. Connect the hook Velcro™ to the loop Velcro™ sewn inside the back edge. Do this by tilting the seat partway up and pulling on the fabric from behind while using your other hand in a smoothing action from top to bottom.

Passenger Top: Install using steps 5, 8, and 12.



Step 13. Armrest/A:

Fold the armrest down and slide the cover on with the hook Velcro™ to the front and the cut-out on top. Tuck the fabric under the front of the plastic for the beverage holders.



Step 14. Armrest/A:

Tuck the fabric under the back of the plastic by pulling back on the cover and going around one corner at a time. Finish by tucking the fabric under the sides.



Step 15. Armrest/A:

Use your hands in a smoothing action from the top of the armrest working your way to the bottom, removing any wrinkles. Tuck the fabric in around the hinge area on the sides. Push the hook Velcro™ in under the armrest and mate them to the loop Velcro™ sewn inside the back edge. The material should meet in back



Step 16. Headrests/H&MH:

Slide the covers on with the long hook Velcro™ to the front. You will have to compress the headrest to get the cover on. The headrest will relax to its original shape once pulled all the way down. Use your hands in a smoothing action from top to bottom. Also, manipulate the seams of the cover for the best fit. Connect the hook Velcro™ to the loop Velcro™ sewn inside the back edge.