2007-13 Toyota Crewmax Rear 60-40 Installation




Step 1. Driver and Passenger Tops/DT&PT:

Temporarily remove all three headrests by depressing the push button release and gently lifting them up evenly. All the parts of the seat cover are labeled inside. Use the Seat Cover Piece Identification Chart to ID parts.



Step 2. Headrests/H:

Slide the headrests covers on with the extending hook (sticky) Velcro™ to the front. Mate them to the loop (fuzzy) Velcro™ sewn inside the back edge. Middle headrest: Slide the cover over the front of the headrest first, and then pull it over the back, then mate the Velcro™.

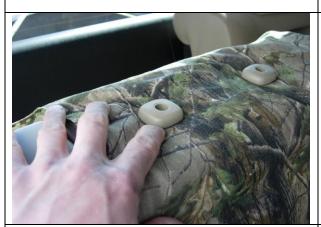

Step 3. Passenger Top/PT:

Slide the seat covers on with the extending hook Velcro™ to the front. Tuck the fabric of the seat cover under the plastic for the headrests. The seams of the seat cover should closely match the seams of your seat, so align them left or right accordingly.



Step 4. Passenger Top/PT:

Carefully tuck the front side of the seat cover in between the child restraints (silver metal loops) and the seat, don't cover the restraints. Tuck the front left and right side hook Velcro $^{\text{TM}}$ into the seat and tilt the backrest forward. Route the hook Velcro $^{\text{TM}}$ where shown to the back of the seat and mate it to the carpet.



Step 5. Passenger Top/PT:

Mate the hook Velcro[™] inside the back edge to the carpet on the back of the seat. Carefully move the seat to make sure the Velcro[™] is routed properly and does not impede the seat folding forward.



Step 6. Armrest/A:

Slide the armrest cover on with the extending hook Velcro™ and pull strap to the front.



Step 7. Armrest/A:

Tuck the hook VelcroTM under the armrest and fold it down. Mate the hook VelcroTM to the loop VelcroTM sewn inside the back edge.



Step 8. Driver Top/DT:

Open the bottom, back, and armrest area of the seat cover. Fold the armrest partway down and slide the armrest through the provided opening. Next, tuck the seat cover behind the seatbelt and wrap the cover around the left and right sides to the back of the seat. The seams of the seat cover should closely match the seams of your seat. Line up the seams of the left and right side and the armrest cavity.



Step 9. Driver Top/DT:

Tuck the fabric under the plastic for the headrests and the seatbelt.



Step 10. Driver Top/DT:

Tuck the two extending hook Velcro™ under the armrest and fold the armrest down.



Step 11. Driver Top/DT:

Mate the two extending hook Velcro™ to this loop Velcro™ in the back of the cavity, tilting the armrest slightly up for better access.



Step 12. Driver Top/DT:

Fold the backrest down and mate the Velcro™ starting at the top behind the seatbelt moving down a few inches at a time. Then mate the hook Velcro™ sewn inside the back edge to the carpet.




Step 13. Driver Top/DT:

Similar to Step 4, carefully tuck the front of the seat cover in keeping the silver metal child restraints exposed. Mate the two middle extending hook Velcro™ straight back to the carpet fuzz on the inside of the back panel around the cut out in the plastic. Same as Step 4, mate the remaining left and right front hook Velcro™ to the carpet on the back of the seat.



Step 14. Driver & Passenger Bottoms/DB&PB:

Put the seat covers on with the long hook Velcro[™] to the front. Tuck the back edge into the seat and route the long hook Velcro[™] under the front seat mating them to the loop Velcro[™] sewn on the back edge. Route the left and right side hook Velcro[™] at an angle to the loop Velcro[™] in back. Use one hand in a smoothing action from front to back along the sides of the seat while mating the Velcro[™].

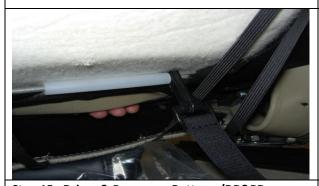

Step 15. Driver & Passenger Bottoms/DB&PB:

View from under the front of the passenger seat looking back. Clip the seat anchor (1"X6" hook Velcro™ with the plastic hook sewn to it) to the metal bar under the back of the seat next to the white plastic, mating them to the loop fastener on back.



Congratulations, you're done!

They take a good effort to get them on, but they'll stay in place and give you several years of use.

For video instruction, visit this link: https://youtu.be/VTHszBAhFek