

2014-2021 Tundra Double Cab 60/40 Rear Install



Step 1. Headrests/H:

All the parts of the seat cover are labeled inside. Use the seat cover piece identification chart to ID parts.

Temporarily remove all three headrests by lifting up and depressing the push button release until they come out. Slide the headrest covers on with the extending hook (sticky) Velcro™ to the front. You will have to compress the sides of the headrest to get the cover on. The headrest will relax back once the cover is pulled down all the way.




Step 2. Headrests/H:

Connect the hook Velcro™ to the loop (fuzzy) Velcro™ sewn inside the back edge.



Step 3. Driver's Top/DT:

Lift the seat bottoms up to pull the backrest away from the back of the cab. Slide the seat cover on with the holes for the headrests on top and tuck the cover behind the seatbelt. Slide the long Velcro™ behind the seat with the seat bottoms tipped up.

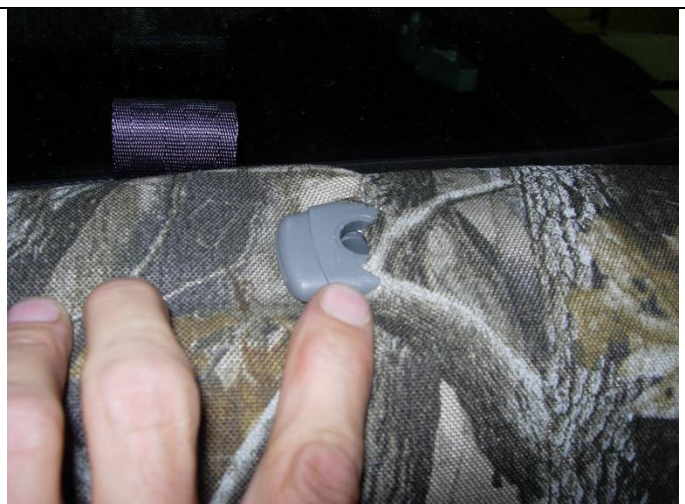

Step 4. Driver & Passenger Top/DT&PT:

Tuck the fabric behind the seat and under the plastic for the headrests starting with the push button side.



Step 5. Driver & Passenger Top/DT&PT:

Tuck the bottom edge of the seat cover into the seat, and tuck the sides of the seat cover into the hinge area. Route the long left and right hook Velcro™ around the back corner of the seat and connect them to the loop Velcro™ sewn inside left and right side (shown). Keep the seat bottoms up and feel up behind the seat for the long hook Velcro™ from the top. Pull them tight and tuck them under the front edge, connecting them to the front loop Velcro™ sewn inside the front edge. Install the headrests back into the seats.



Step 6. Driver and Passenger Bottoms/DB&PB:

Tilt the seat bottoms up slightly. Slide the seat cover on with the holes for the seat belts on top. Feed the seatbelts through the provided openings and tuck the back edge in.




Step 7. Driver and Passenger Bottoms/DB&PB: Tuck the fabric under the plastic of the seat release. The fabric only tucks in on the top and ¾ of the way down both sides. Plastic studs close to the edge keep you from tucking it.



Step 8. Driver and Passenger Bottoms/DB&PB:

Fold the seat all the way up into the backrest. Connect the hook Velcro™ sewn inside the bottom edge to the carpet on the bottom of the seat as shown.

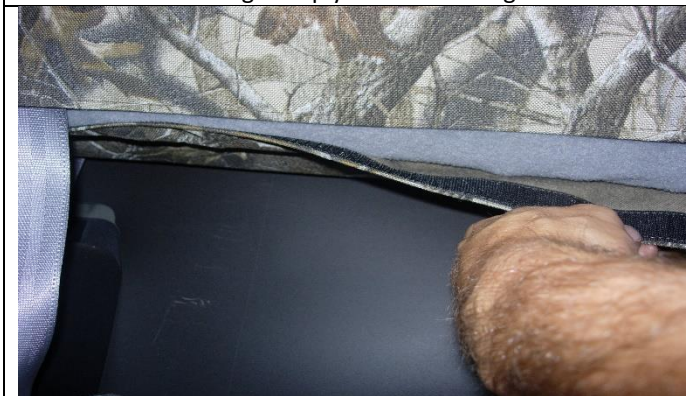

Step 9. Driver and Passenger Bottoms/DB&PB:

Pull the back edge forward and press it onto the carpet on the back edge of the seat. Some repositioning of the Velcro™ may be necessary for the best fit.



Congratulations you're done. This seat cover will stay put and handle anything you can dish out. This seat is covered in Realtree Hardwoods HD™