

2022-2024 Tundra Crewmax Rear Installation




Step 1. Headrests/H:

The installation is on our YouTube channel:
<https://www.youtube.com/watch?v=5nA0FSrgrVI>
All the parts of the seat cover are labeled inside the cover. Use the seat cover Part ID Chart to ID parts. Slide the headrest covers on with the long hook (sticky) Velcro™ to the front while the headrests are still on the seat.



Step 2. Headrests/H:

Line up the seams of the seat cover to the seams of the headrest, they should closely match. Tuck the front hook Velcro™ under the back edge and press the Velcro™ together.

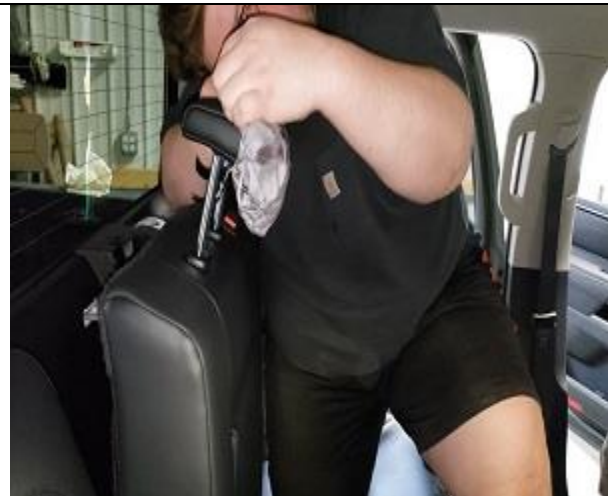

Step 3. Middle Headrest/MH:

The middle headrest installs the same way, the difference is you slide it over the front first, then the back.



Step 4. Driver & Passenger Bottoms/DB&PB:

Lift the seat bottoms up partway and slide the seat cover on with extending Velcro™ on top. Turn the Velcro™ on the bottom of the seat inside out to keep it from sticking while you pull it down into position.




Step 5. Driver & Passenger Bottoms/DB&PB:
With the seat bottoms partway up, tuck in the top side. As in Step 2, line up the seams of the seat cover to the seams on the seat, they should closely match.



Step 6. Driver & Passenger Bottoms/DB&PB:
While pulling on the back edge of the seat cover, use one hand in a smoothing action down the top side of the seat smoothing and tightening the seat cover. Lastly, press the hook Velcro™ to the fuzzy carpet under the seat.



Step 7. Driver & Passenger Bottoms/DB&PB:
Pull down on the underside of the cover, then press the hook Velcro™ to the fuzzy carpet under the seat.

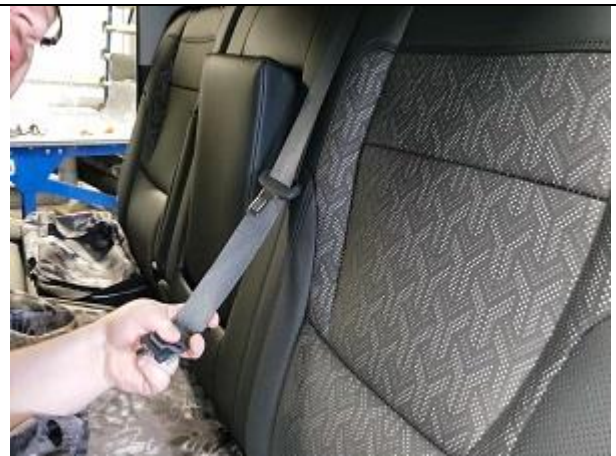

Step 8. Driver Top/DT:
Temporarily disconnect the middle seatbelt by depressing the little grey button.



Step 9. Driver & Passenger Top/DT&PT:
Slide the seat cover over the backrest.



Step 10. Driver Top/DT:
Fold the armrest down before pulling the cover all the way down.



Step 11. Driver Top/DT:
Route the tab to release the backrest through the provided hole.



Step 12. Driver & Passenger Top/DT&PT:
Tuck the fabric under the plastic for the headrests as shown.



Step 13. Driver Top/DT:
Tuck the fabric under the middle headrest plastic by starting on the push button side first.



Step 14. Driver & Passenger Top/DT&PT:
Tuck the front side in, then fold the backrest down.



Step 15. Driver & Passenger Top/DT&PT:
Working from one side to the other, using the same smoothing method as Step 6, press the hook Velcro™ to the fuzzy carpet behind the seat.



Step 16. Driver & Passenger Top/DT&PT:
Lastly, pull the back edge down and press the Velcro™ to the fuzzy carpet as shown.



Step 17. Driver Top/DT:
Tuck the fabric under the armrest.



Step 18. Driver Top/DT:
Fold the armrest down and connect the Velcro™ behind the armrest.



Step 19. Driver Top/DT:
After the Velcro™ is connected, lift the arm up and check your corners. Make sure the bottom corners of the armrest cavity are clear of the armrest.



Step 20. Armrest/A:
With the armrest partway folded down, slide the cover on with the opening for the drink holders to the top.



Step 21. Armrest/A:

Once the cover is lined up left and right and pulled down onto position, tuck material under the plastic of the drink holder's one corner at a time.



Step 22. Armrest/A:

Lift the armrest up and tuck the bottom in.



Step 23. Armrest/A:

The clearance under the armrest is tight. Using one hand, hold the front of the cover in place while using the other hand to press the Velcro™ together.