

2000-2002 Tahoe Middle 60-40 Installation



Step 1. Headrests:

Temporarily remove the headrests by inserting a heavy paper clip, or coat hanger sized wire into the holes in the plastic while gently lifting up.



Step 2. Headrests:

Headrest should remove as shown. All the parts of the seat covers are abbreviated inside. Use the seat cover piece identification chart to ID parts.



Step 3. Headrests/H:

Slide the headrest cover on with the extending hook (sticky) Velcro™ to the front. Line up the seams of the cover to the seams of the headrest, they should match closely.



Step 4. Headrests/H:

Tuck the cover under the plastic and mate the hook Velcro™ to the loop (fuzzy) Velcro™ in back.



Step 5. Driver & Passenger Cargo Flaps/DCF&PCF:



Step 6. Passenger Top/PT:

Place the covers by lining up the edges and pressing the Velcro™ onto the carpet.



Slide the cover on with the extending hook Velcro™ to the front. Slide the headrest posts through the provided slots.



Step 7. Passenger Top/PT:

Turn the back side of the cover inside out and slide it all the way down. This way the Velcro™ won't stick to the carpet and stop you from pulling it down.

Step 8. Passenger Top/PT:

Line up the seams of the cover to the seams of the seat same as Step 3, they should match closely. Form the covers to the top of the seat, and manipulate the fabric outward around the corners from thumb to forefinger.



Step 9. Passenger Top/PT:

Connect the vertical Velcro™ on the inside back edge.



Step 10. Passenger Top/PT:


Pull the front down and tuck the hook Velcro™ in.



Step 11. Passenger Top/PT:
Fold the seat down and, pull and tighten the Velcro™ and mate press to the carpet on the seat back.




Step 12. Passenger Top/PT:
Press the Velcro™ to the carpet on the back of the seat.

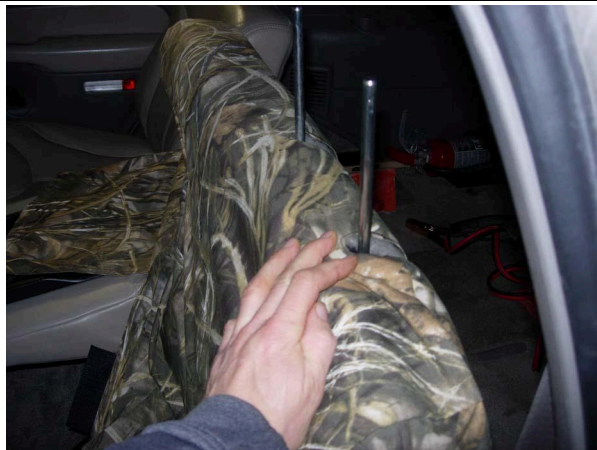

Step 13. Driver Top/DT:
As in Step 6, slide the headrest posts through the provided slots, open the armrest cavity of the seat cover and slide it into position.



Step 14. Driver Top/DT:
Tuck the seat cover in next to the armrest.

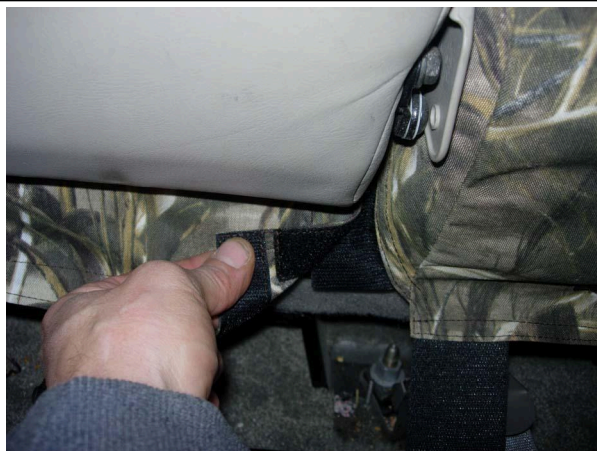

Step 15. Driver Top/DT:
Connect the Velcro™ under the armrest on left & right.



Step 16. Driver Top/DT:
Push the armrest in, and press the remaining hook Velcro™ to the carpet in the armrest cavity.



Step 17. Driver Top/DT:
Pull the front outside edge down and press the hook Velcro™ to the carpet.



Step 18. Driver Top/DT:
Connect the rear Velcro™ same as Step 12.



Step 19. Driver Top/DT:
Slide the seat belts through the elastic.



Step 20. Driver & Passenger Bottom/DB&PB:
Slide the cover on with the seat release tab in back.



Step 21. Driver & Passenger Bottom/DB&PB:
Line up the seams as in Steps 3&8, and press the hook Velcro™ to the carpet under the seat as shown.



Step 22. Armrest/A:
Tuck the cover under the plastic as shown.



Step 23. Armrest/A:
Tuck the fabric under the plastic tray.



Step 24. Armrest/A:
Mate the Velcro™ at the back of the armrest.