

# 2000-02 Tahoe XL Middle Seat 60-40 Installation



## Step 1. Driver & Passenger Top/DT&PT:

Temporarily remove the headrests by lifting them up all the way. Insert a coat hanger sized wire into the holes in the plastic, one side at a time, while holding gentle upward pressure until you feel the headrest release.



## Step 2. Driver & Passenger Top/DT:

All the parts of the seat cover are labeled inside. Use the seat cover piece identification chart to ID parts. Slide the seat covers with the extending hook (sticky) Velcro™ to the front (shown).

**Passenger Top/PT:** Be sure to open the inside edge of the seat cover before sliding it on. See step 7.



## Step 3. Driver & Passenger Top/DT&PT:

Tuck the fabric under the plastic for the headrests. Next, line up the seams of the seat cover to the seams of the seat, they should match closely.




## Step 4. Driver Top/DT:

Tuck the material behind the armrest.



## Step 5. Driver Top/DT:

Connect the Velcro™ under the left side of the armrest, then press the hook Velcro™ to the fuzzy carpet at the bottom.

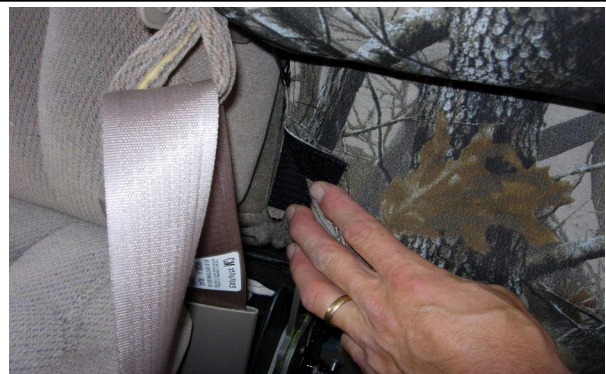

## Step 6. Driver Top/DT:

Connect the Velcro™ under the right side of the armrest.





**Step 7. Passenger Top/PT:**

Connect the Velcro™ on the inside back edge of the passenger seat with the seat folded down.



**Step 8. Driver & Passenger Top/DT&PT:**

Use one hand in a smoothing action down the front of the seats while pulling on the hook Velcro™ from the back, pressing them to the fuzzy carpet on the seat.



**Step 9. Driver & Passenger Cargo Flap/DCF&PCF:**

Slide the covers on with the hook Velcro™ turned inside out, pull them all the way down and press the Velcro™ to the carpet.



**Step 10. Driver & Passenger Bottom/DB&PB:**

Find the small cut out for the seat release strap and feed the strap through it. Again, line up the seams of the seat cover to the seams on the seat. Work the fabric inside the seat cover from forefinger to thumb around the sides and front of the seat cover.



**Step 11. Driver & Passenger Bottom/DB&PB:**

Press the hook Velcro™ to the fuzzy carpet under the seat bottom. Do this by starting in the front and center, then working back on both sides. Then as in step 8, use one hand in smoothing action from front to back while gently pulling on the Velcro™, then pressing the hook Velcro™ to the carpet.



**Step 12. Armrest/A:**

Slide the armrest cover on with the extending hook Velcro™ to the front and the cut-out for the drink holders on top. Tuck the cover behind the front of the plastic, making sure the strap is outside the cover.



**Step 13. Armrest/A:**

Tuck the cover behind the back of the plastic tray one corner at a time,



**Step 14. Armrest/A:**

Line up the seams of the armrest as in earlier steps, making sure the armrest hinges are clear. While pulling material and the hook Velcro™ from the back, use the other hand in a smoothing action from top to bottom, connecting the Velcro™ from one side to the other.



**Step 15. Headrests/H:**

Slide the cover on with the extending hook Velcro™ to the front. Line up the seams as in earlier steps, then connect the hook Velcro™ to the loop Velcro™ sewn inside the back edge.