

# 1981-1994 Toyota 2WD Bench



Step 1. The seat can be easily removed to help make the seat cover more easy to put on, but not necessary. To take the seat out, remove the four # 14 metric bolts from the floor. Tilt the backrest forward and lift the back edge of the seat up, and slide the seat belts through the holes in the seat bottom and remove the seat from the cab. Top: Slide the seat cover on with the long hook straps to the front as shown.



Step 2. Top: Use both hands to work the built in headrest part of the seat cover down all the way. Tilt the backrest forward and tuck the hook straps into the seat. Make sure you route them in between the backrest release bar and the seat as shown. Mate the hook fasteners to the loop strip sewn inside the back of the seat cover. Be careful to not get the straps too tight because they can indent the foam on the seat indefinitely.



Step 3. Bottom: Place the seat cover on with the long hook straps to the front as shown, line up the holes for the seat belts, and tuck the back of the seat cover in. Make sure the seat cover goes in between the seat bottom and the seat release bar.



Step 4. Bottom: Route the straps under the seat and mate them to the rear loop strip as shown. Note: the outside left and right straps are routed between the seat adjustment cable and the seat. The remaining straps go over the top of the cable.



Step 5. Bottom: Slide the long front outside edge hook straps in between the seat and the seat slide as shown.




Step 6. Bottom: Tuck the long rear outside edge hook strap behind the metal bar that tilts the backrest forward and behind the seat slide. Mate them to the rear loop strip as shown.



Step 7. Bottom: Route the side ropes under the seat to a support wire as shown and tie back to the loop where the rope was sewn on. If you feel the edge of the metal is sharp where the rope comes across it, slide a short piece of plastic tubing over the rope to protect it from being cut.



Step 8. Bottom: Cut off the excess rope and carefully singe the cut. Do this by heating the cut up with a lighter and blow it out as soon as it flames up. This will keep the rope from unraveling if the seat cover is washed and re-installed.

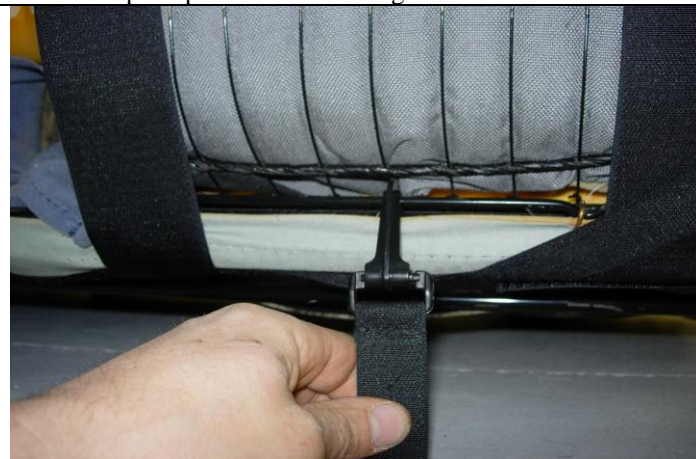

Step 9. Bottom: Fasten the black plastic hook with the hook fastener sewn on it to the bar under the seat that the upholstery is hog-ringed to. Mate the strap to the loop strip sewn on the back edge. This will keep the seat cover from shifting around.



Congratulations, you are done! Your seat covers will stay in place and are ready for any abuse you can dish out. Pictured is Realtree Hardwoods™ HD 1000 Denier Cordura. They fit like they are painted on.