

2004-09 Dodge Buckets w/ Cloth Flap Installation

Items needed for the installation: Scissors, Phillips screwdriver, rubbing alcohol, and paper towels.



Step 1. Driver and Passenger Bottoms/DB&PB:

The parts of the seat cover are labeled inside. Use the "Seat Cover Piece Identification Chart" to identify the parts. Temporarily remove the screw from the recline lever using a Phillips screwdriver.



Step 2. Driver and Passenger Bottoms/DB&PB:

Slide the seat cover over the upholstered flap on the outside, then position the cut outs for the electric seat controls and recline lever. Electric controls only: Tuck the seat cover behind the electric control panel. Pull the outside edge of the seat cover back lining up the hole for the recline lever and press the hook (sticky) Velcro™ to the carpet on the back of the seat.




Step 3. Driver and Passenger Bottoms/DB&PB:

If you have electric seats be sure to lift the seat up as high as it will go. This will pull everything away from your seat and free up some space. Route the long hook Velcro™ under the front of the seat and mate them to the carpet on the back edge of the seat. Make sure the Velcro is routed above any wires or bars. Next, pull the inside edge of the seat cover (next to the center console) around to the back and fasten it to the carpet on the back edge.



Step 4. Driver and Passenger Bottoms/DB&PB:

Route the long inside and outside hook Velcro™ to the carpet on the back edge. Tuck the back edge of the seat cover into the seat and press the hook Velcro™ sewn inside to the carpet on the back of the seat. Adjust the fasteners to re-position and smooth out any wrinkles. Move the seat in all directions after installing to make sure the seat's action is not impeded.

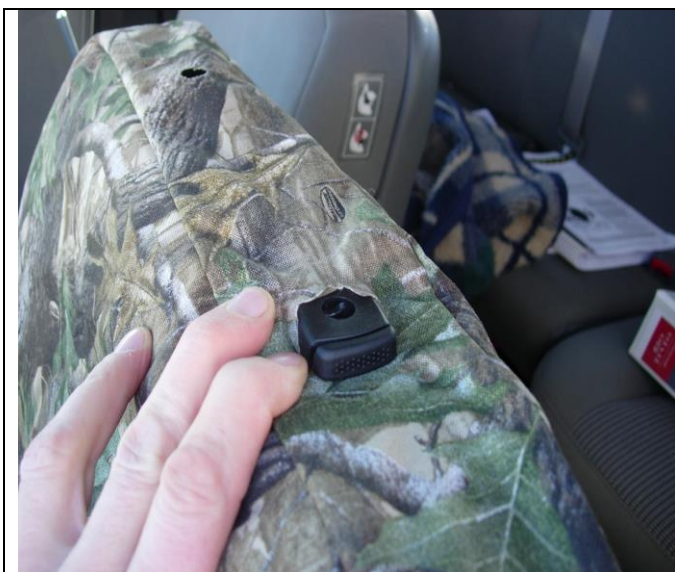

Step 5. Driver and Passenger Tops/DT&PT:

Temporarily remove the headrests by depressing the push button release and gently lifting up. Slide the seat cover on with the extending hook straps to the front. Tuck the seat cover under the plastic for the headrest starting with the push button release.



Step 6. Driver and Passenger Tops/DT&PT:

Tuck the hook Velcro™ into the seat. Line up the seams of the seat cover to the seams of your seat, they should closely match. Gently pull on the hook Velcro™ with one hand from the back while sliding your other hand down the front of the seat cover taking up the slack in the seat cover. Lastly, connect the hook Velcro™ to the loop Velcro™ sewn inside the back edge.



Step 7. Headrests/H:

Slide the headrest cover on with the hook Velcro™ to the front, connecting them to the loop Velcro™ as shown.



Step 8. Lid/L:

View of lid removed from truck (removal is not necessary for install) . Connect the Velcro™ under the lid as shown.